

Engine Relay Box (FN)			
Relay Number	Details	Loads	Schematic
RLYa	30A-1 Contact	Engine	
RLYb	30A-1 Contact	Fuel Pump	
1500-A	40A-1 Contact	Fan HS	
1500-B	30A-1 Contact	Fan LS	