

## Interior Relay Box - P6L SP MUX

| Interior Relay Box |                        |                                      |           |
|--------------------|------------------------|--------------------------------------|-----------|
| Relay Number       | Details                | Loads                                | Schematic |
| <b>RL001</b>       | 35A<br>1 Contact<br>BR | Blower<br>Heater                     |           |
| <b>RL002</b>       | 20A<br>1 Contact<br>GN | FCM & HVAC<br>POWER                  |           |
| <b>RL003</b>       | 35A<br>1 Contact<br>BR | ECO Mode                             |           |
| <b>RL004</b>       | 20A<br>1 Contact<br>GN | Mirrors and<br>Rear Screen<br>Heater |           |
| <b>RL005</b>       | 20A<br>2 Contact<br>GY | Front<br>Wash Pump                   |           |
| <b>RL006 (HB)</b>  | 20A<br>2 Contact<br>GY | Rear<br>Wash Pump                    |           |

## Interior Relay Box - P6L SP MUX

|                   |                        |                           |  |
|-------------------|------------------------|---------------------------|--|
| <b>RL007</b>      | 35A<br>1 Contact<br>BR | Front<br>Window<br>Winder |  |
| <b>RL008</b>      | 35A<br>1 Contact<br>BR | Rear<br>Window<br>Winder  |  |
| <b>RL009 (HB)</b> | 20A<br>1 Contact<br>GY | Rear<br>Wiper Motor       |  |
| <b>RL010</b>      | 20A<br>2 Contact<br>GY | Master<br>Unlock          |  |
| <b>RL011</b>      | 20A<br>2 Contact<br>GY | Master<br>Lock            |  |