

FUEL GUAGE – VANET EURO 2

شرح	کد
باتري	BB00
جعبه فيوز اصلي	BF00
سوئيچ	SW00
پشت آمپر	0004
پمپ بنزين	4310

دیجیتال خودرو
digital khodro

The diagram illustrates the electrical system of a vehicle, featuring the following components and connections:

- Battery (E000):** A 12V battery with terminals BB00 (+) and BB01 (-).
- Alternator (E01):** An alternator with terminals 12, 92, and 1C2A, connected to the battery via a diode (M001).
- Fuse Block (BF00):** Contains fuses F2 and F7. Terminal 2A is connected to the battery (+), and terminal 7B is connected to the instrument cluster (0004).
- Instrument Cluster (0004):** Includes a gauge (0 to 1 1/2), a fuel pump icon, and a connector. It is connected to the battery (+) via terminal 15 and to the fuse block (BF00) via terminal 9.
- Horn (SW00):** A horn with terminals 1, 35, and 67, connected to the battery (+) via terminal 1 and to the fuse block (BF00) via terminal 35.
- Other Components:** A component labeled IC01A is connected to the battery (+) via terminal 15 and to the instrument cluster (0004) via terminal 9.