

Horn– Dena ECO MUX

شرح	کد
باتري	BB00
جعبه فيوز داخل محفظه موتور	BF00
نود مرکزی داخل اتاق	BCM
دسته راهنما	0002
رله بوق	RB001
بوق چپ	2520A
بوق راست	2520B

--	--

The diagram illustrates the electrical system for a vehicle, featuring the following components and connections:

- Battery (BB00):** Connected to the ground (E000) and the positive terminal (BB00).
- Fuse Block (BF00):** Contains fuses F2 and F3. It is connected to the battery (BB00) and the relay box (RB001).
- Relay Box (RB001):** Contains relays 10W BK, 5A, 4A, 3A, 1A, and 2A. It is connected to the fuse block (BF00) and the BCM (BCM).
- BCM (BCM):** The Body Control Module, which controls various electrical components. It is connected to the relay box (RB001) and the BCM (BCM).
- Speakers (2520A and 2520B):** Connected to the relay box (RB001) and the BCM (BCM).
- BCM (BCM):** The Body Control Module, which controls various electrical components. It is connected to the relay box (RB001) and the BCM (BCM).
- BCM (BCM):** The Body Control Module, which controls various electrical components. It is connected to the relay box (RB001) and the BCM (BCM).