



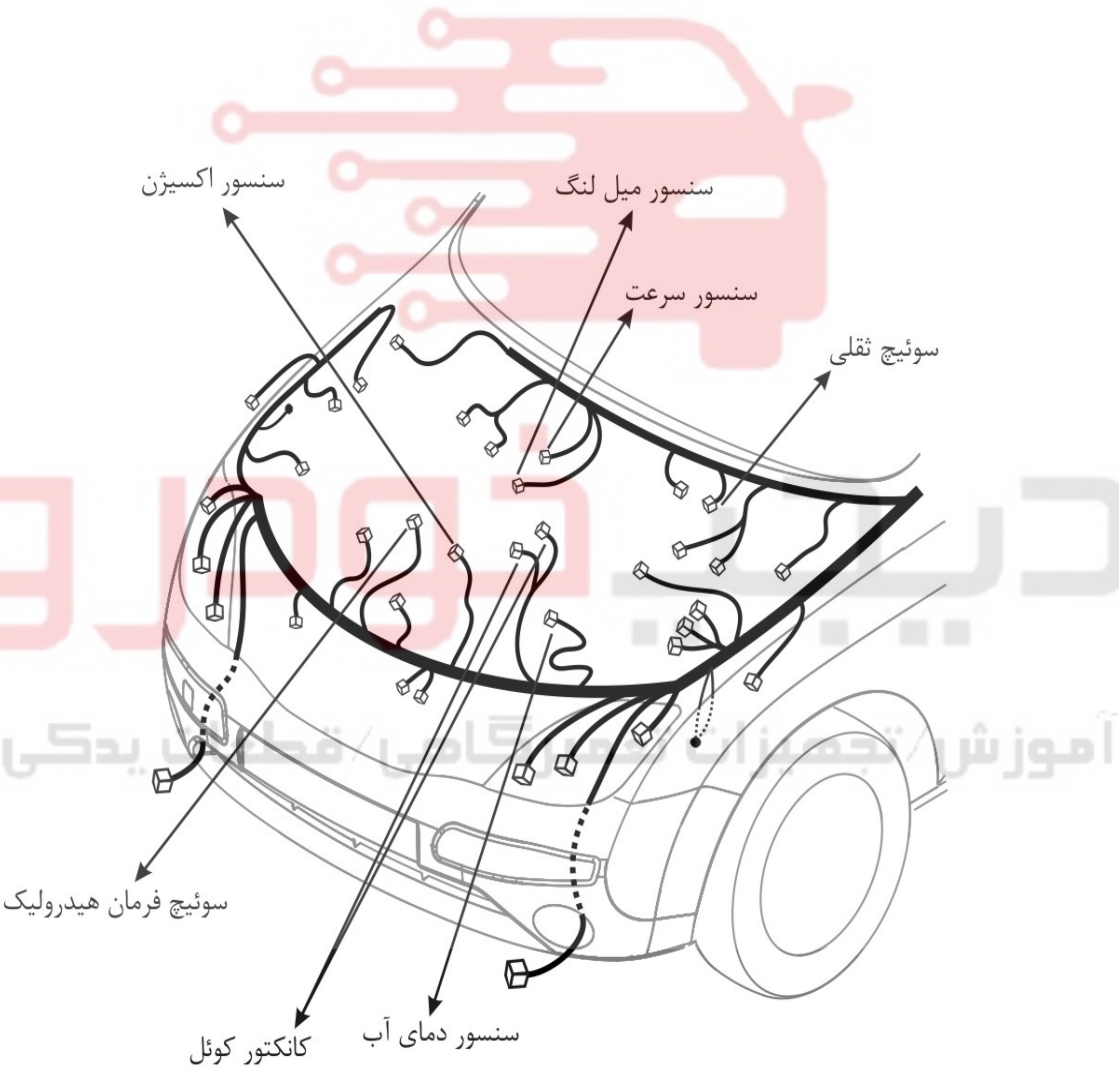

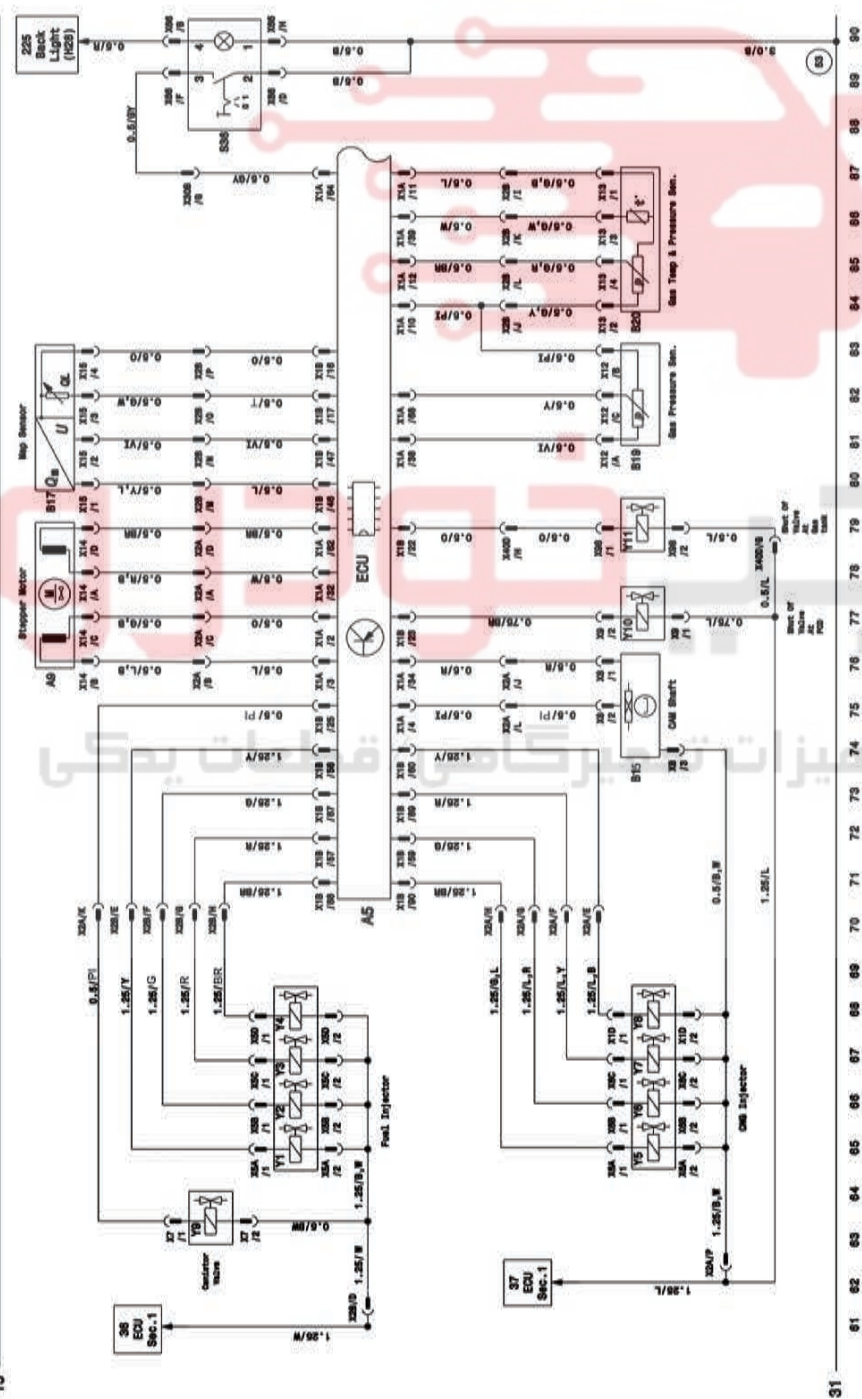



ID CODE	DEVICE CONNECTION	DEVICE IDENTIFICATION
506	206	Change Over W. (F/L)
A5	X1	ESD SPS (S)
A9	X14	Stopper Motor 4F(S)
B17	X15	Map Sensor
B18	B0	Gas Shift Position Sensor 2F(S)
B19	X12	Gas Pressure Sensor 2F(S)
B20	X13	Gas Temp & Pressure Sensor
11(1,2,3,4)		Fuel Injector 2F(S)
15(15,6,7,8)		Gas (O ₂) Injector 2F(S)
Y9	X7	Gasoline Valve 2F(S)
Y10	X8	Start of Valve At VSP 2F(S)
Y11	X9	Start of Valve At Gas Tank 2F(S)
--	X2A	Main To Injector W/H Connector 16M(SF)
--	X2B	Main To Injector W/H Connector 16F(SF)
--	X206	Inter Connector 12M W/H 16W/H
--	X400	(O ₂ ,AIR)-Inter Connector Near W/H 16W/H
CONNECTION		***Location of Ground***
50	--	Earth Point (SS)

X13 مستورد نما و شلر گلد	X15 MAP SENSOR	X7 مستورد شلر گلد	X98 تبرطع کس
X66 تبرطع کس	X5 تبرطع شلر گلد	X14 موتور پله ای	X9 تبرطع کس

