

Stability Control (Without Brake Central Unit Supply Relay)


item code	description	information
0004	null	/ instrument panel
1630	null	/ automatic gearbox ECU
4410	null	brake fluid level switch
70B2	null	braking system supply relay
7800	null	calculateur controle de stabilite
7801	null	ESP cut-off switch
7810	null	front left wheel speed sensor
7815	null	front right wheel speed sensor
7820	null	rear left wheel speed sensor
7825	null	rear right wheel speed sensor
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E265	null	crimp one information (or equipotential 265) wire
E806B	null	crimp one information (or equipotential 806B) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EC12A	null	splice of an "ignition +" protected by fuse no. 12
EM11A	null	crimp earth (earth point number 11A)
EM35B	null	crimp earth (earth point number 35B)
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC14A	null	body earth point number 14
MC35	null	body earth point number 35
MM01A	null	engine earth point number 01A

[illegible]

Stability Control (With Brake Central Unit Supply Relay)

item code	description	information
0004	null	/ instrument panel
1630	null	/ automatic gearbox ECU
4410	null	brake fluid level switch
70B2	null	braking system supply relay
7800	null	calculateur controle de stabilite
7801	null	ESP cut-off switch
7810	null	front left wheel speed sensor
7815	null	front right wheel speed sensor
7820	null	rear left wheel speed sensor
7825	null	rear right wheel speed sensor
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E265	null	crimp one information (or equipotential 265) wire
E806B	null	crimp one information (or equipotential 806B) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EC12A	null	splice of an "ignition +" protected by fuse no. 12
EM11A	null	crimp earth (earth point number 11A)
EM35B	null	crimp earth (earth point number 35B)
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC14A	null	body earth point number 14
MC35	null	body earth point number 35
MM01A	null	engine earth point number 01A


Cruise Control/Speed Limiter

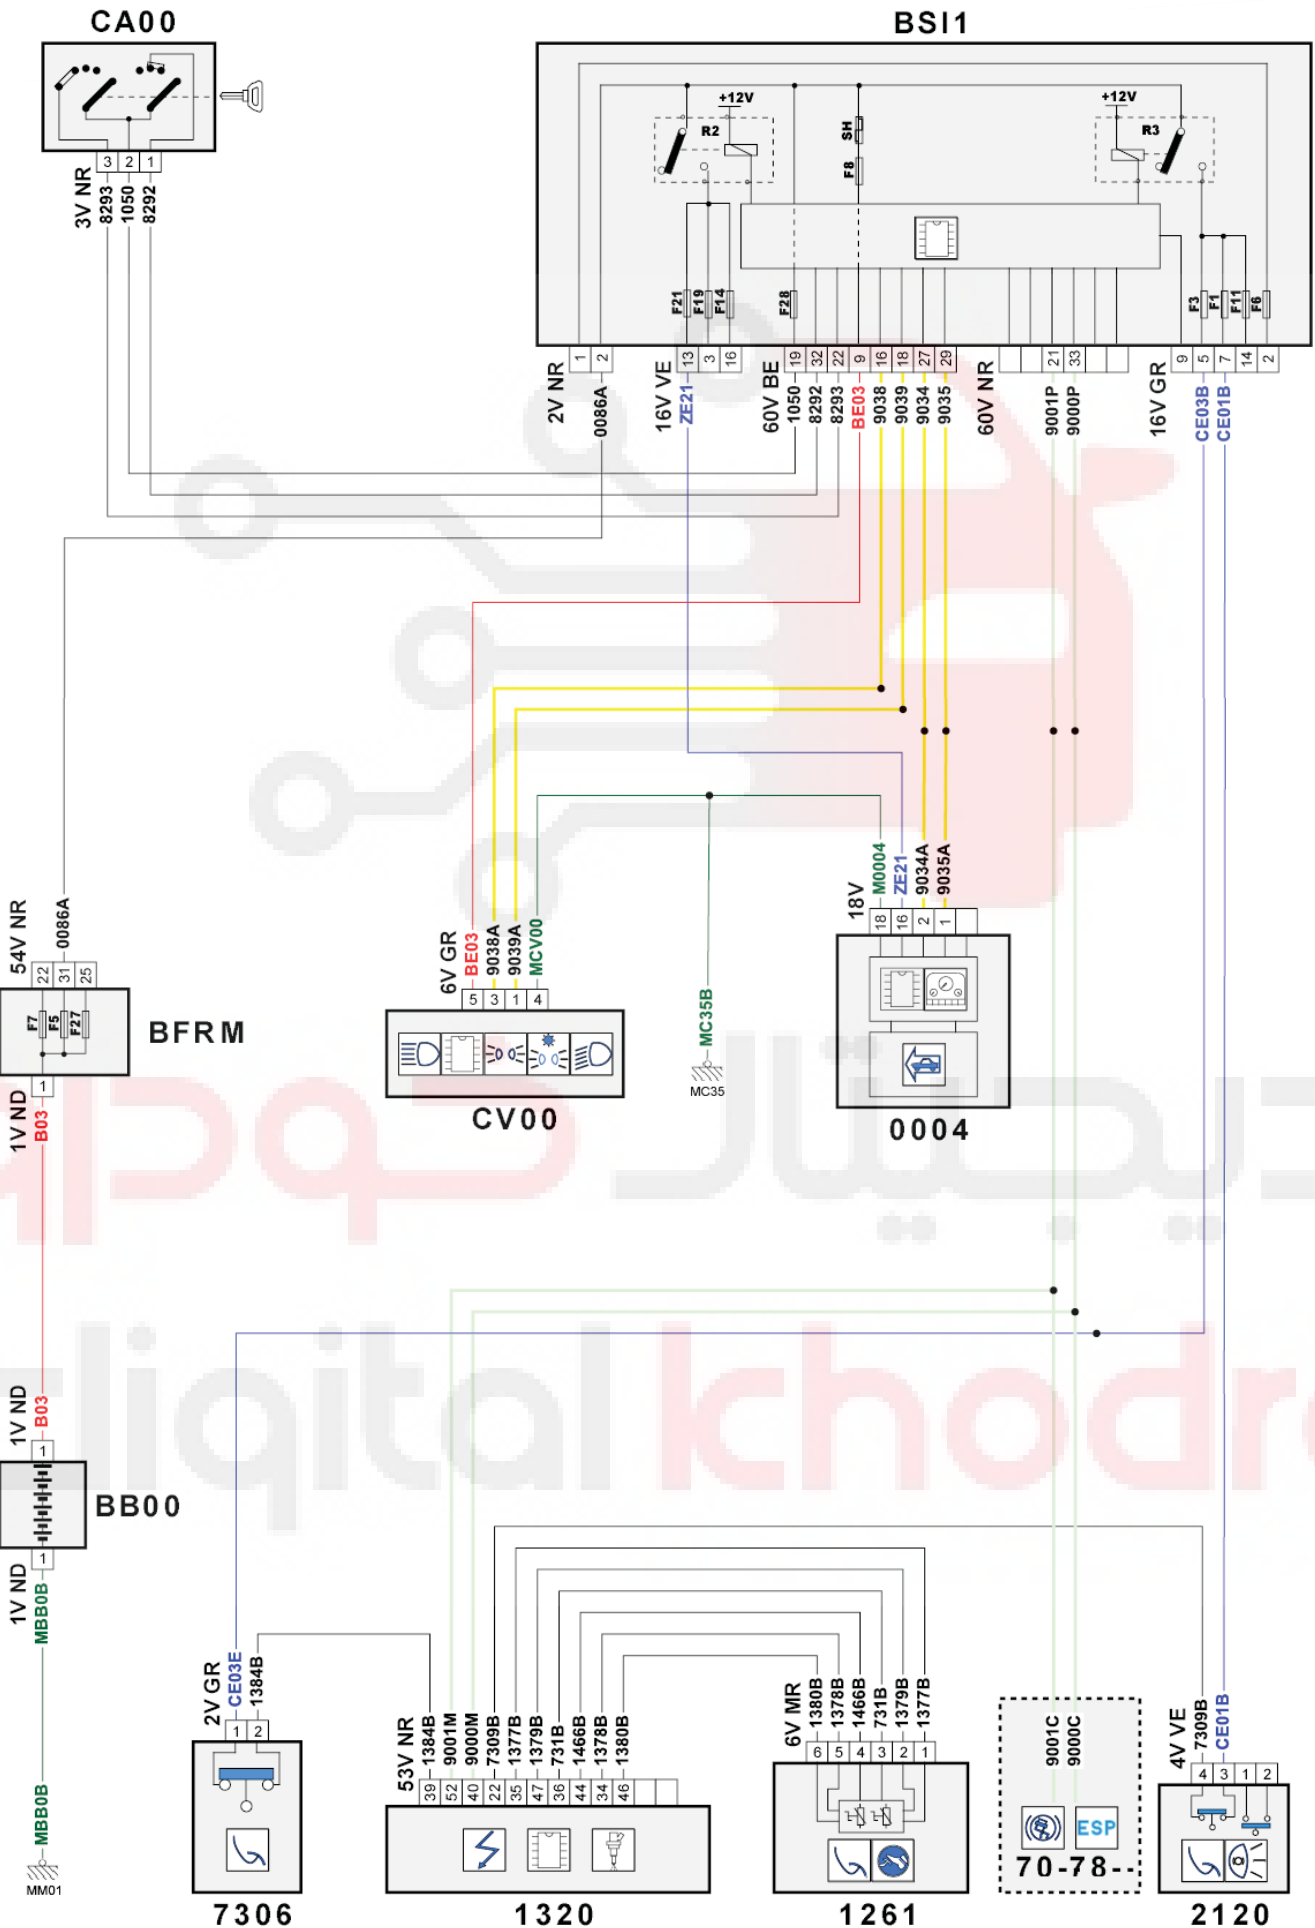

Cruise Control/Speed Limiter

item code	description	information
0004	null	/ instrument panel
1261	null	accelerator pedal position sensor /
1320	null	engine ECU /
2120	null	dual function brake switch /
7306	null	cruise control safety switch (clutch)
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EC03A	null	splice of an "ignition +" protected by fuse no. 03A
EM35B	null	crimp earth (earth point number 35B)
MC35	null	body earth point number 35
MM01	null	engine earth point number 01


Cruise Control/Speed Limiter

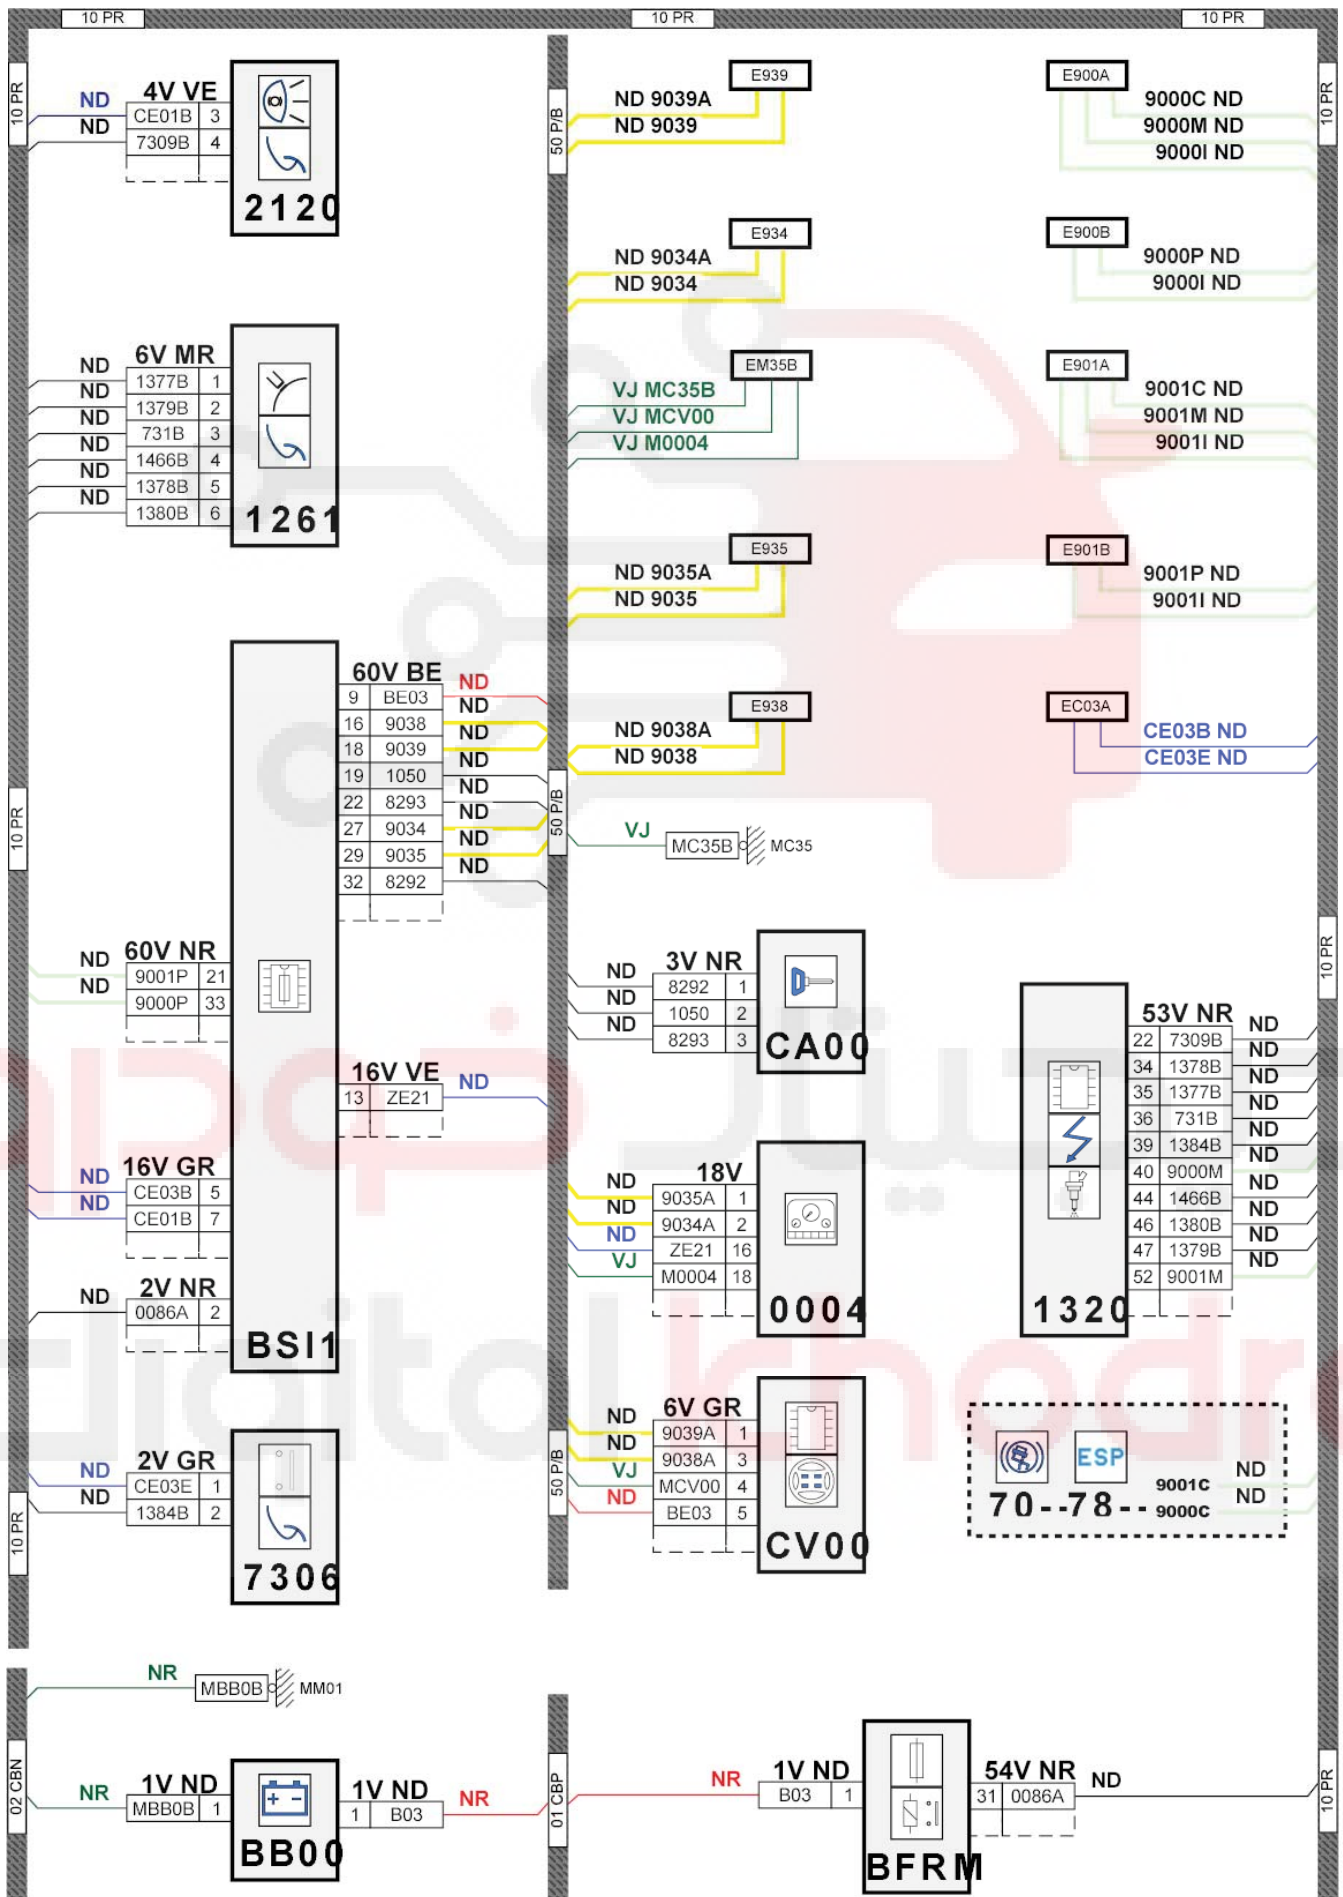

Cruise Control/Speed Limiter


item code	description	information
0004	null	/ instrument panel
1261	null	accelerator pedal position sensor /
1320	null	engine ECU /
2120	null	dual function brake switch /
7306	null	cruise control safety switch (clutch)
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EC03A	null	splice of an "ignition +" protected by fuse no. 03A
EM35B	null	crimp earth (earth point number 35B)
MC35	null	body earth point number 35
MM01	null	engine earth point number 01

Parking Assistance

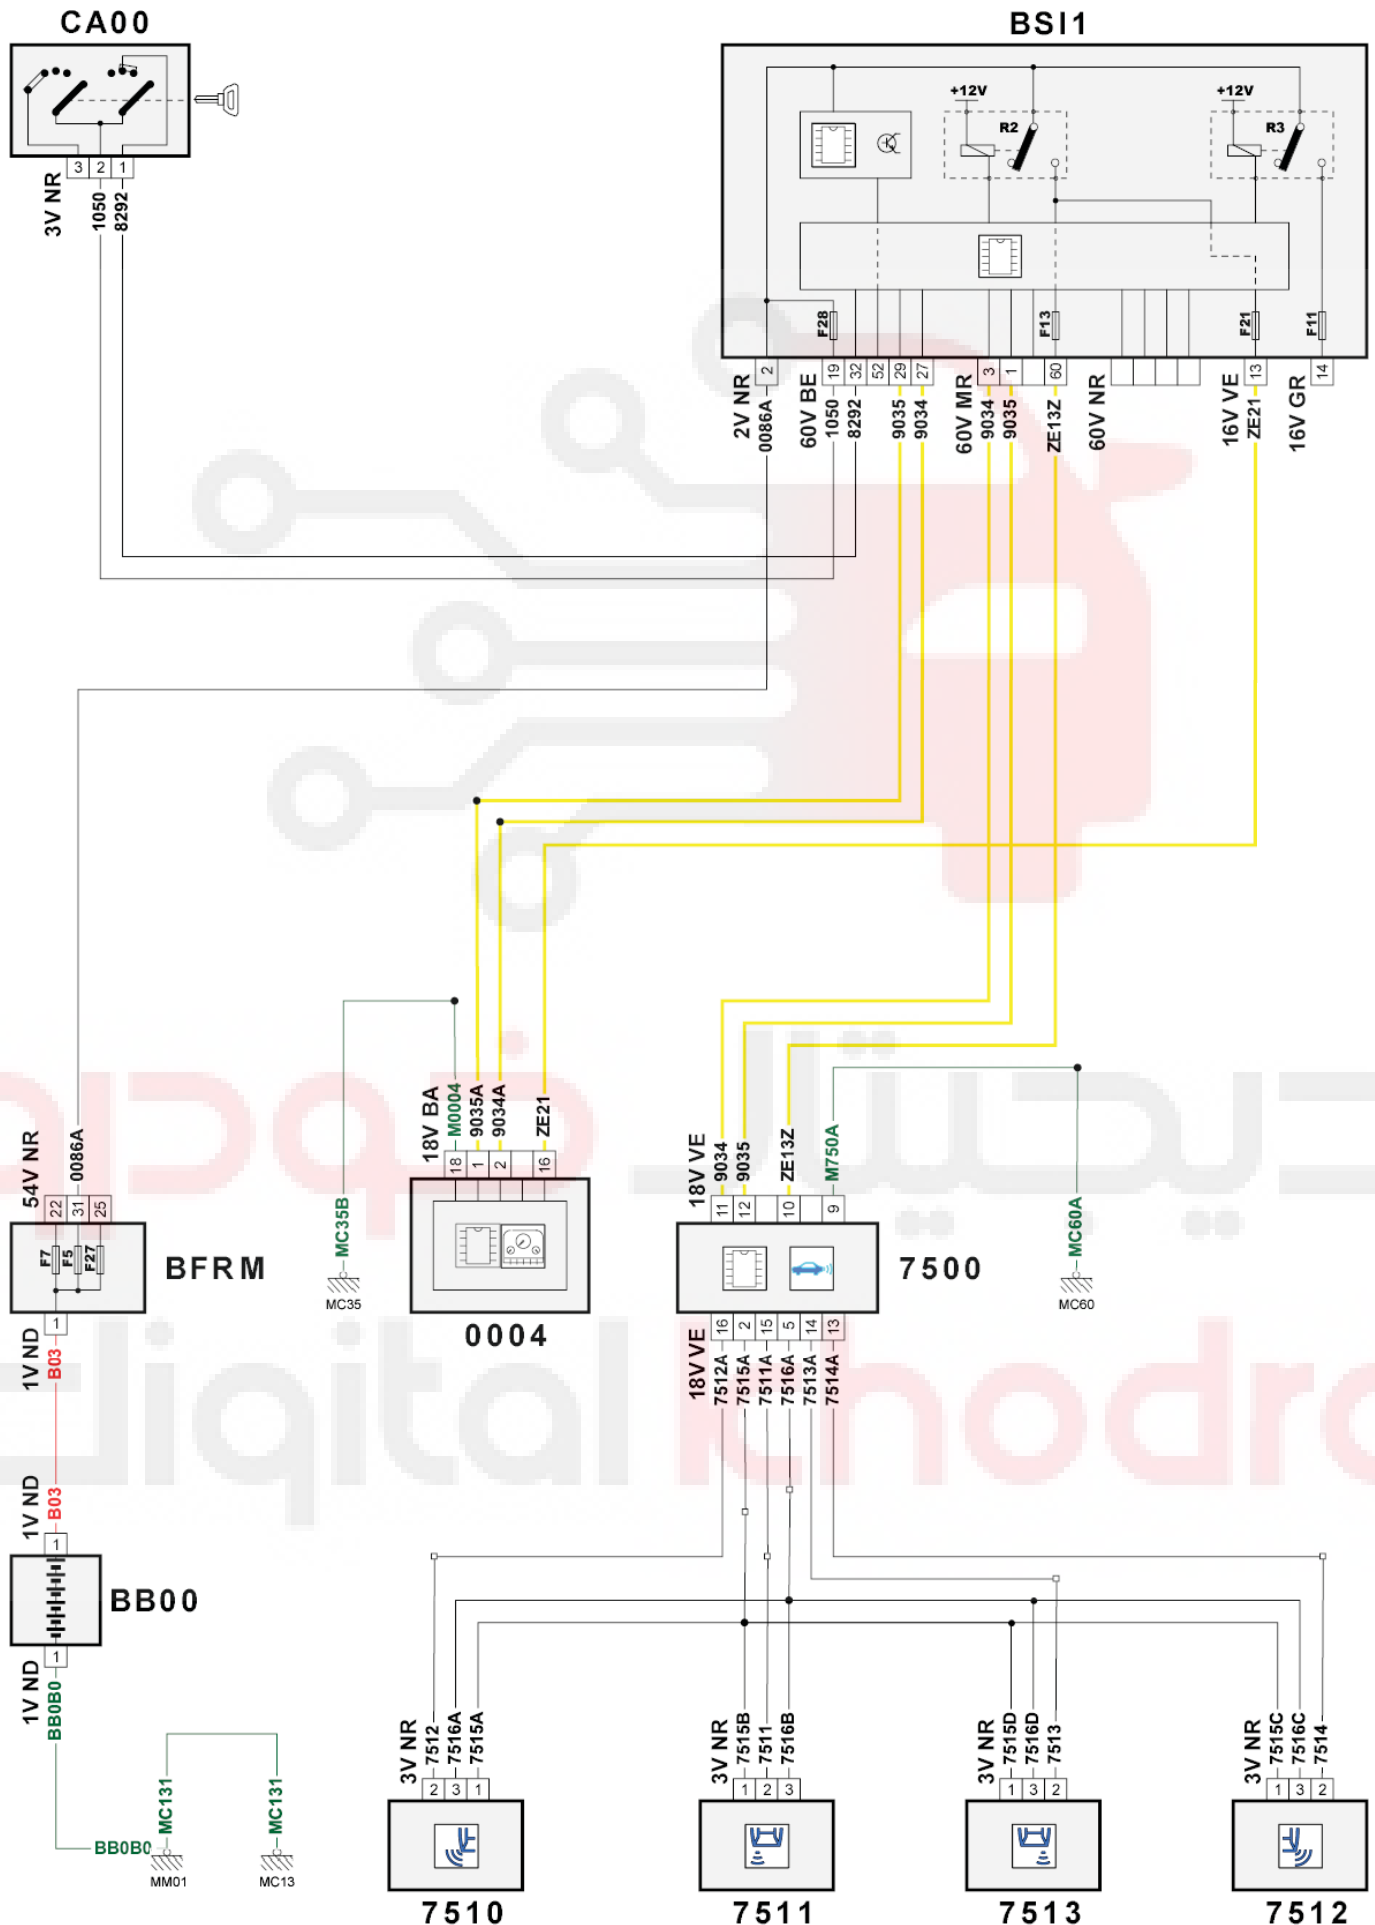

Parking Assistance


item code	description	information
0004	null	/ instrument panel
7500	null	Parking assistance ECU
7510	null	rear left outer parking assistance sensor /
7511	null	rear left inner parking assistance sensor /
7512	null	rear right outer parking assistance sensor /
7513	null	rear right inner parking assistance sensor /
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E755	null	crimp one information (or equipotential 755) wire
E756	null	crimp one information (or equipotential 756) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM35B	null	crimp earth (earth point number 35B)
EM60A	null	crimp earth (earth point number 60A)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01

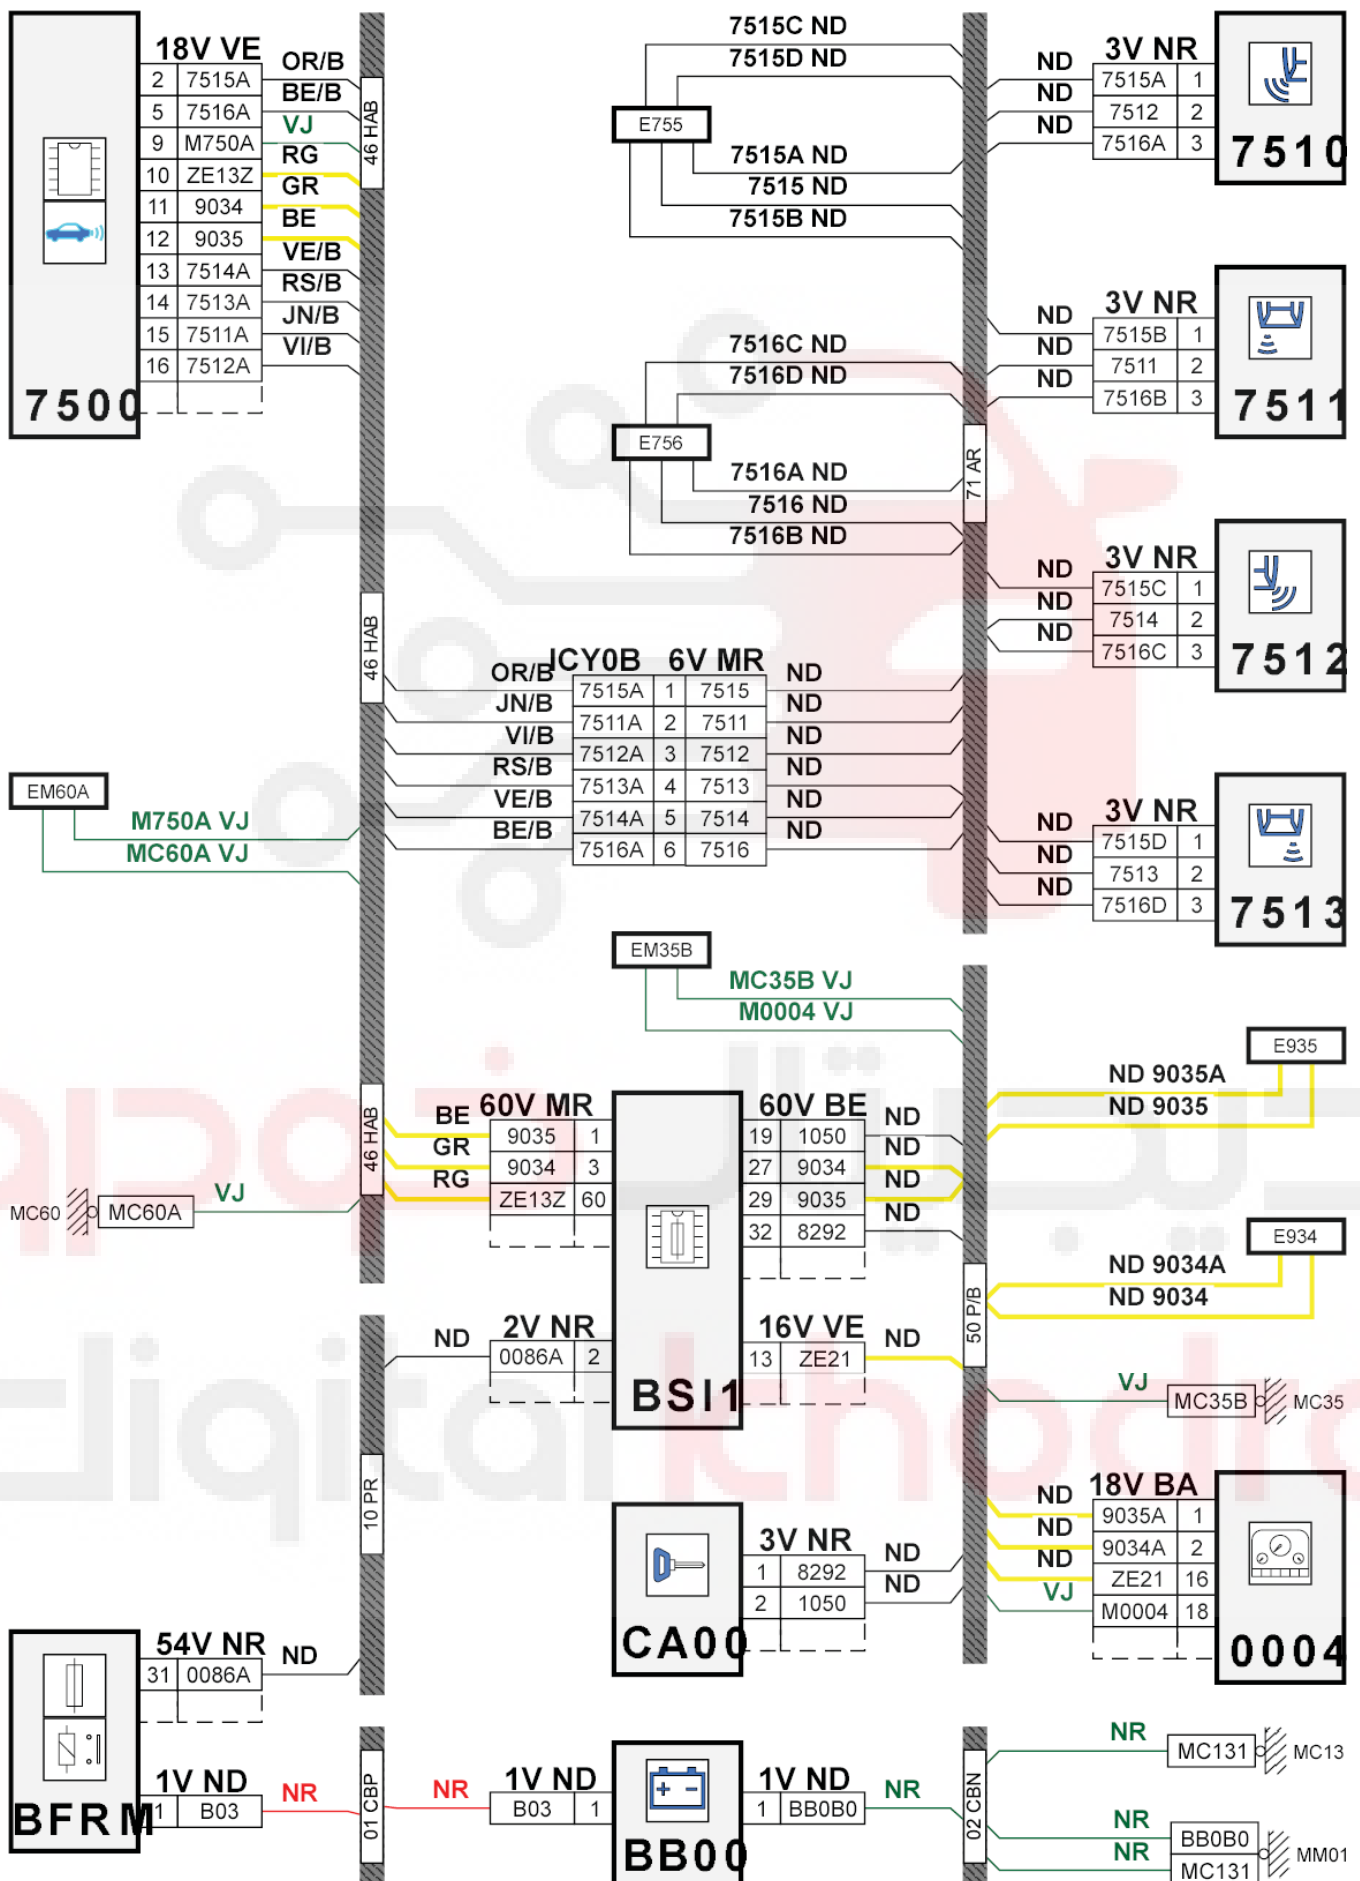

D3CZHK5G


Parking Assistance

item code	description	information
0004	null	/ instrument panel
7500	null	Parking assistance ECU
7510	null	rear left outer parking assistance sensor /
7511	null	rear left inner parking assistance sensor /
7512	null	rear right outer parking assistance sensor /
7513	null	rear right inner parking assistance sensor /
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E755	null	crimp one information (or equipotential 755) wire
E756	null	crimp one information (or equipotential 756) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM35B	null	crimp earth (earth point number 35B)
EM60A	null	crimp earth (earth point number 60A)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01

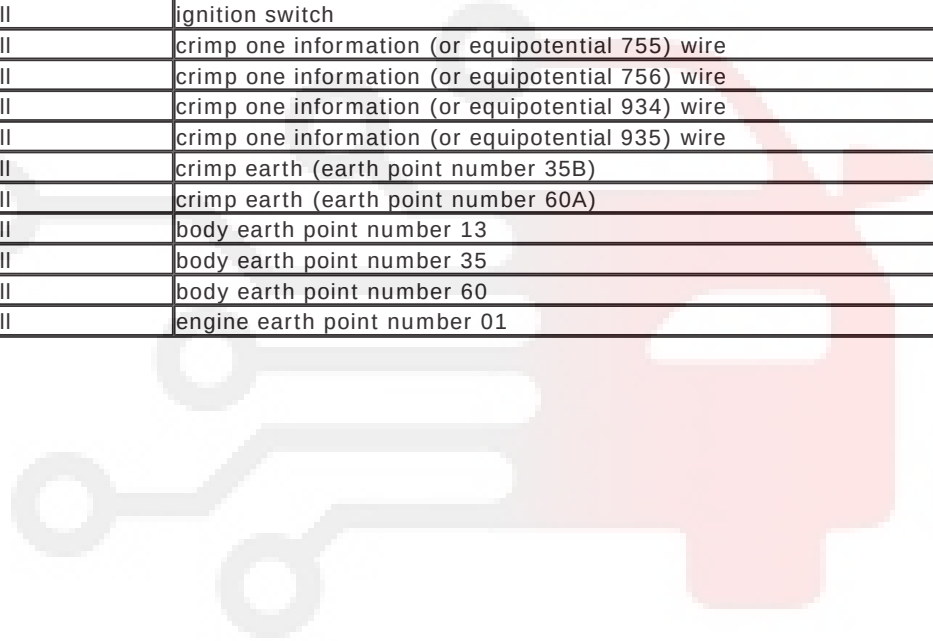

دیجیتال خودرو
digital khodro

Brake Servo

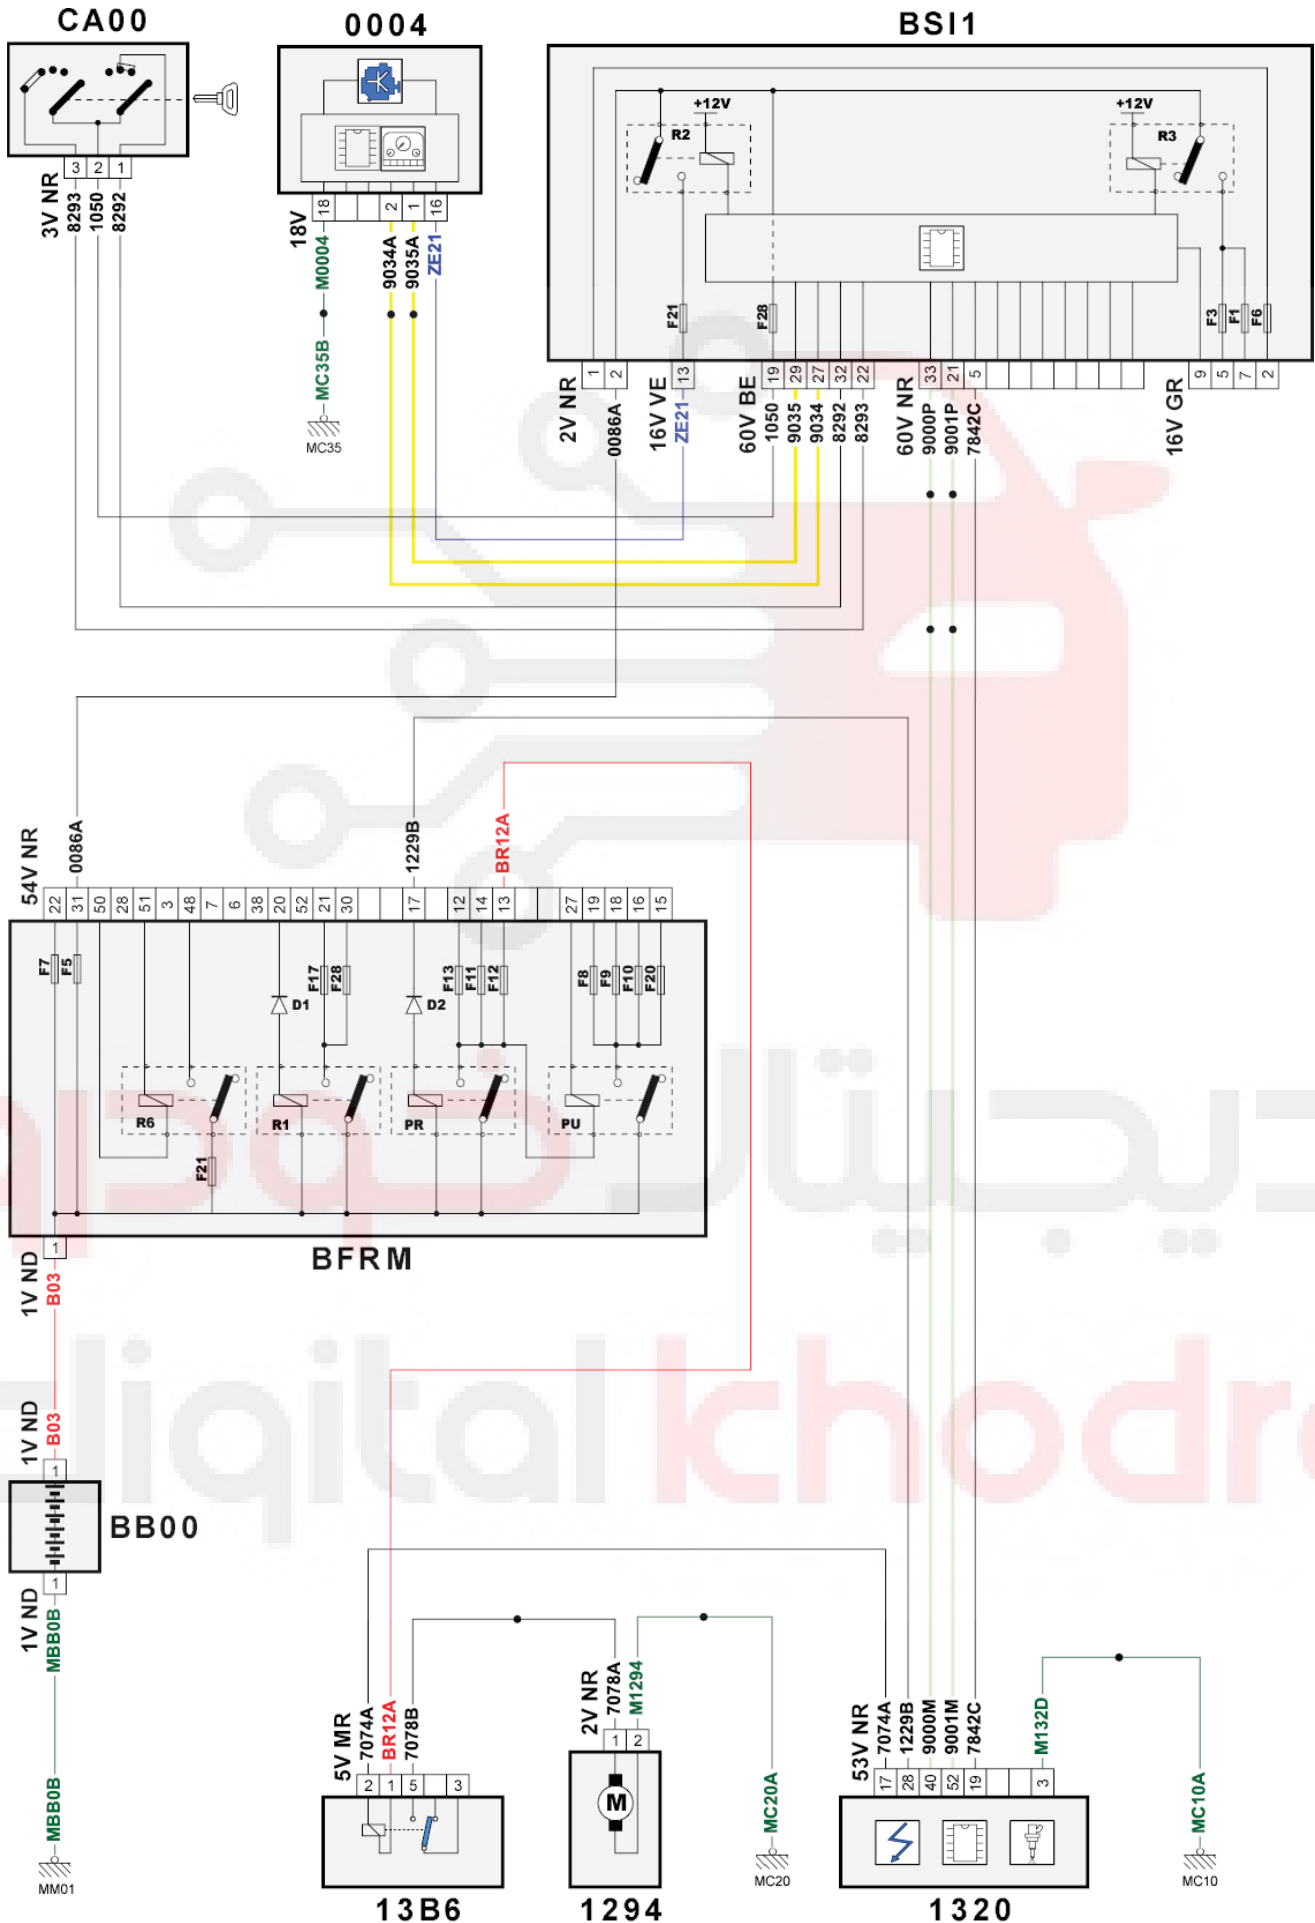

Brake Servo

item code	description	information
0004	null	/ instrument panel
1294	null	/ vacuum pump
1320	null	engine ECU /
13B6	null	vacuum pump control relay
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E806A	null	crimp one information (or equipotential 806A) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM10B	null	crimp earth (earth point number 10B)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
MC10A	null	body earth point number 10A
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MM01	null	engine earth point number 01


[illegible]

Brake Servo


item code	description	information
0004	null	/ instrument panel
1294	null	/ vacuum pump
1320	null	engine ECU /
13B6	null	vacuum pump control relay
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E806A	null	crimp one information (or equipotential 806A) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM10B	null	crimp earth (earth point number 10B)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
MC10A	null	body earth point number 10A
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MM01	null	engine earth point number 01

Power Steering (Without Brake Central Unit Supply Relay)

BSI1

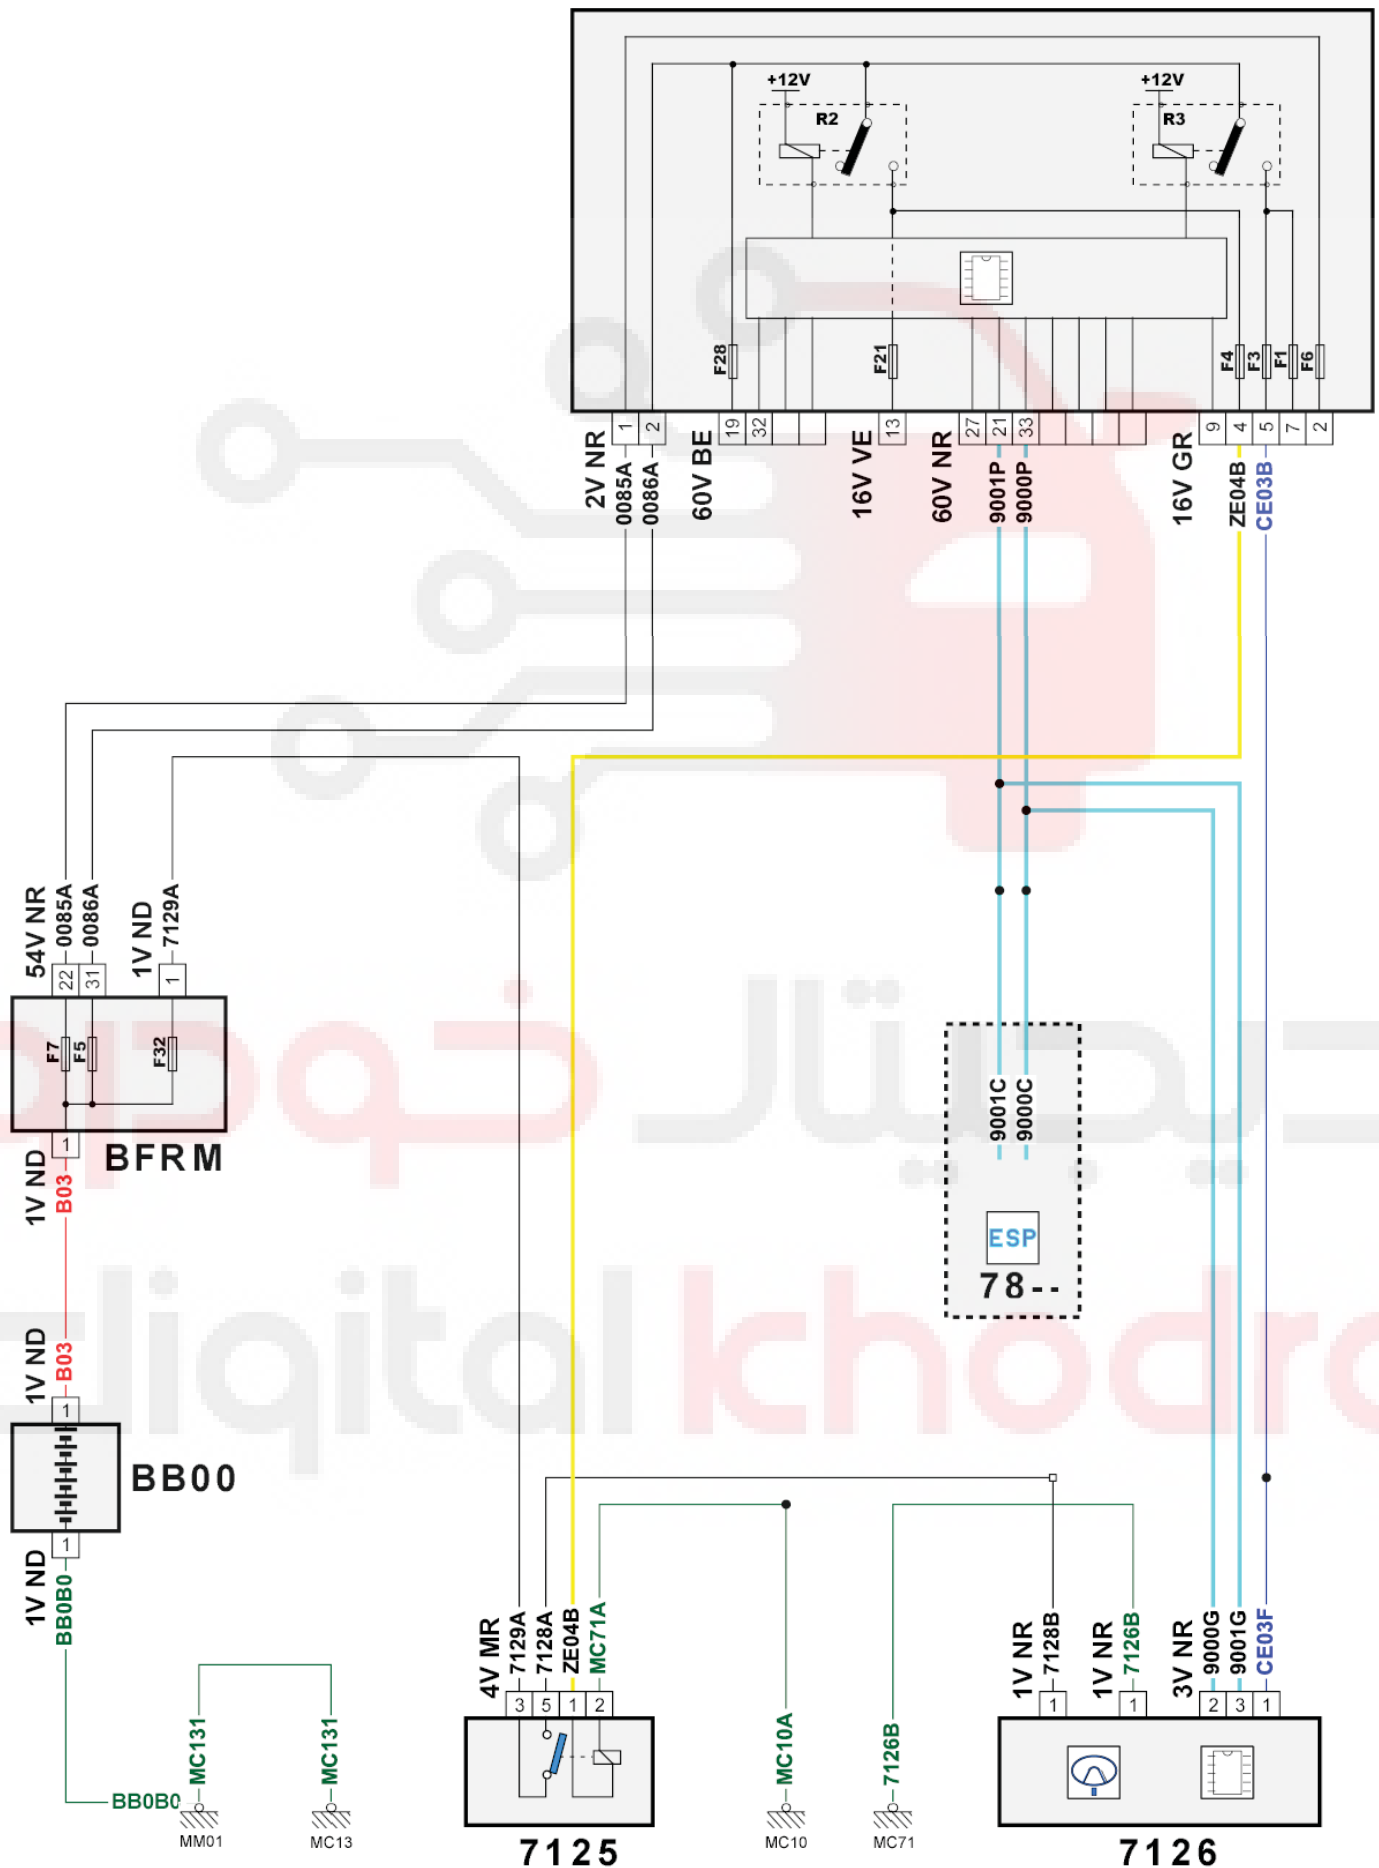


Power Steering (Without Brake Central Unit Supply Relay)

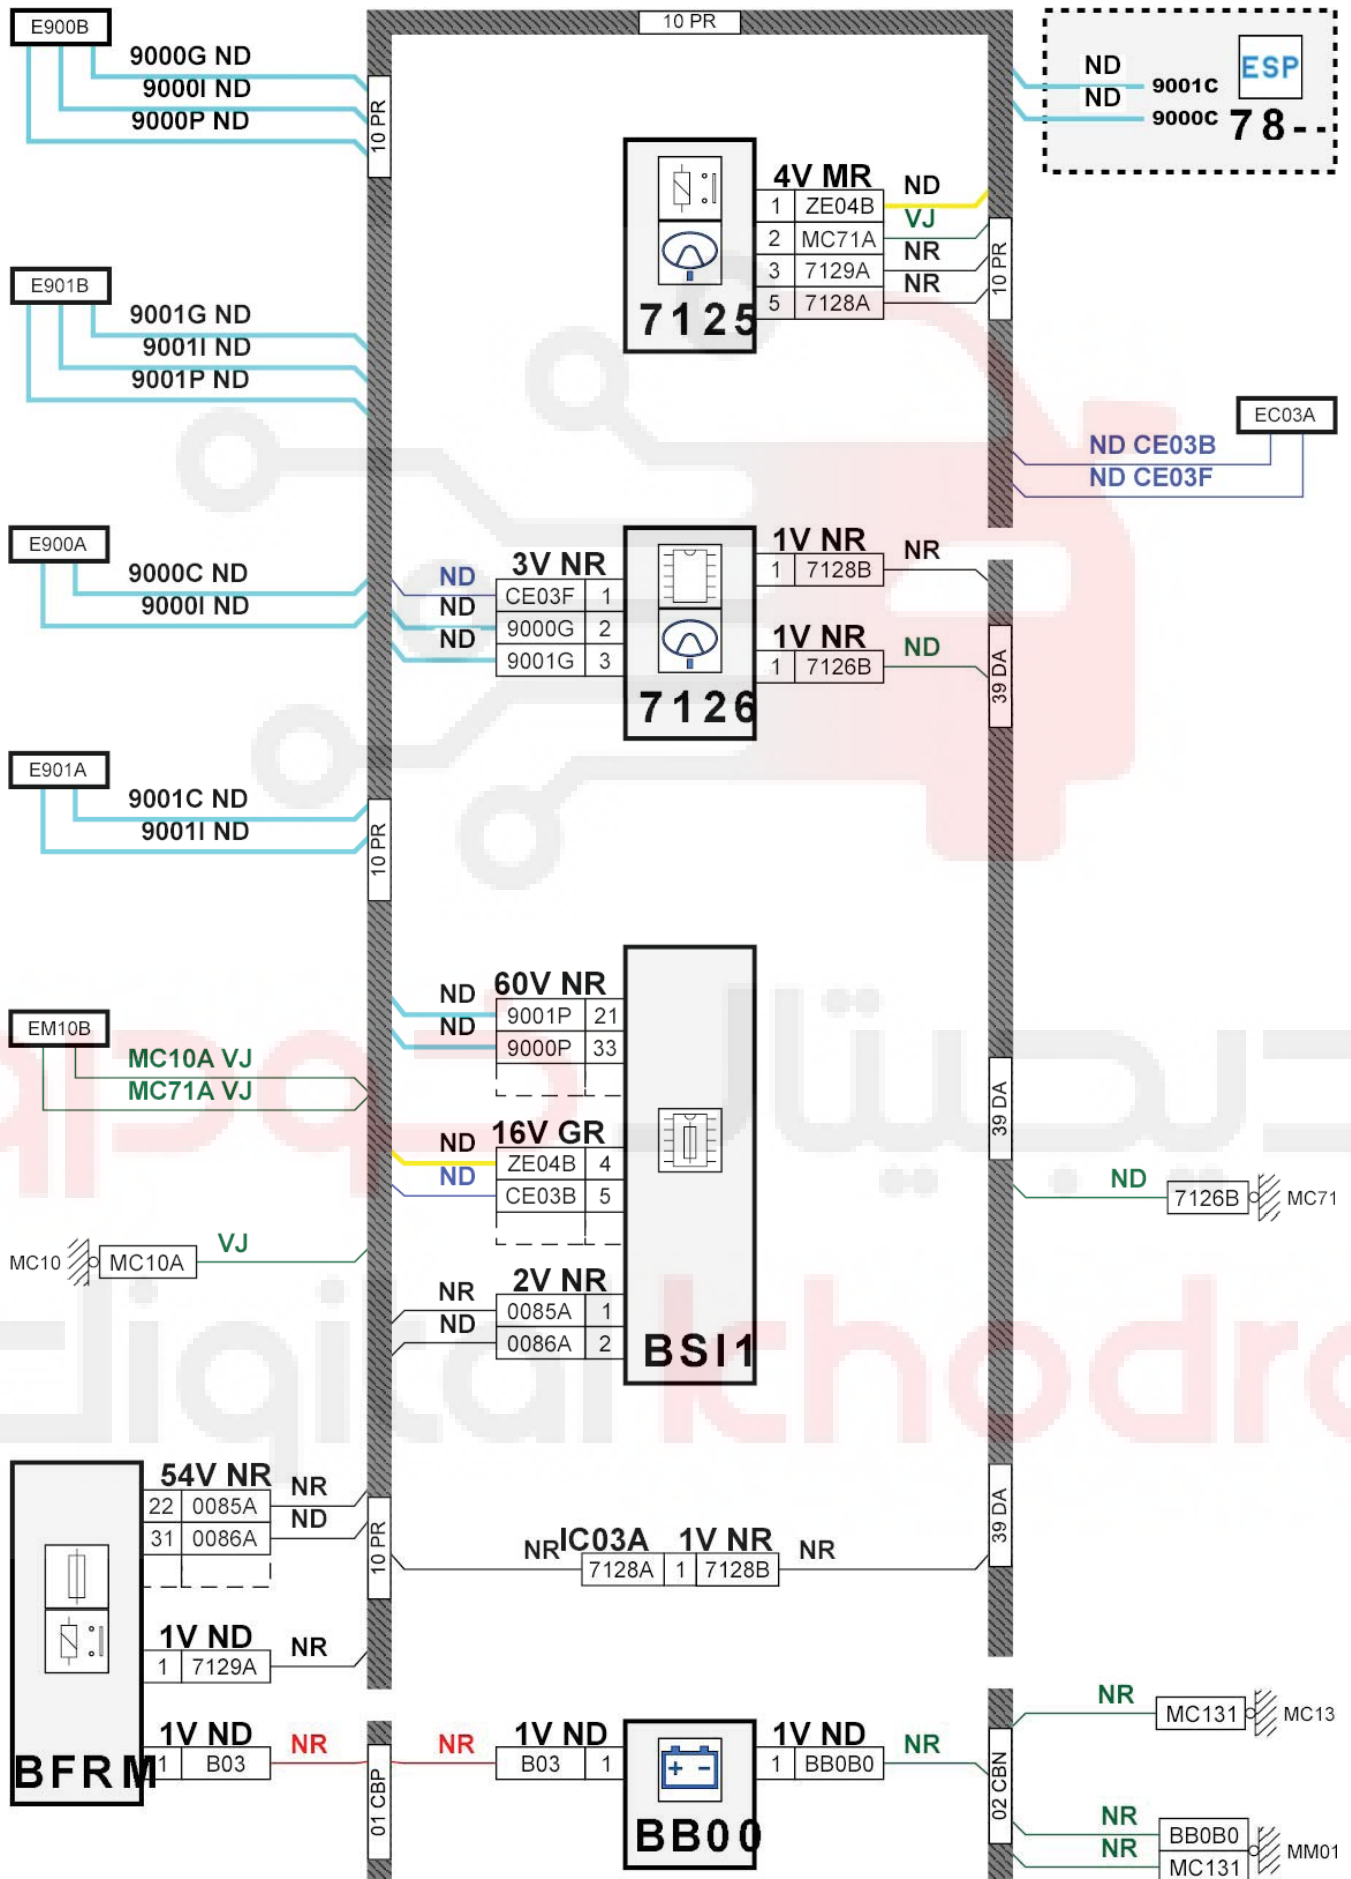

Power Steering (Without Brake Central Unit Supply Relay)


item code	description	information
7125	null	power steering power relay
7126	null	electric power steering ECU /
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
EC03A	null	splice of an "ignition +" protected by fuse no. 03A
EM10B	null	crimp earth (earth point number 10B)
MC10A	null	body earth point number 10A
MC13	null	body earth point number 13
MC71B	null	body earth point number 71
MM01	null	engine earth point number 01

Power Steering

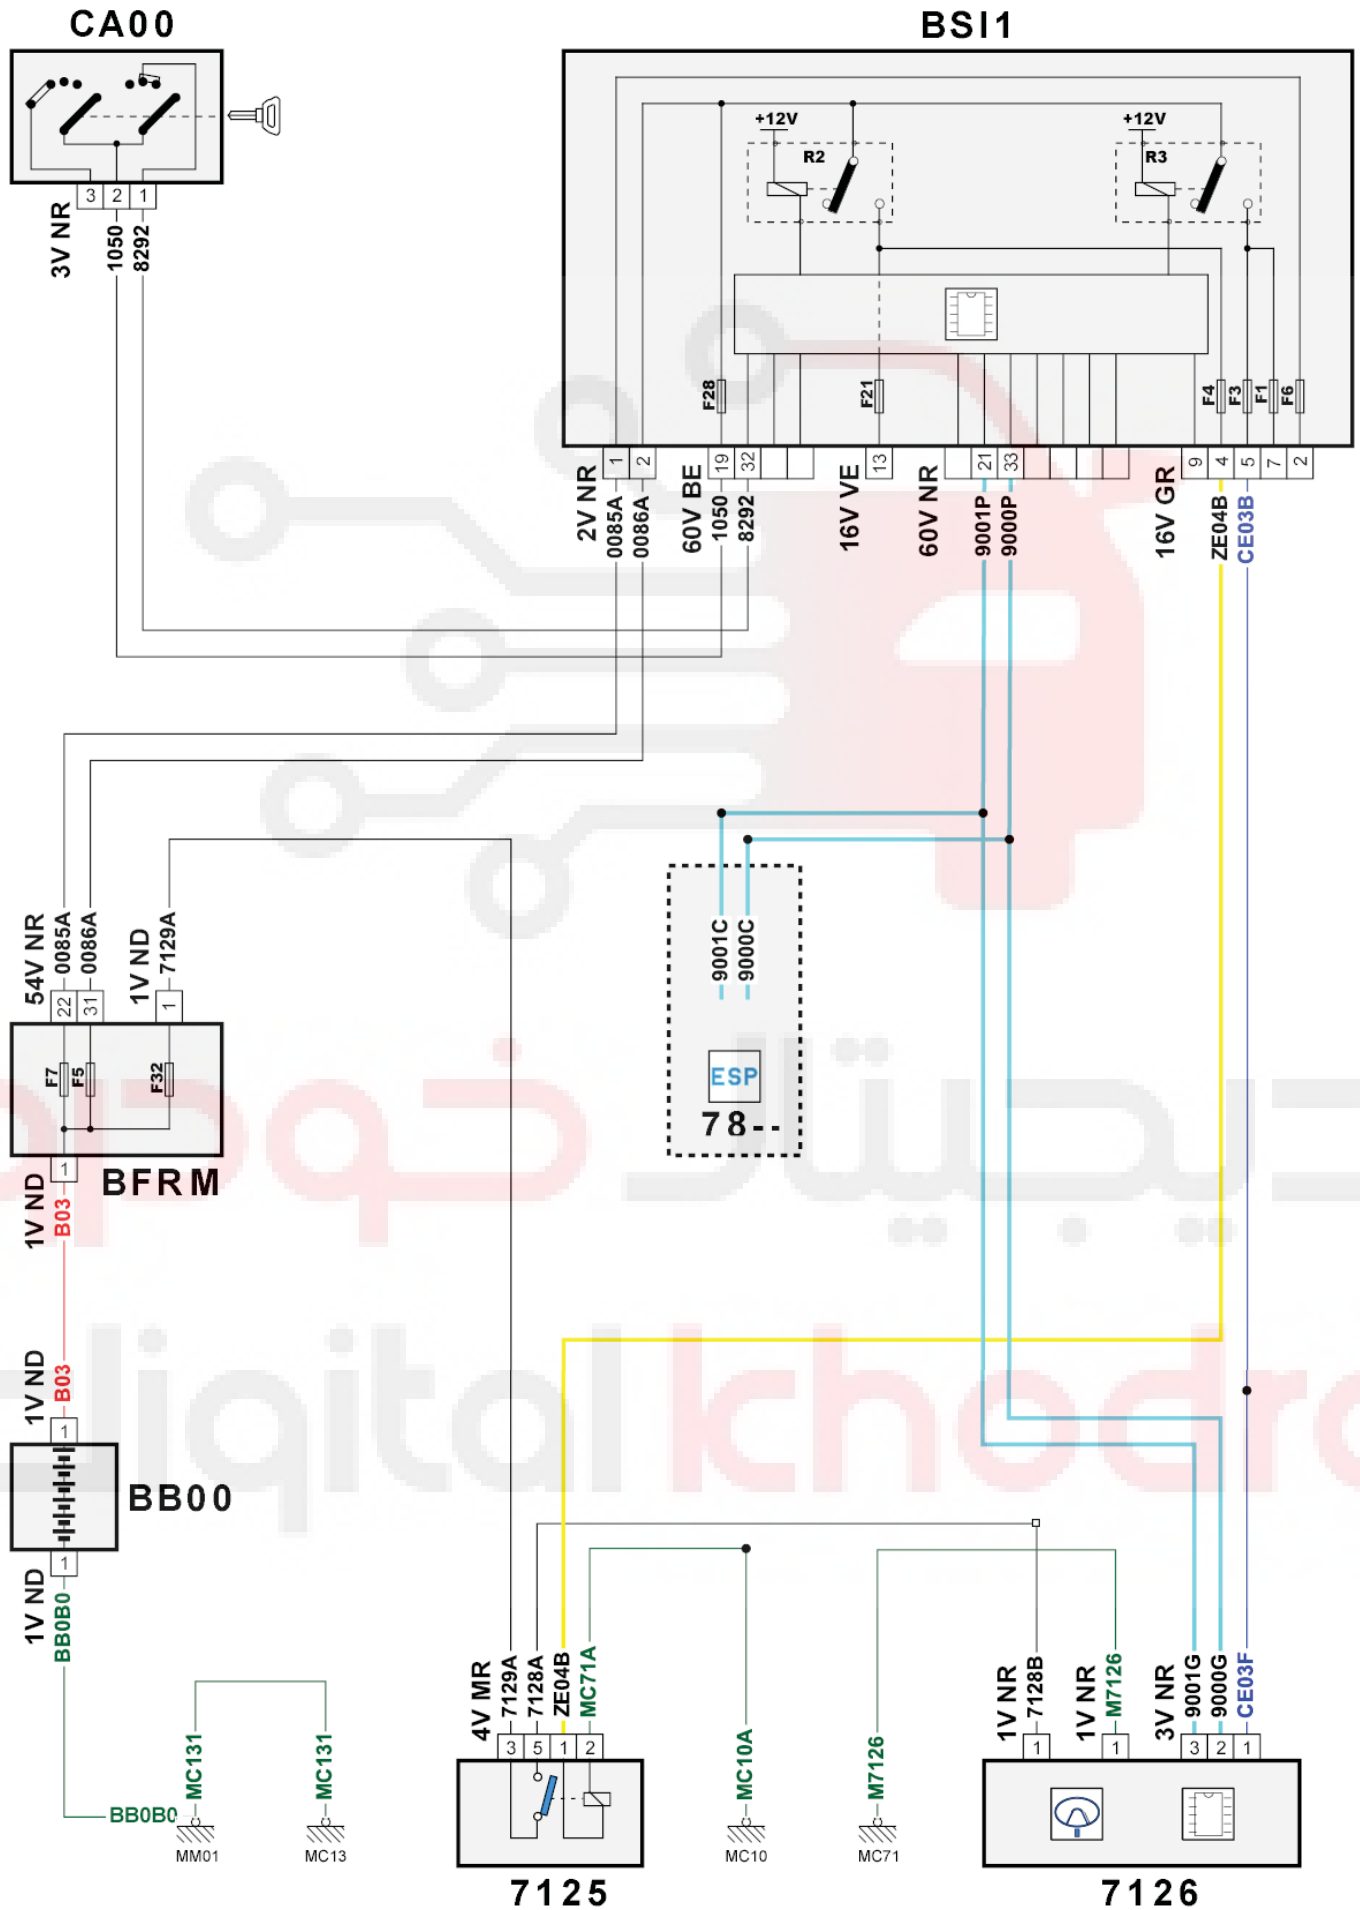


Power Steering

item code	description	information
7125	null	power steering power relay
7126	null	electric power steering ECU /
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
EC03A	null	splice of an "ignition +" protected by fuse no. 03A
EM10B	null	crimp earth (earth point number 10B)
MC10A	null	body earth point number 10A
MC13	null	body earth point number 13
MC71B	null	body earth point number 71
MM01	null	engine earth point number 01

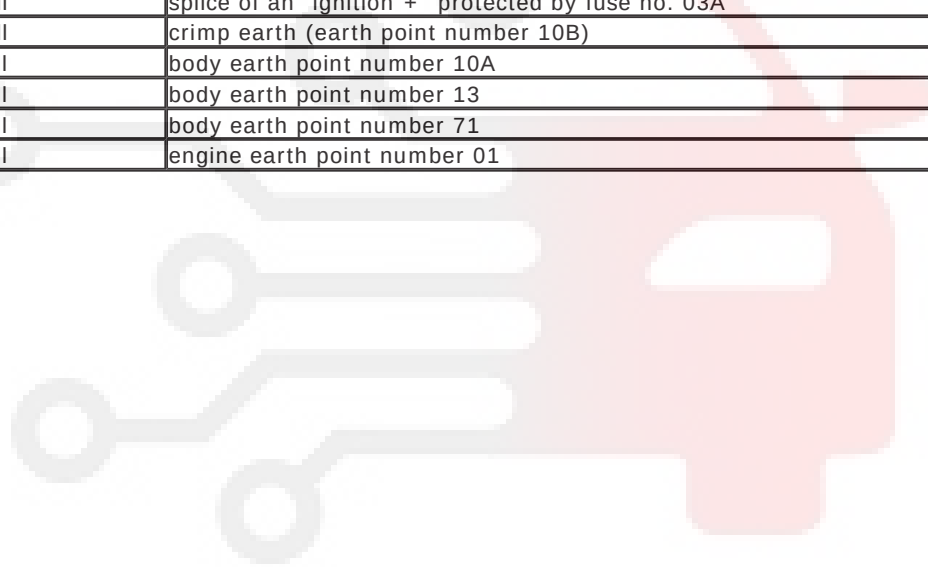

دیجیتال خودرو
digital khodro


Power Steering (With Brake Central Unit Supply Relay)

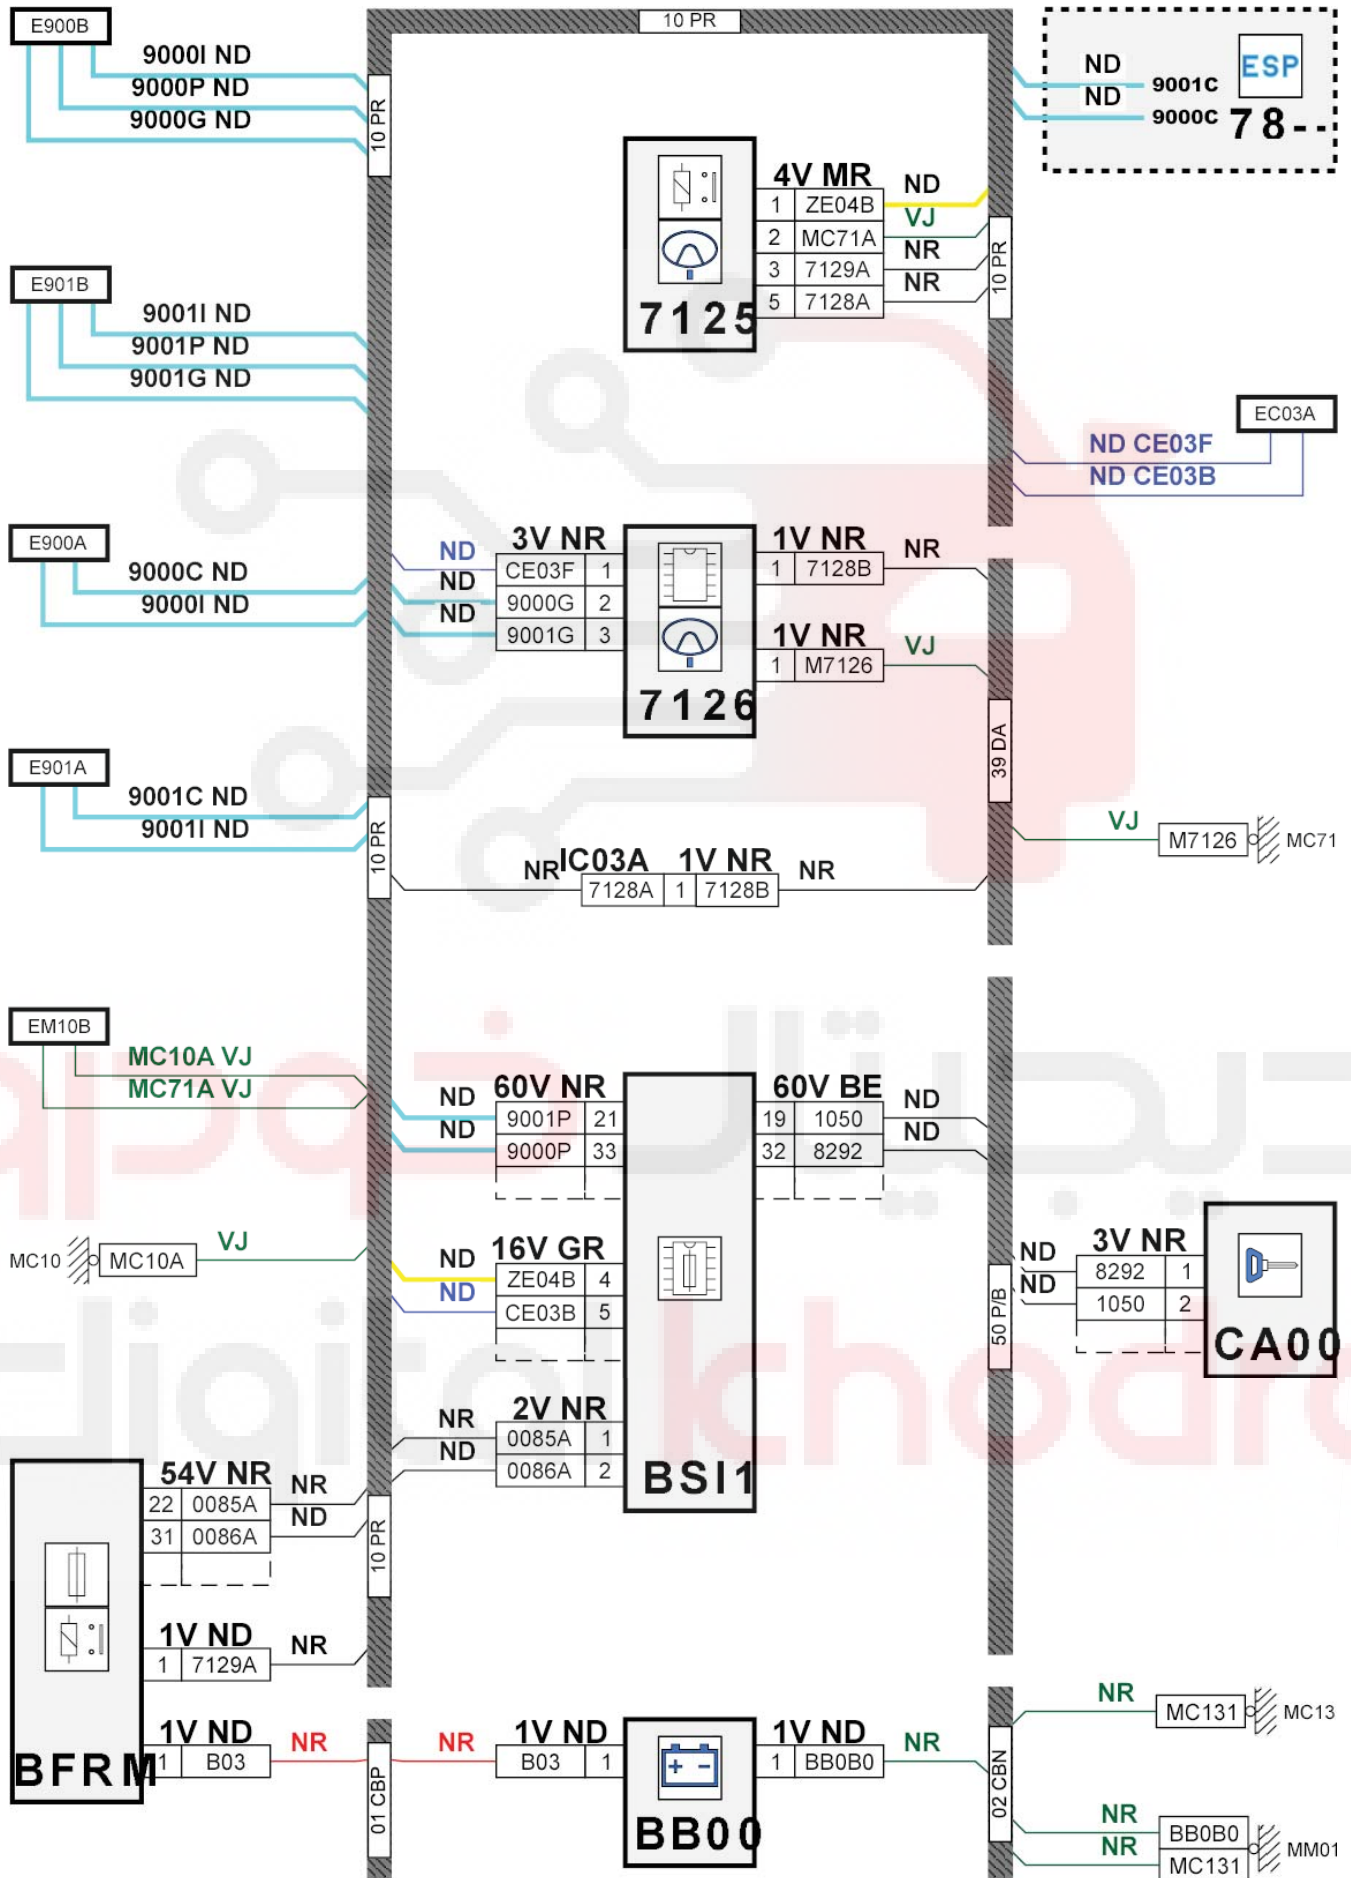

Power Steering (With Brake Central Unit Supply Relay)

item code	description	information
7125	null	power steering power relay
7126	null	electric power steering ECU /
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
EC03A	null	splice of an "ignition +" protected by fuse no. 03A
EM10B	null	crimp earth (earth point number 10B)
MC10A	null	body earth point number 10A
MC13	null	body earth point number 13
MC71B	null	body earth point number 71
MM01	null	engine earth point number 01


Under Inflation Detection

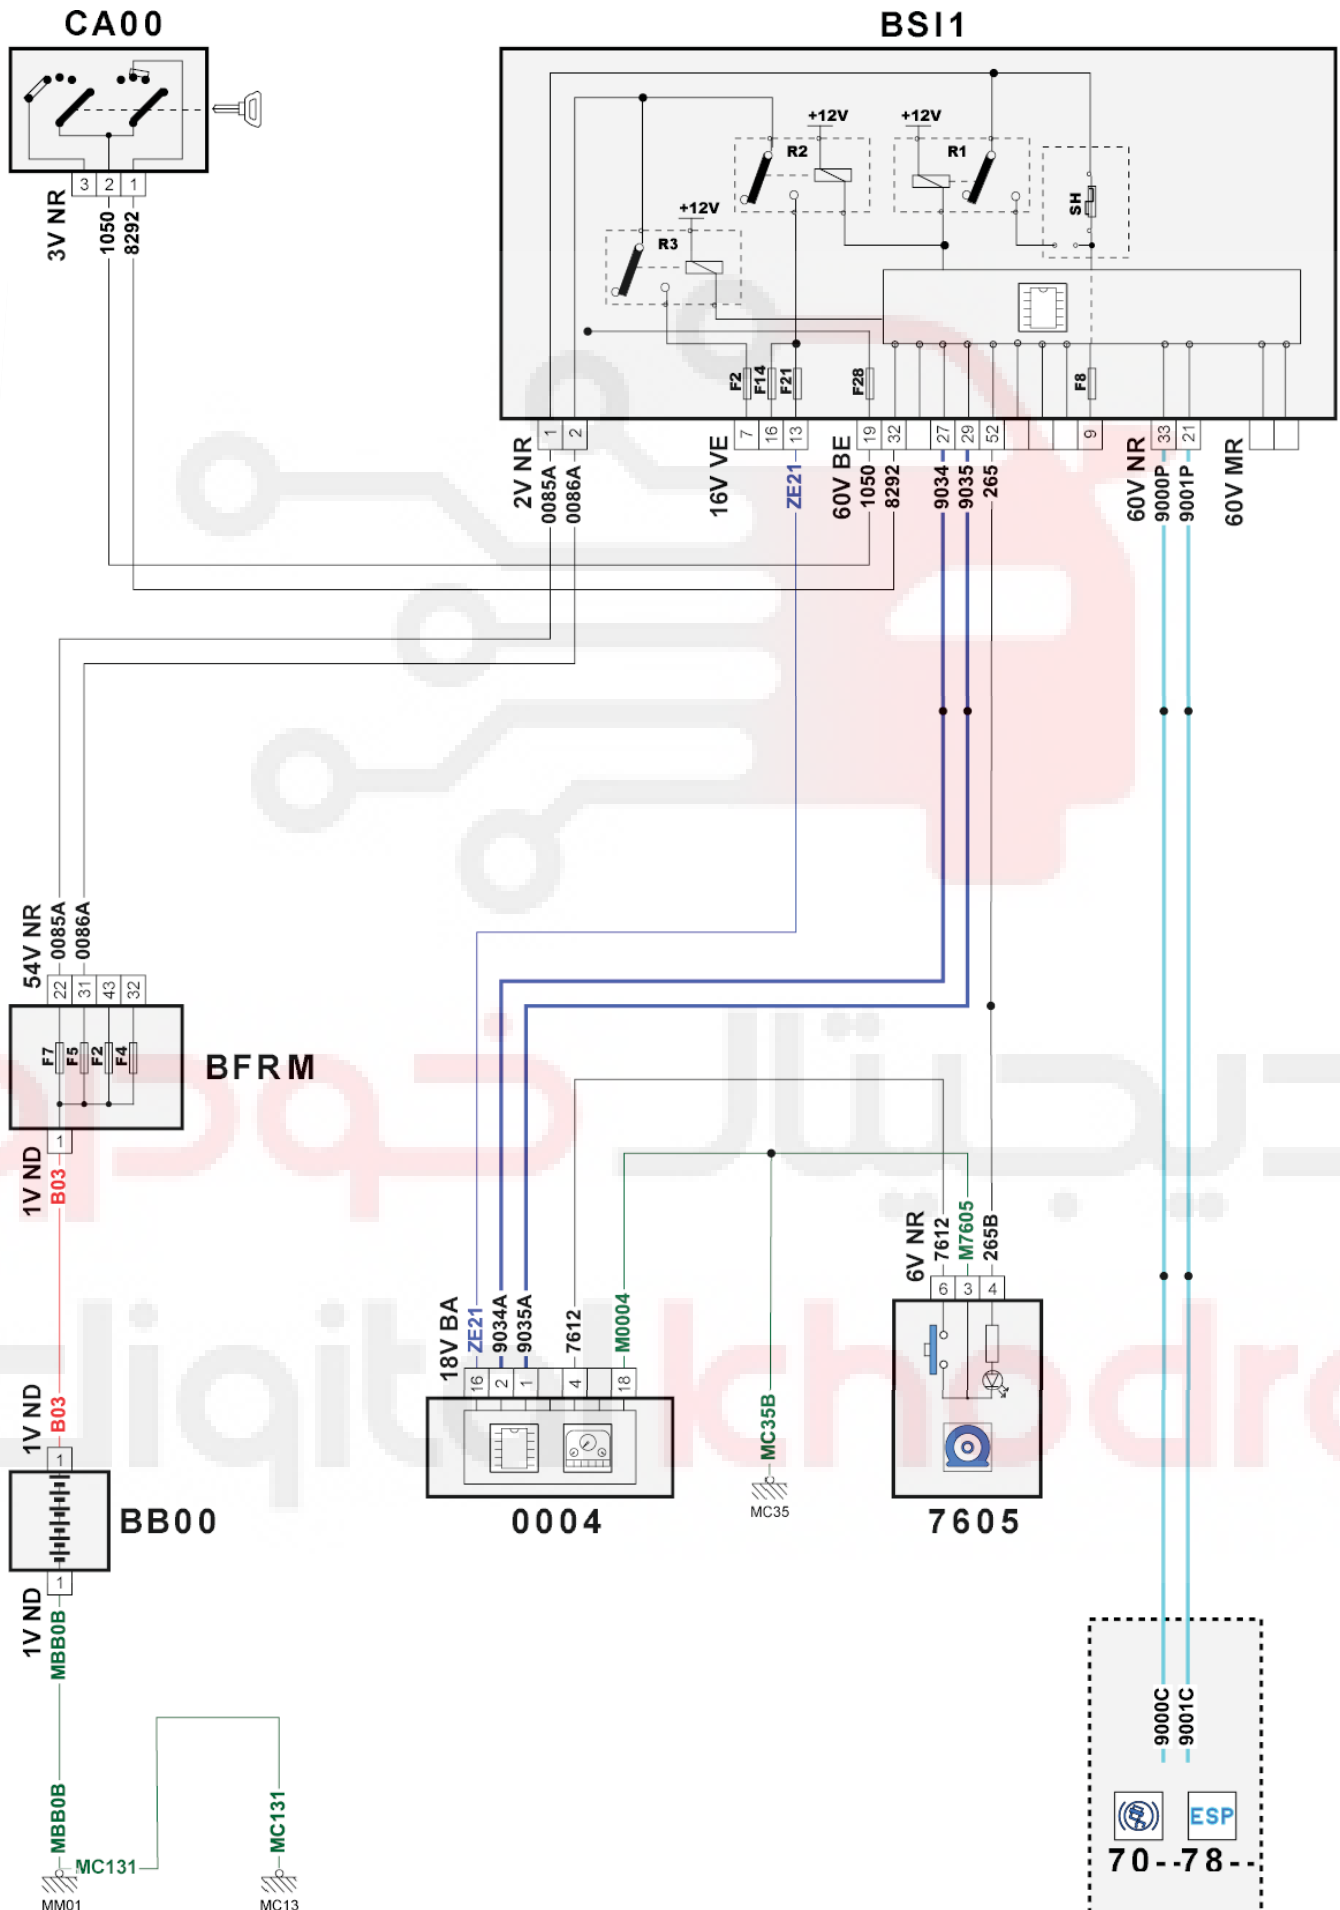


Under Inflation Detection

item code	description	information
0004	null	/ instrument panel
7605	null	tyre under-inflation detection reinitialisation switch
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E265	null	crimp one information (or equipotential 265) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM35B	null	crimp earth (earth point number 35B)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MM01A	null	engine earth point number 01A

Multiplexed BODY CAN Interconnection

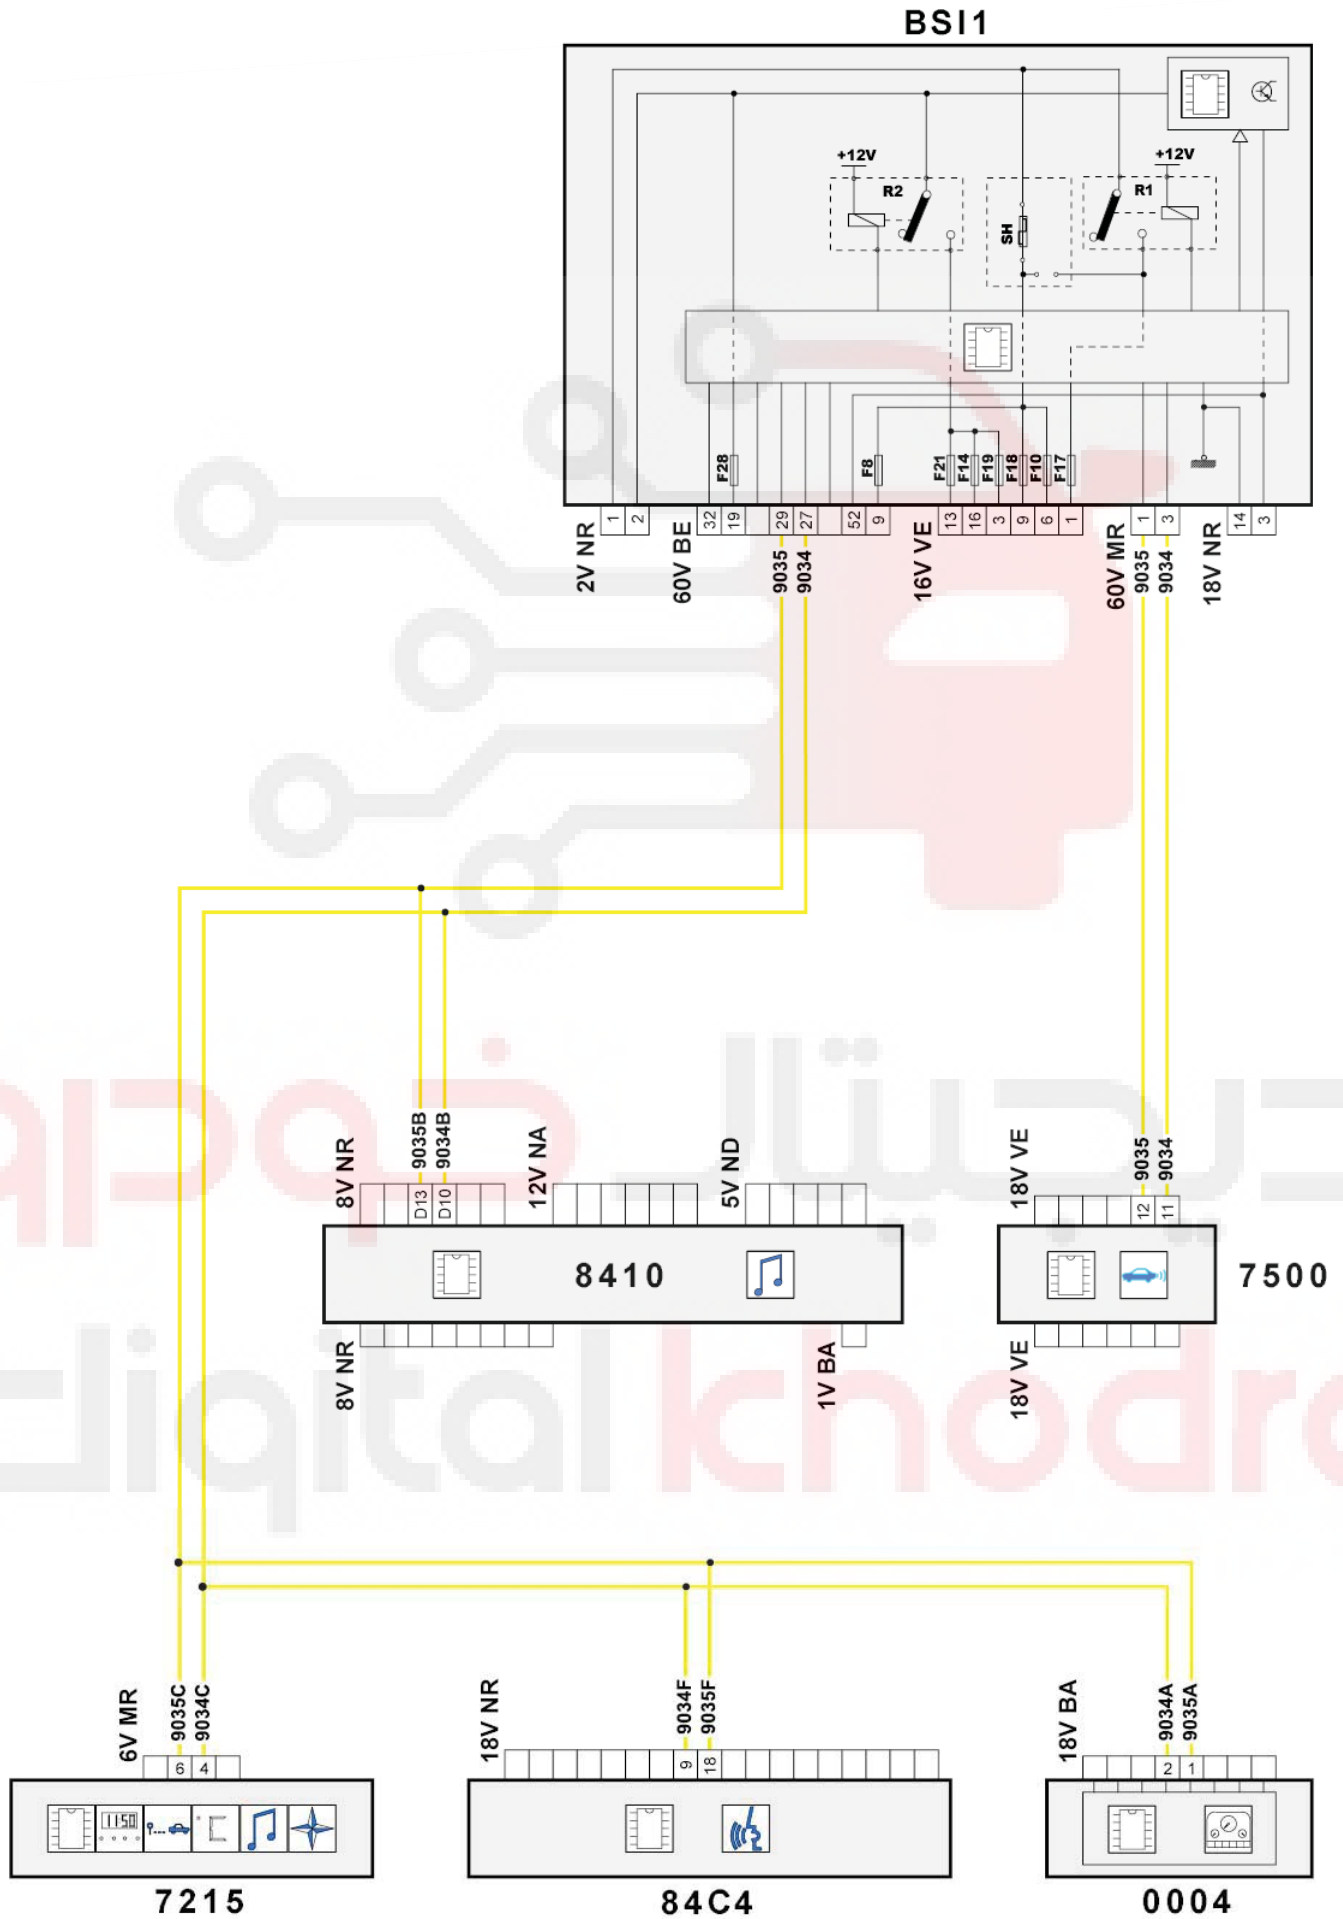


Multiplexed COMFORT CAN Interconnection

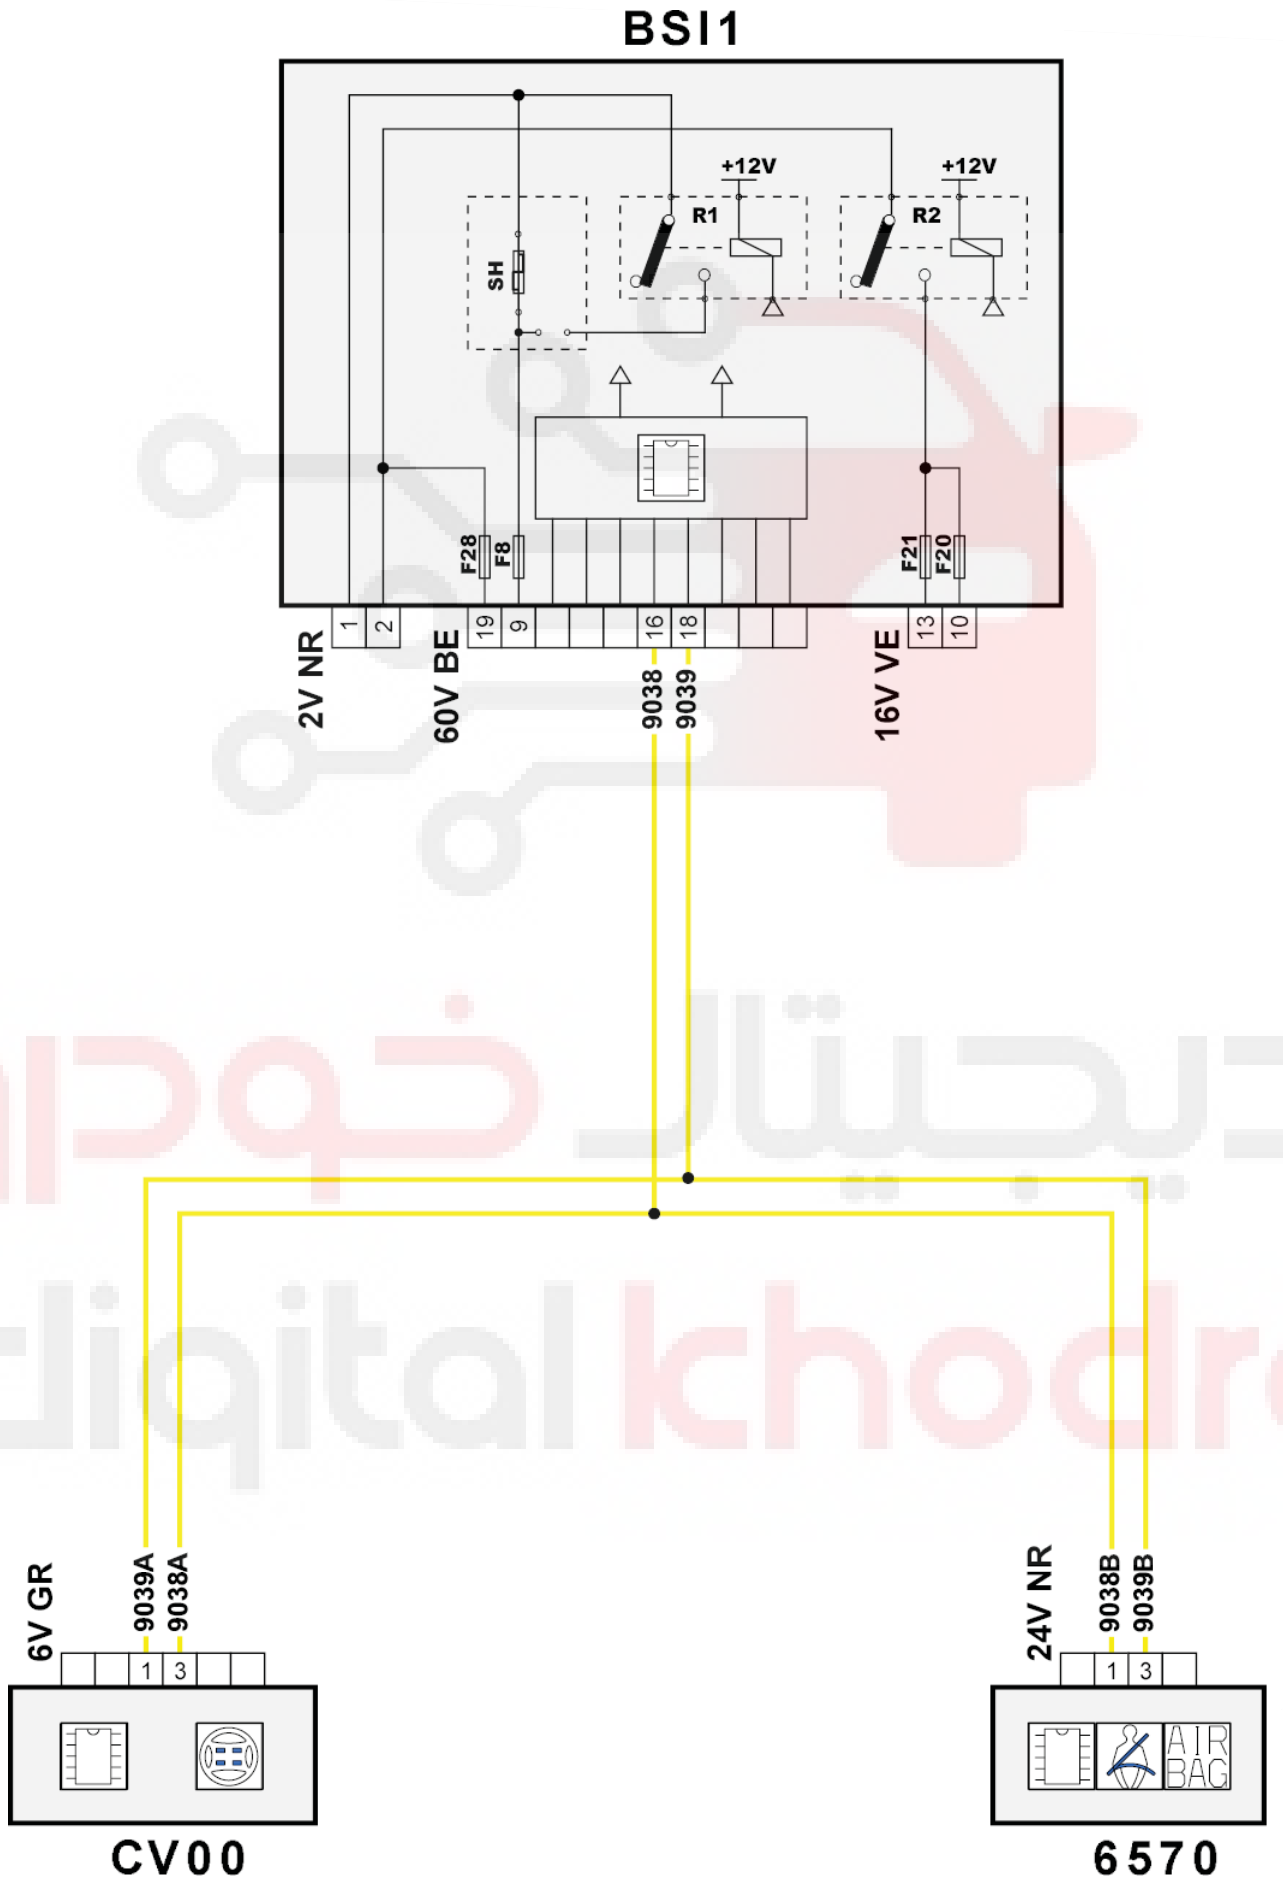


Electrical Mirrors

item code	description	information
6406	null	rear view mirror control
6411	null	left-hand exterior rear view mirror
6416	null	right-hand exterior mirror
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
EC02A	null	splice of an "ignition +" protected by fuse no. 02
EM37A	null	crimp earth (earth point number 37A)
EM37C	null	crimp earth (earth point number 37C)
MC13	null	body earth point number 13
MC37A	null	body earth point number 37A
MC37C	null	body earth point number 37
MM01	null	engine earth point number 01

Electrical Mirrors

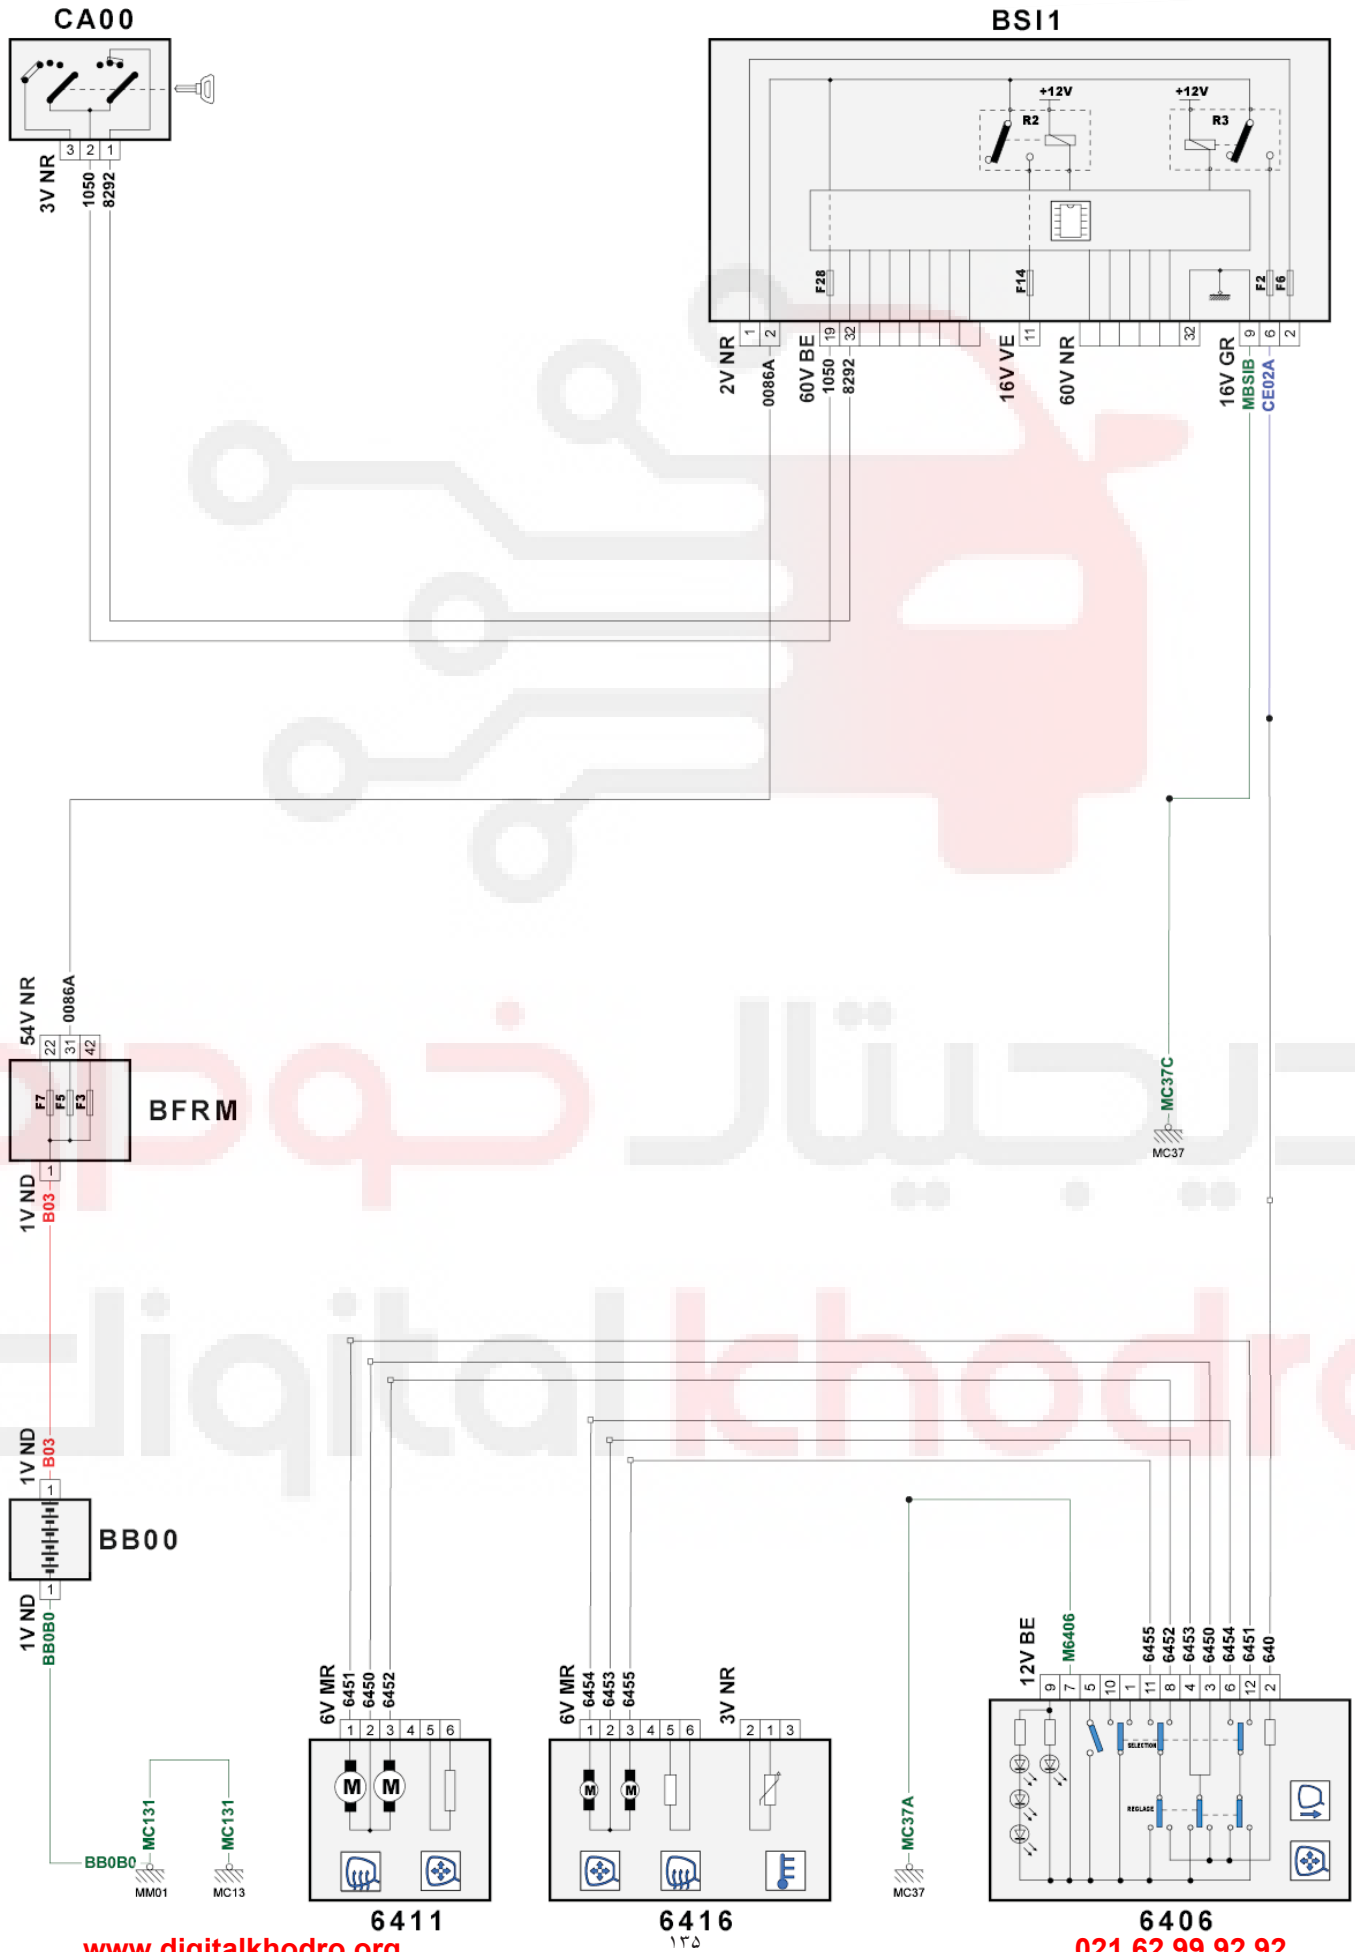

Passenger Compartment / Closed Compartment Lighting

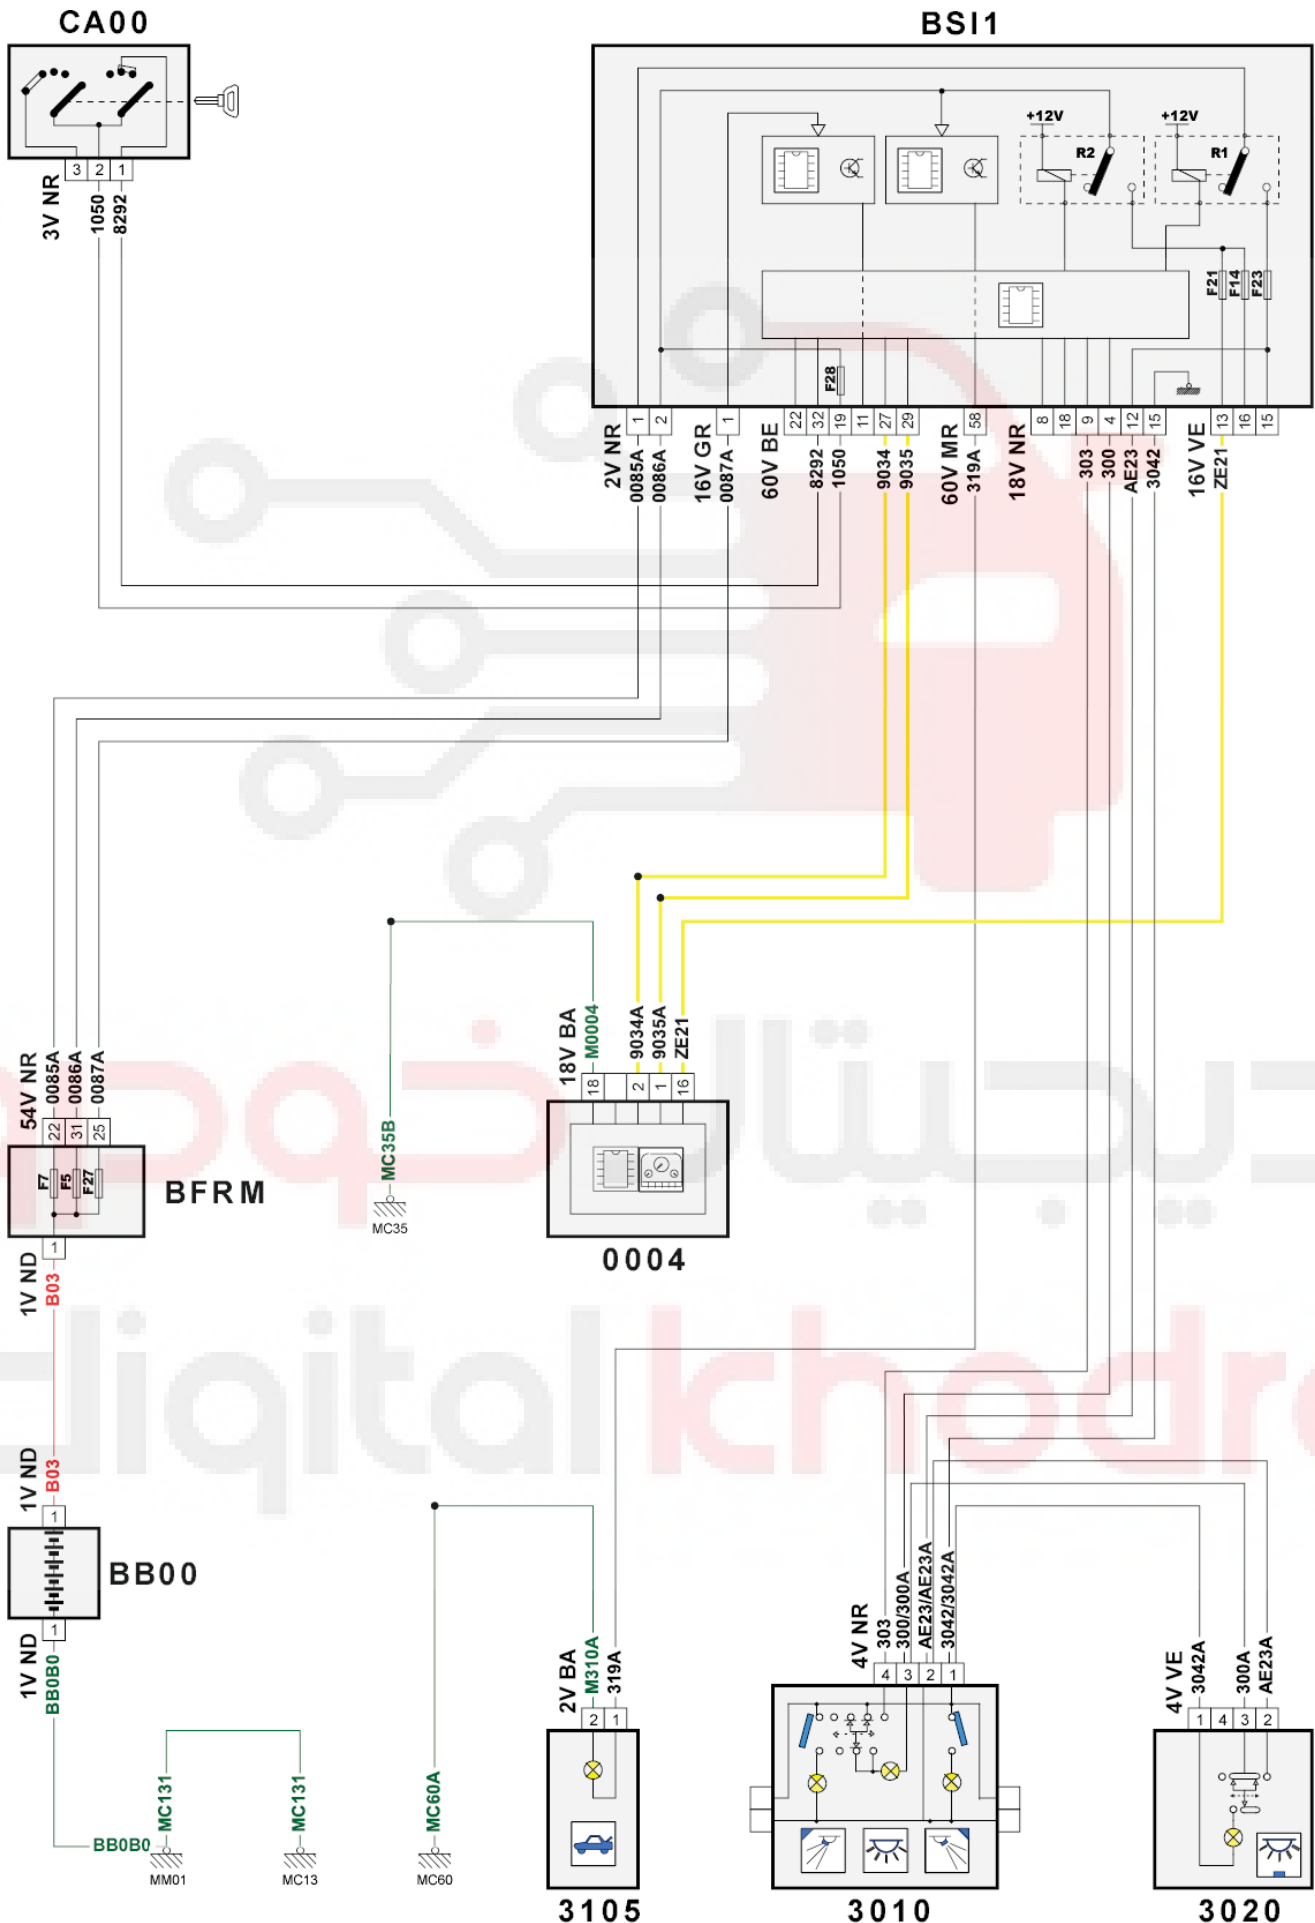


Passenger Compartment / Closed Compartment Lighting

item code	description	information
0004	null	/ instrument panel
3010	null	front interior lamp
3020	null	rear courtesy lamp
3105	null	boot (or tailgate) light
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BS11	null	built-in systems interface
CA00	null	ignition switch
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM35B	null	crimp earth (earth point number 35B)
EM60A	null	crimp earth (earth point number 60A)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01

Passenger Compartment / Closed Compartment Lighting

item code	description	information
0004	null	/ instrument panel
3010	null	front interior lamp
3020	null	rear courtesy lamp
3105	null	boot (or tailgate) light
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM35B	null	crimp earth (earth point number 35B)
EM60A	null	crimp earth (earth point number 60A)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01

Brake Lamps

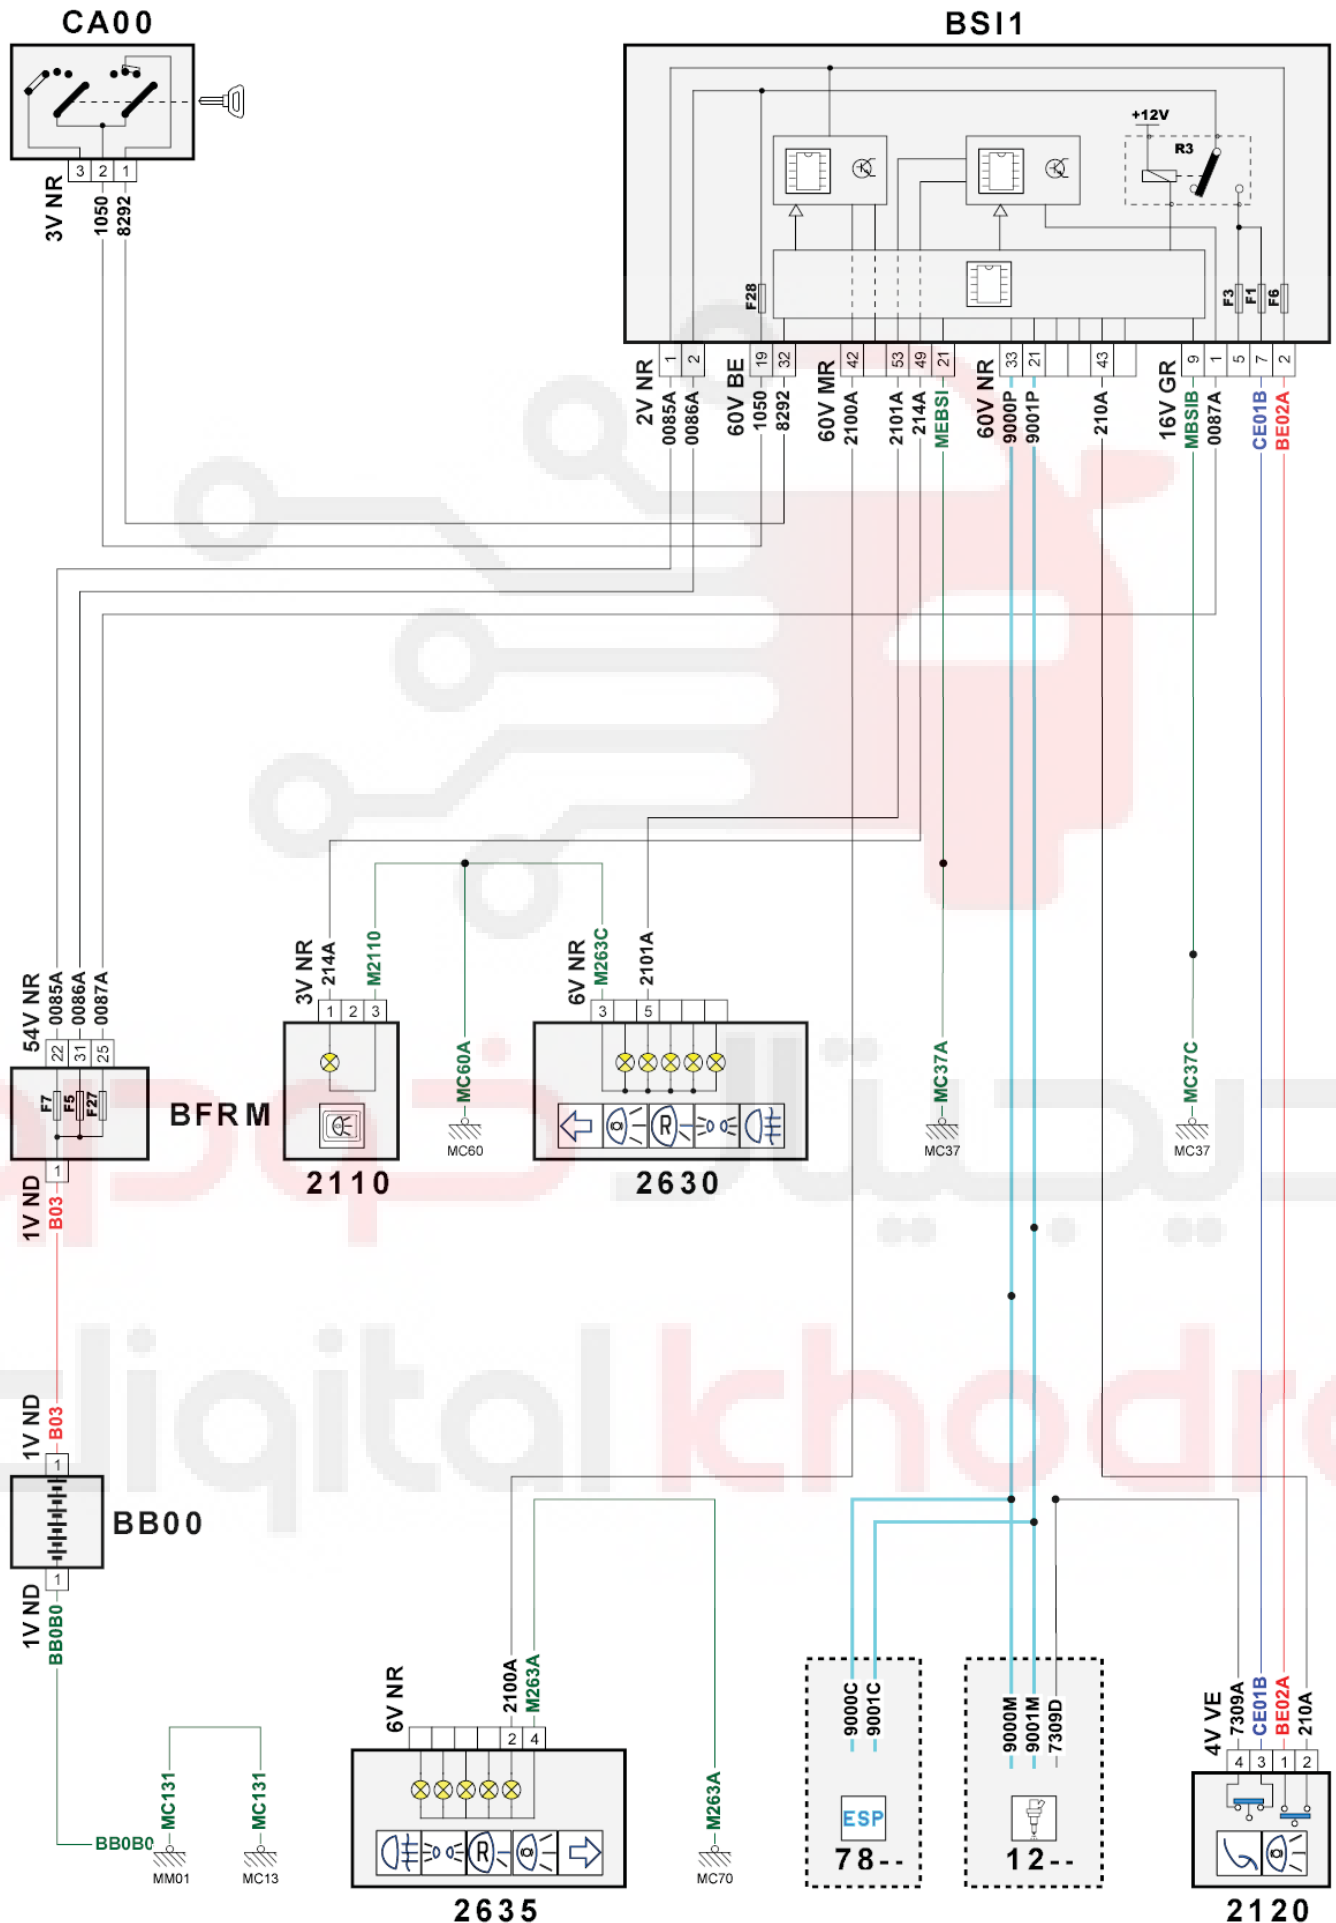


Brake Lamps

item code	description	information
1320	null	engine ECU /
2110	null	additional brake lamp
2120	null	dual function brake switch /
2630	null	rear left lamp on body
2635	null	rear right lamp on body
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E703A	null	crimp one information (or equipotential 703) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
EM37A	null	crimp earth (earth point number 37A)
EM37C	null	crimp earth (earth point number 37C)
EM60A	null	crimp earth (earth point number 60A)
MC13	null	body earth point number 13
MC37A	null	body earth point number 37A
MC37C	null	body earth point number 37
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01

Brake Lamps

item code	description	information
1320	null	engine ECU /
2110	null	additional brake lamp
2120	null	dual function brake switch /
2630	null	rear left lamp on body
2635	null	rear right lamp on body
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E703A	null	crimp one information (or equipotential 703) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
EM37A	null	crimp earth (earth point number 37A)
EM37C	null	crimp earth (earth point number 37C)
EM60A	null	crimp earth (earth point number 60A)
MC13	null	body earth point number 13
MC37A	null	body earth point number 37A
MC37C	null	body earth point number 37
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01


Daytime Running Lamps

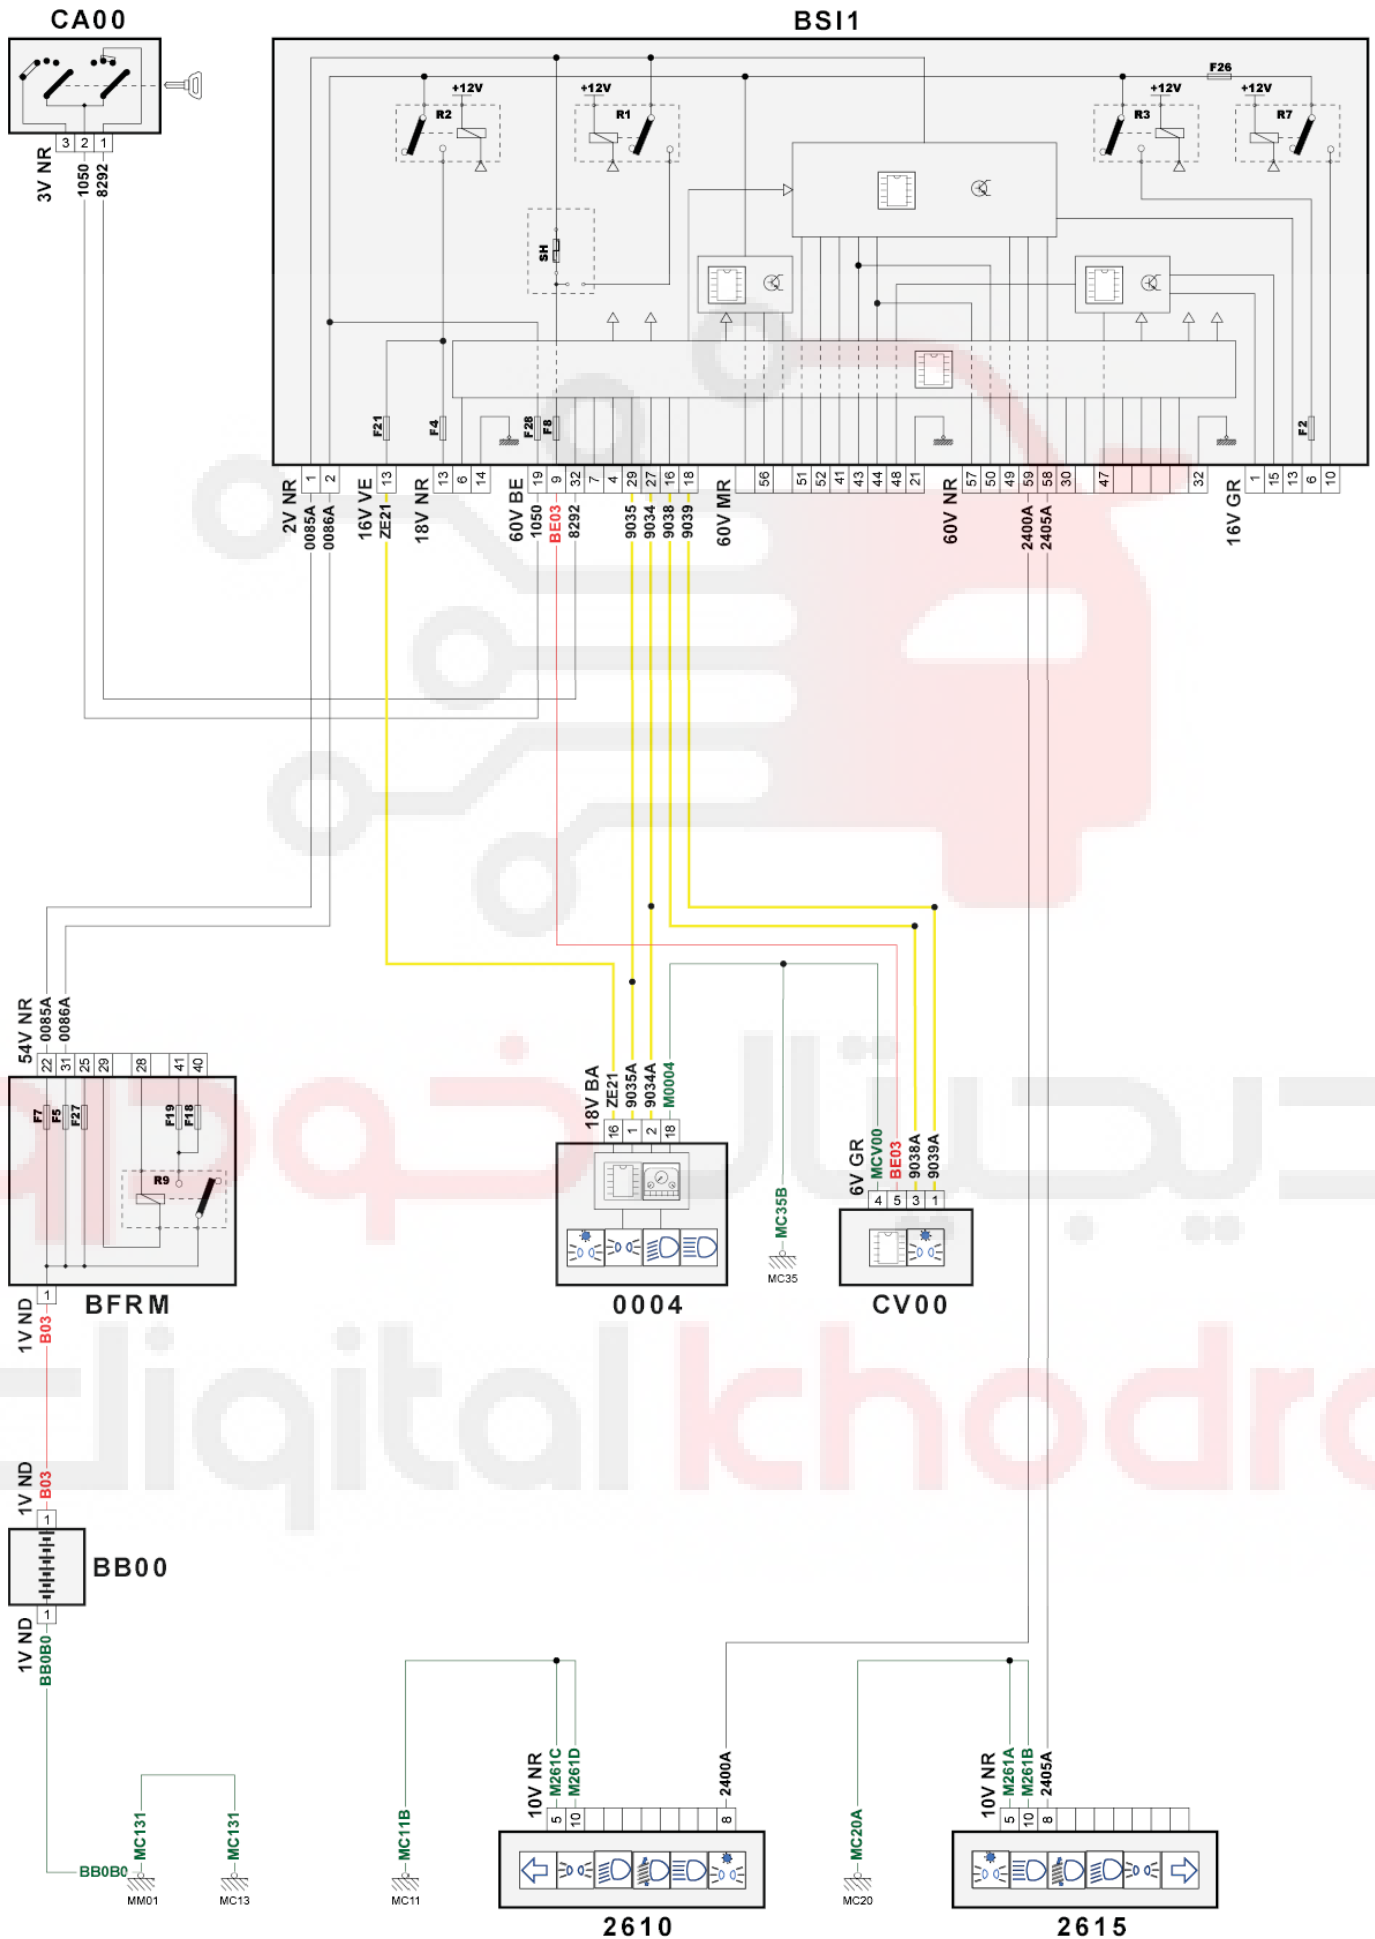

Day Time Running Lamps

item code	description	information
0004	null	/ instrument panel
2610	null	left-hand headlamp
2615	null	right-hand headlamp
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MM01	null	engine earth point number 01

Day Time Running Lamps

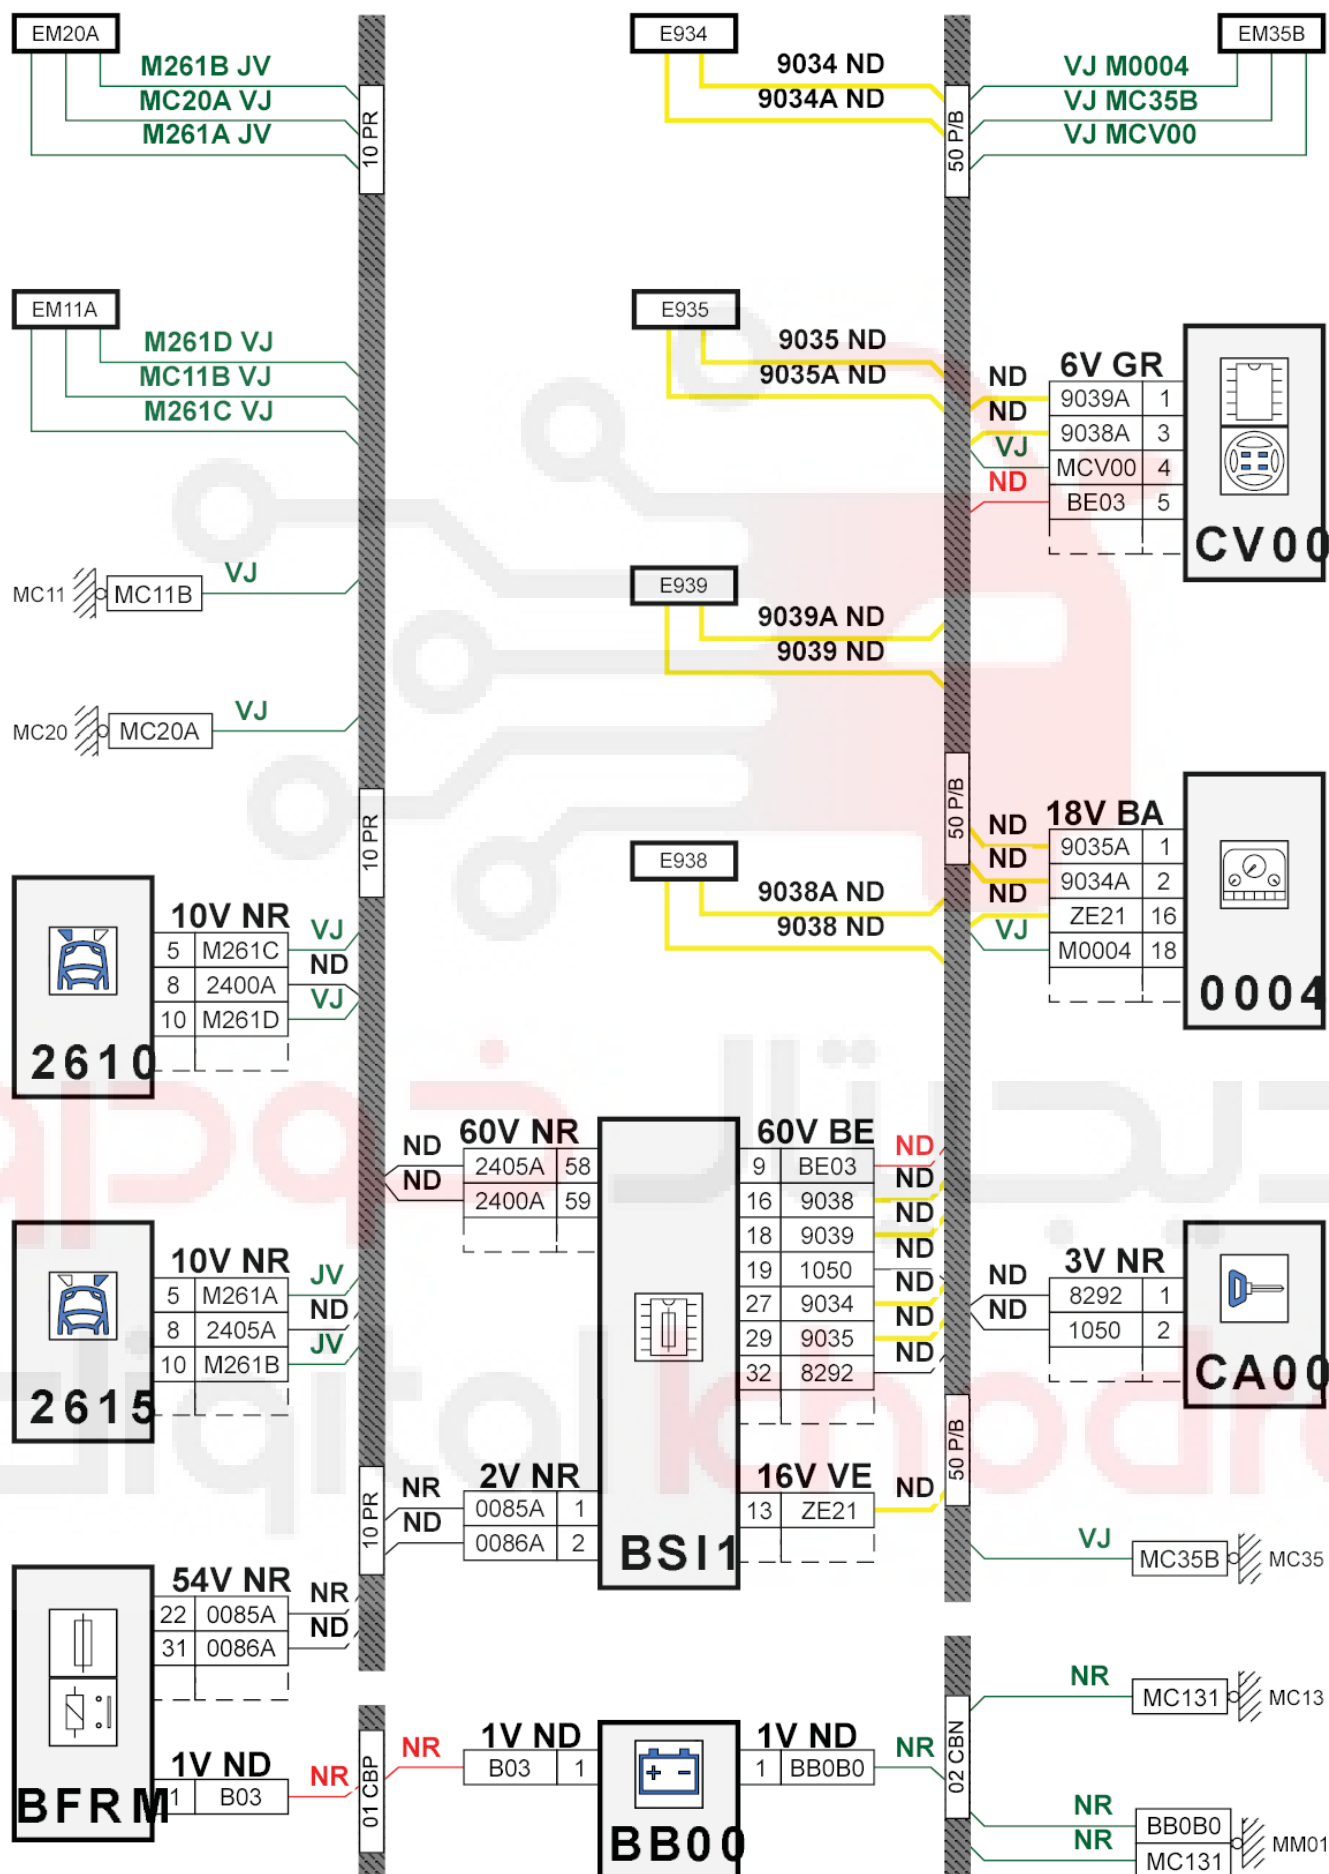


D3CZHHXG

Day Time Running Lamps

item code	description	information
0004	null	/ instrument panel
2610	null	left-hand headlamp
2615	null	right-hand headlamp
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MM01	null	engine earth point number 01

Direction Indicator, Side Repeaters, Hazard Warning Lamps

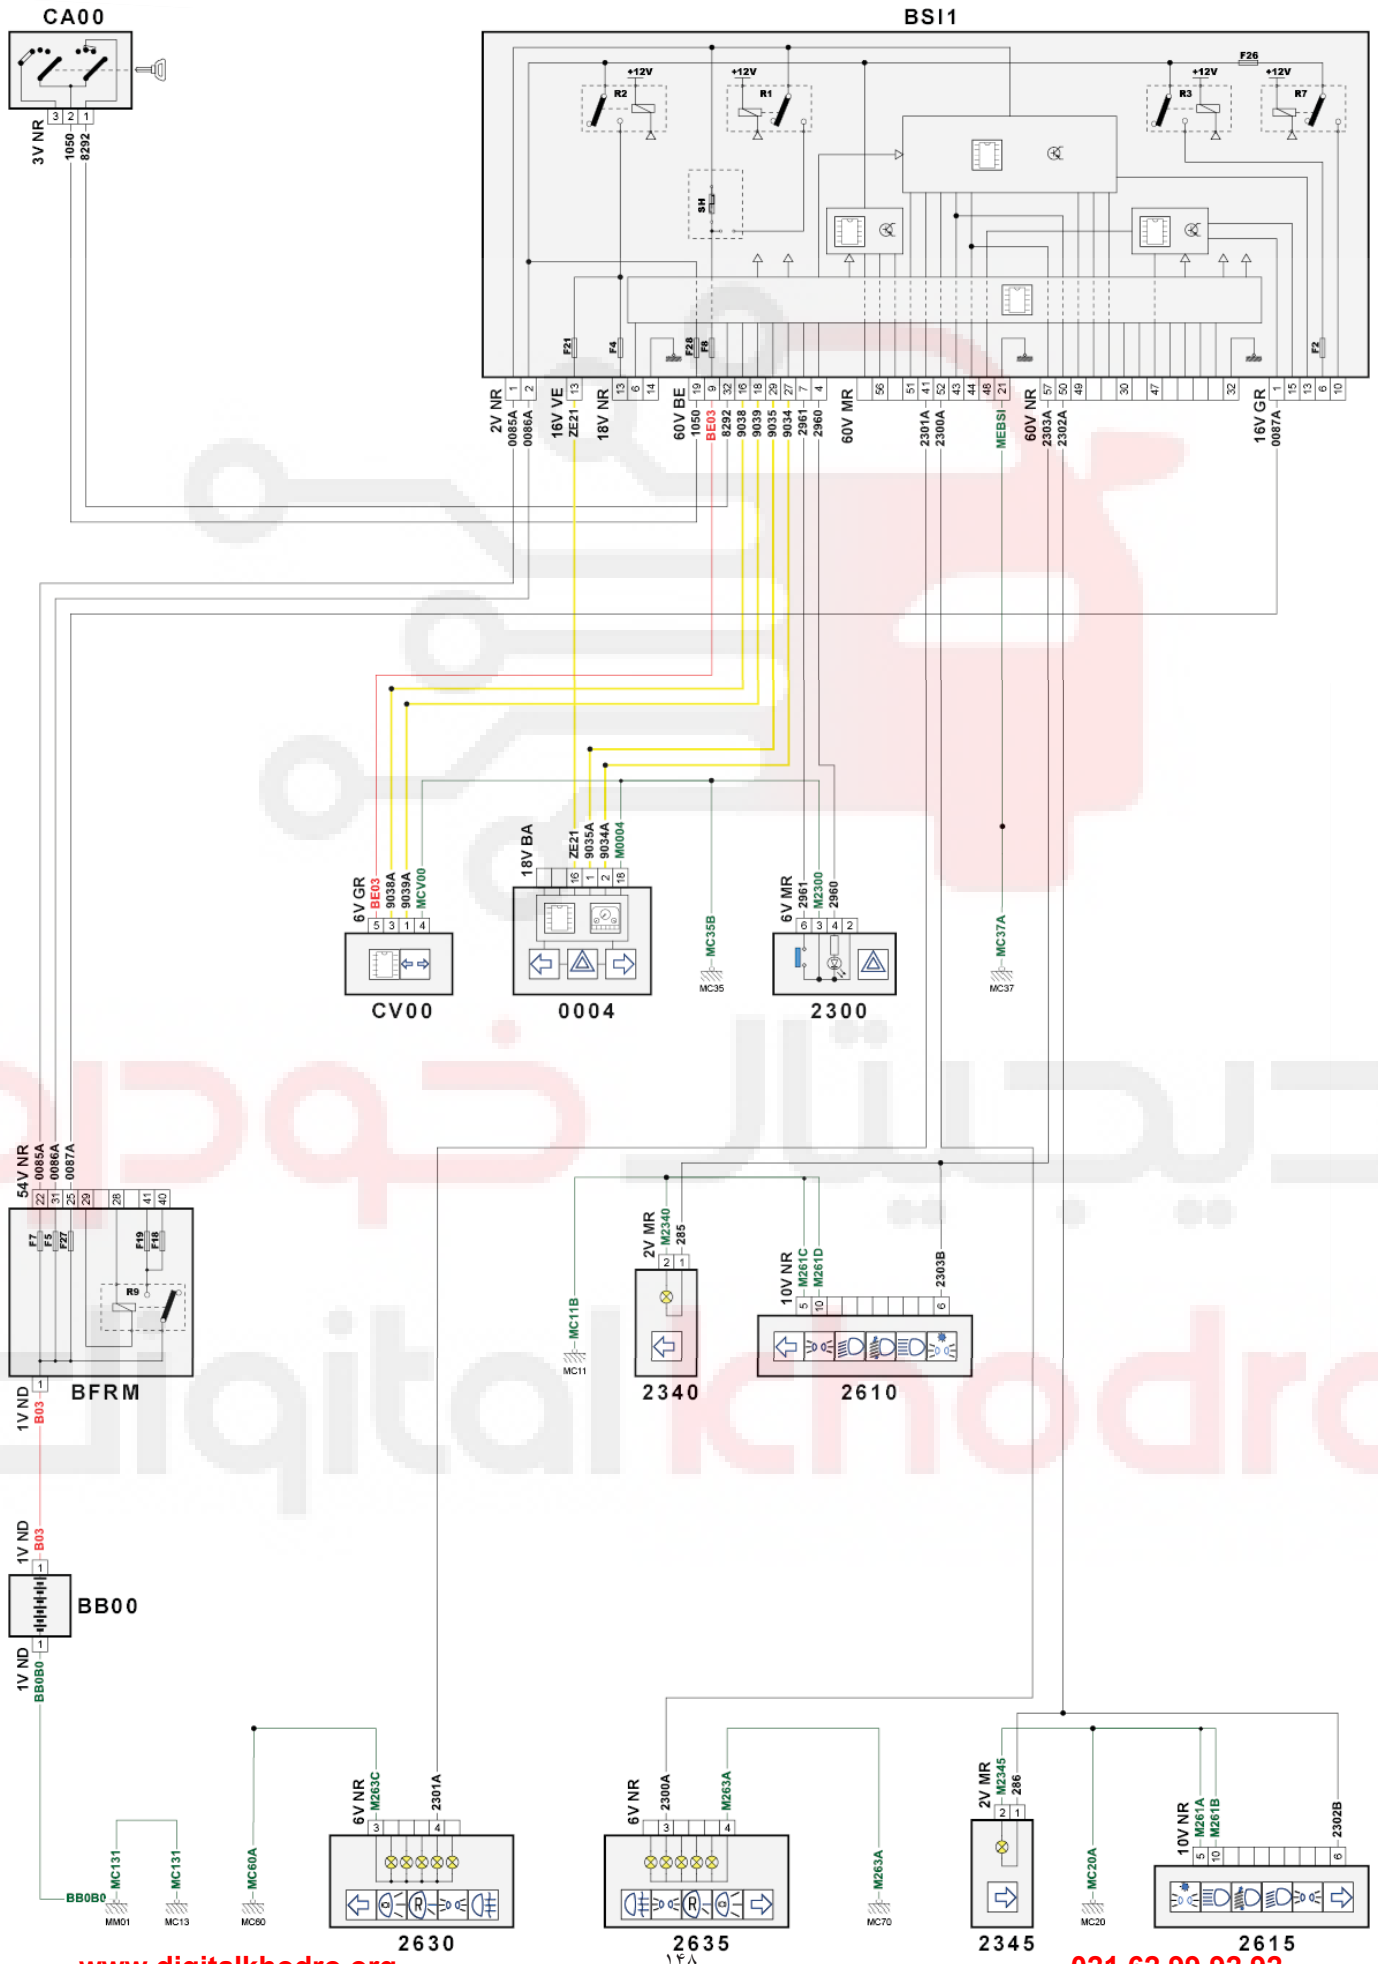

Direction Indicator, Side Repeaters, Hazard Warning Lamps


item code	description	information
0004	null	/ instrument panel
2300	null	hazard warning switch
2340	null	left-hand side repeater flasher
2345	null	right-hand side repeater flasher
2610	null	left-hand headlamp
2615	null	right-hand headlamp
2630	null	rear left lamp on body
2635	null	rear right lamp on body
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E230A	null	crimp one information (or equipotential 230) wire
E230B	null	crimp one information (or equipotential 230) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM60A	null	crimp earth (earth point number 60A)
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01

[illegible]

Direction Indicator, Side Repeaters, Hazard Warning Lamps


item code	description	information
0004	null	/ instrument panel
2300	null	hazard warning switch
2340	null	left-hand side repeater flasher
2345	null	right-hand side repeater flasher
2610	null	left-hand headlamp
2615	null	right-hand headlamp
2630	null	rear left lamp on body
2635	null	rear right lamp on body
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E230A	null	crimp one information (or equipotential 230) wire
E230B	null	crimp one information (or equipotential 230) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM60A	null	crimp earth (earth point number 60A)
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01

Horn

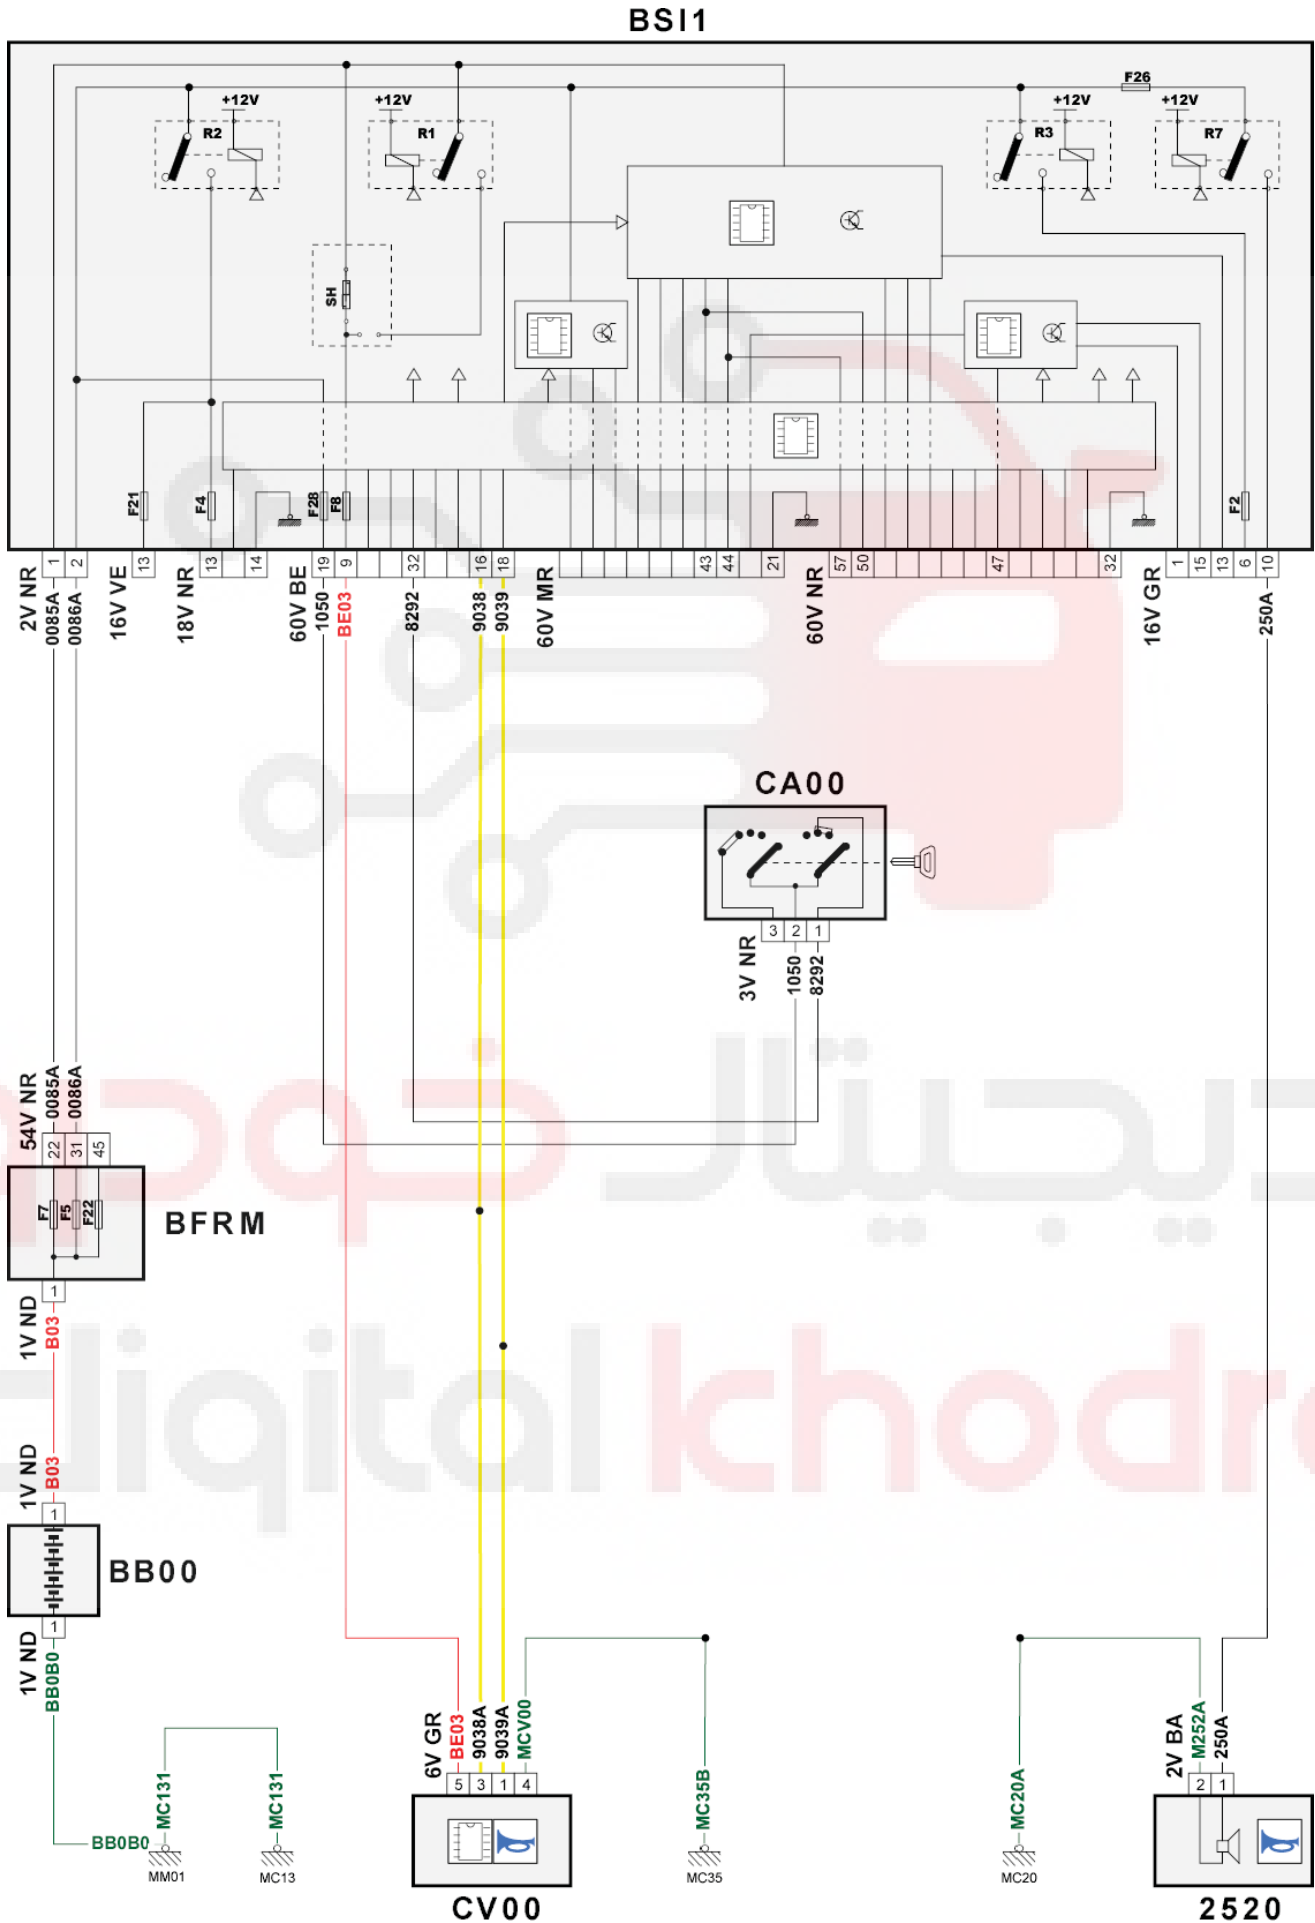


Horn

item code	description	information
2520	null	horn
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MM01	null	engine earth point number 01

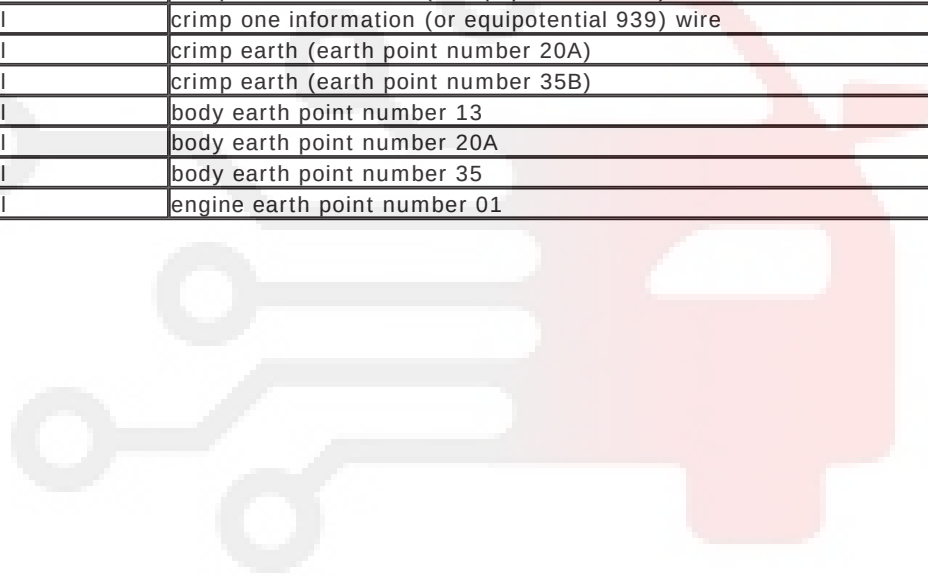


دیجیتال خودرو

digital khodro

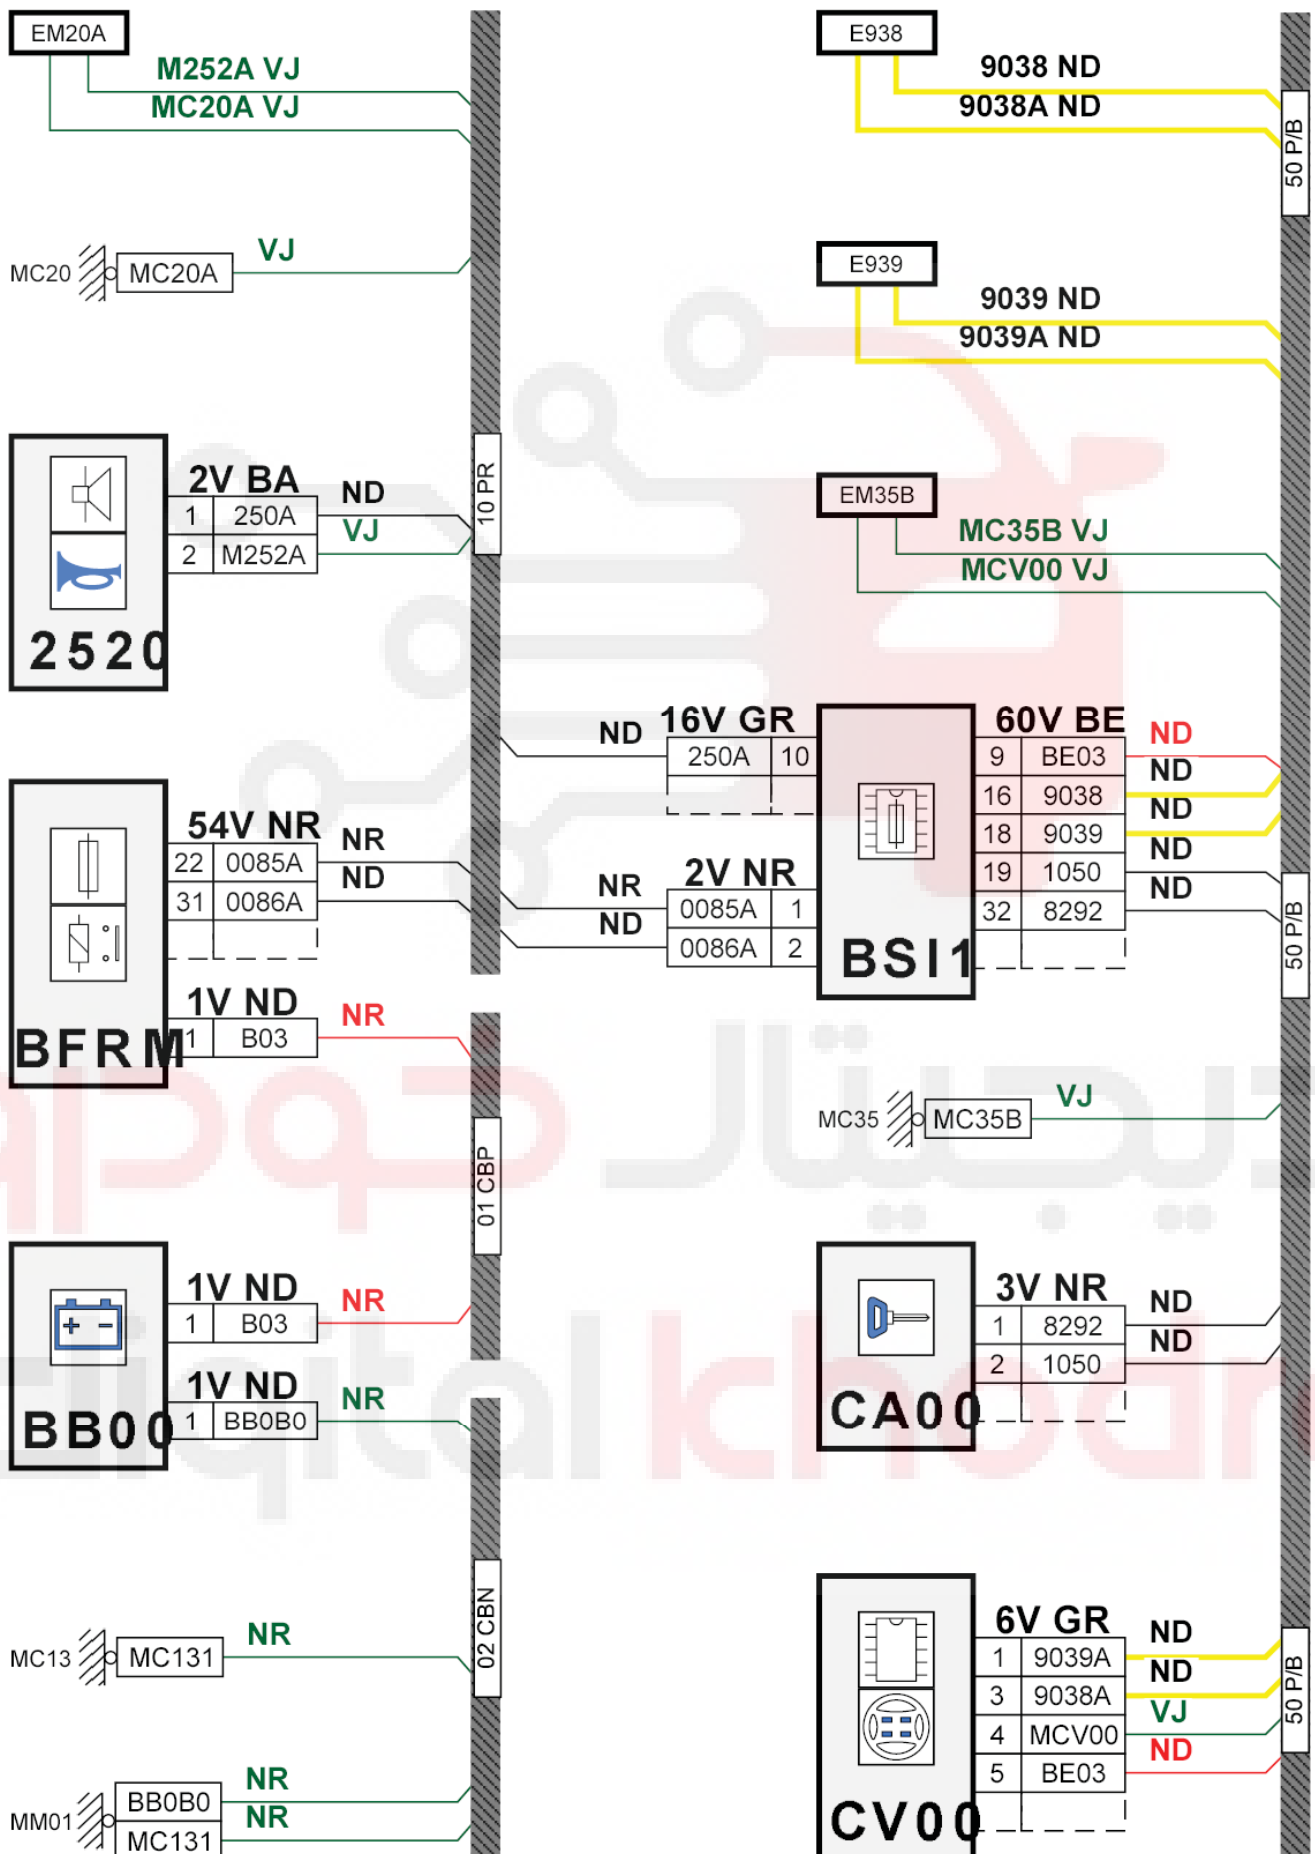


Reversing Lamps

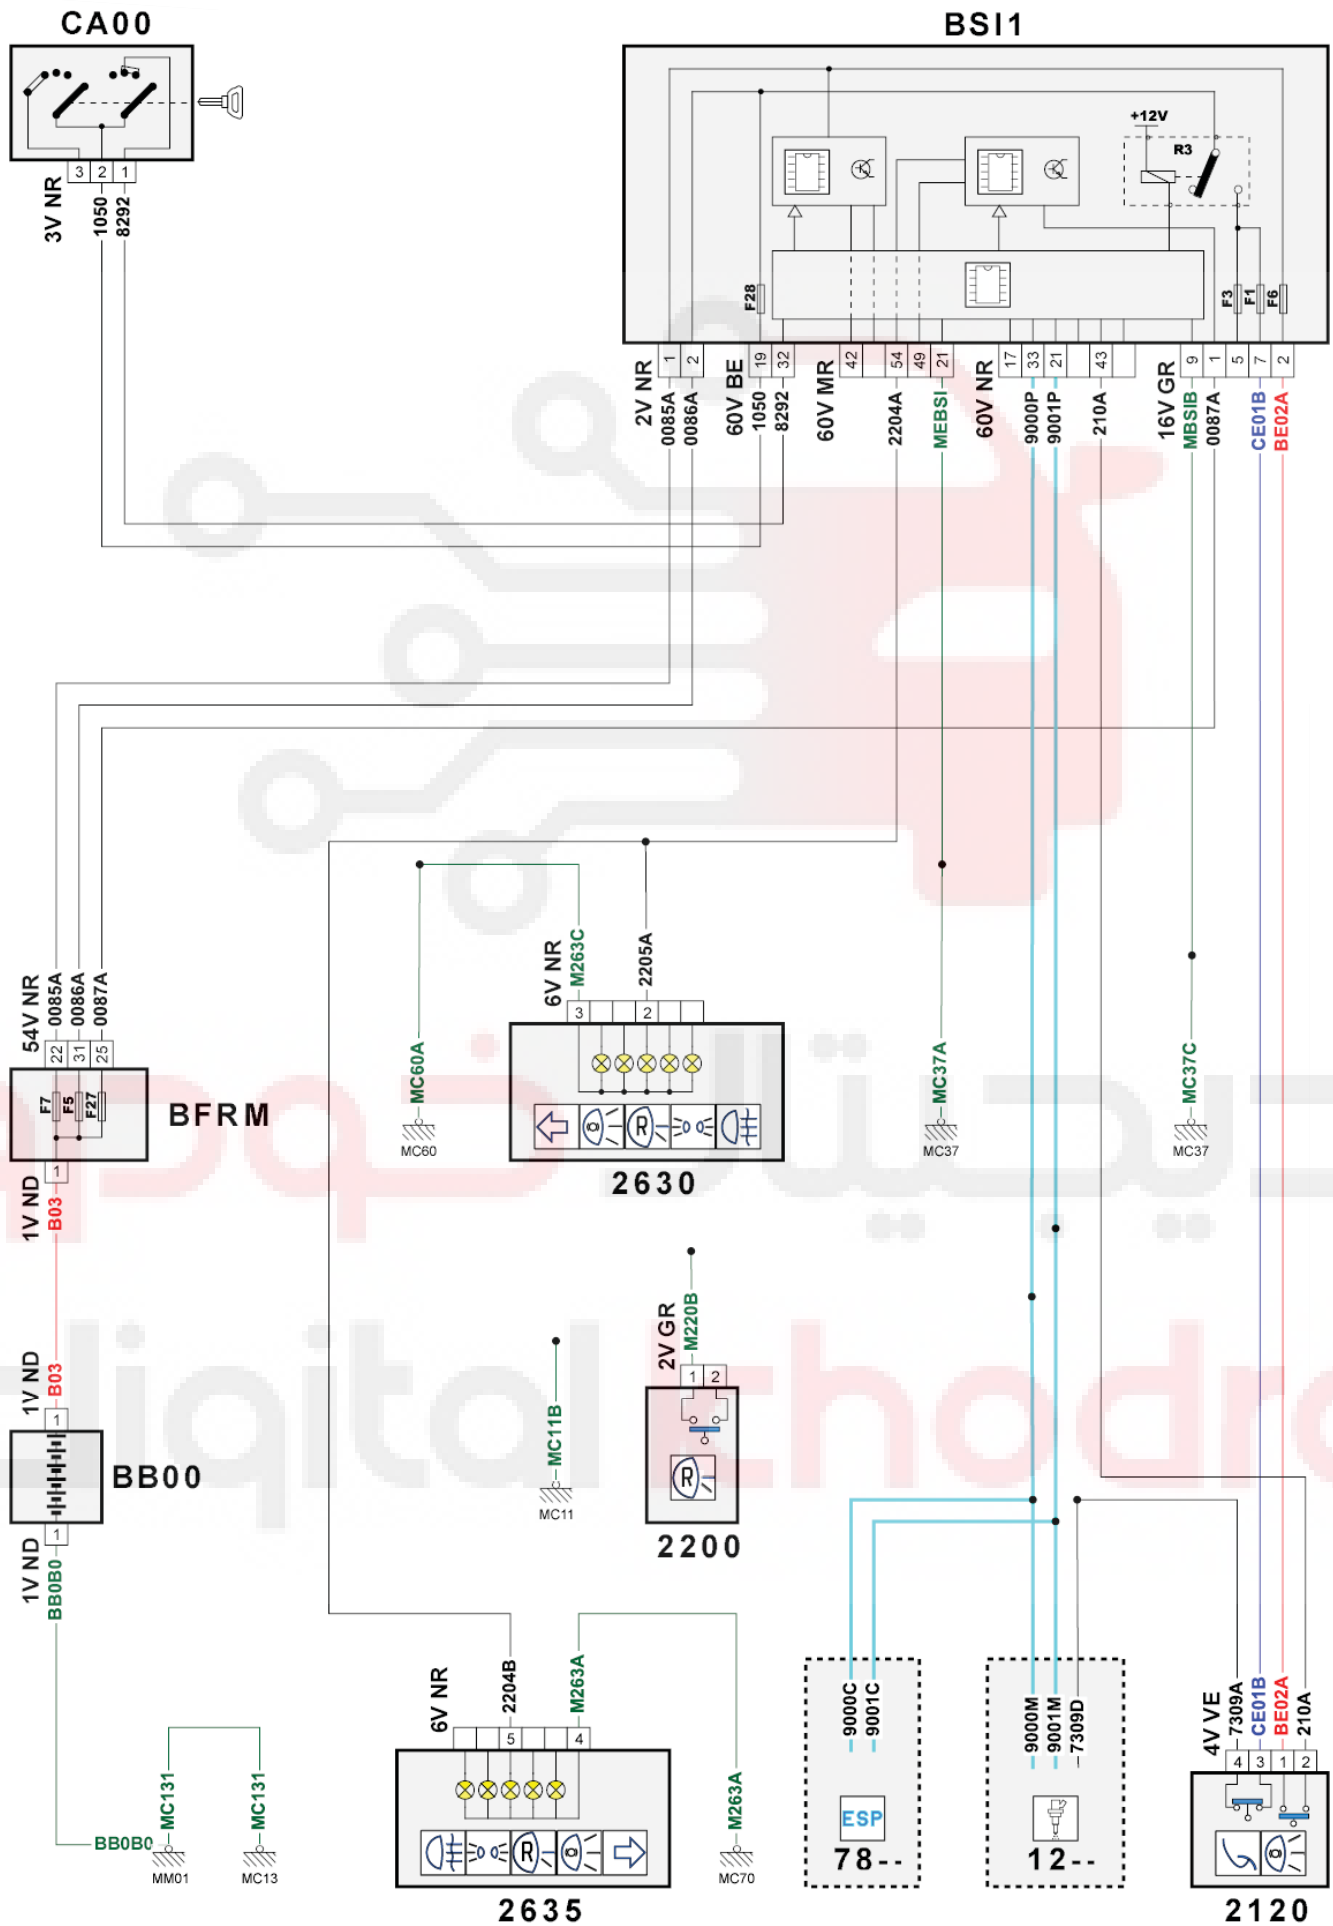

Reversing Lamps

item code	description	information
1320	null	engine ECU /
2120	null	dual function brake switch /
2200	null	reverse lamp switch
2630	null	rear left lamp on body
2635	null	rear right lamp on body
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E220	null	crimp one information (or equipotential 220) wire
E703A	null	crimp one information (or equipotential 703) wire
E869	null	crimp one information (or equipotential 869) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
EM11A	null	crimp earth (earth point number 11A)
EM37A	null	crimp earth (earth point number 37A)
EM37C	null	crimp earth (earth point number 37C)
EM60A	null	crimp earth (earth point number 60A)
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC37A	null	body earth point number 37A
MC37C	null	body earth point number 37
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01

Reversing Lamps

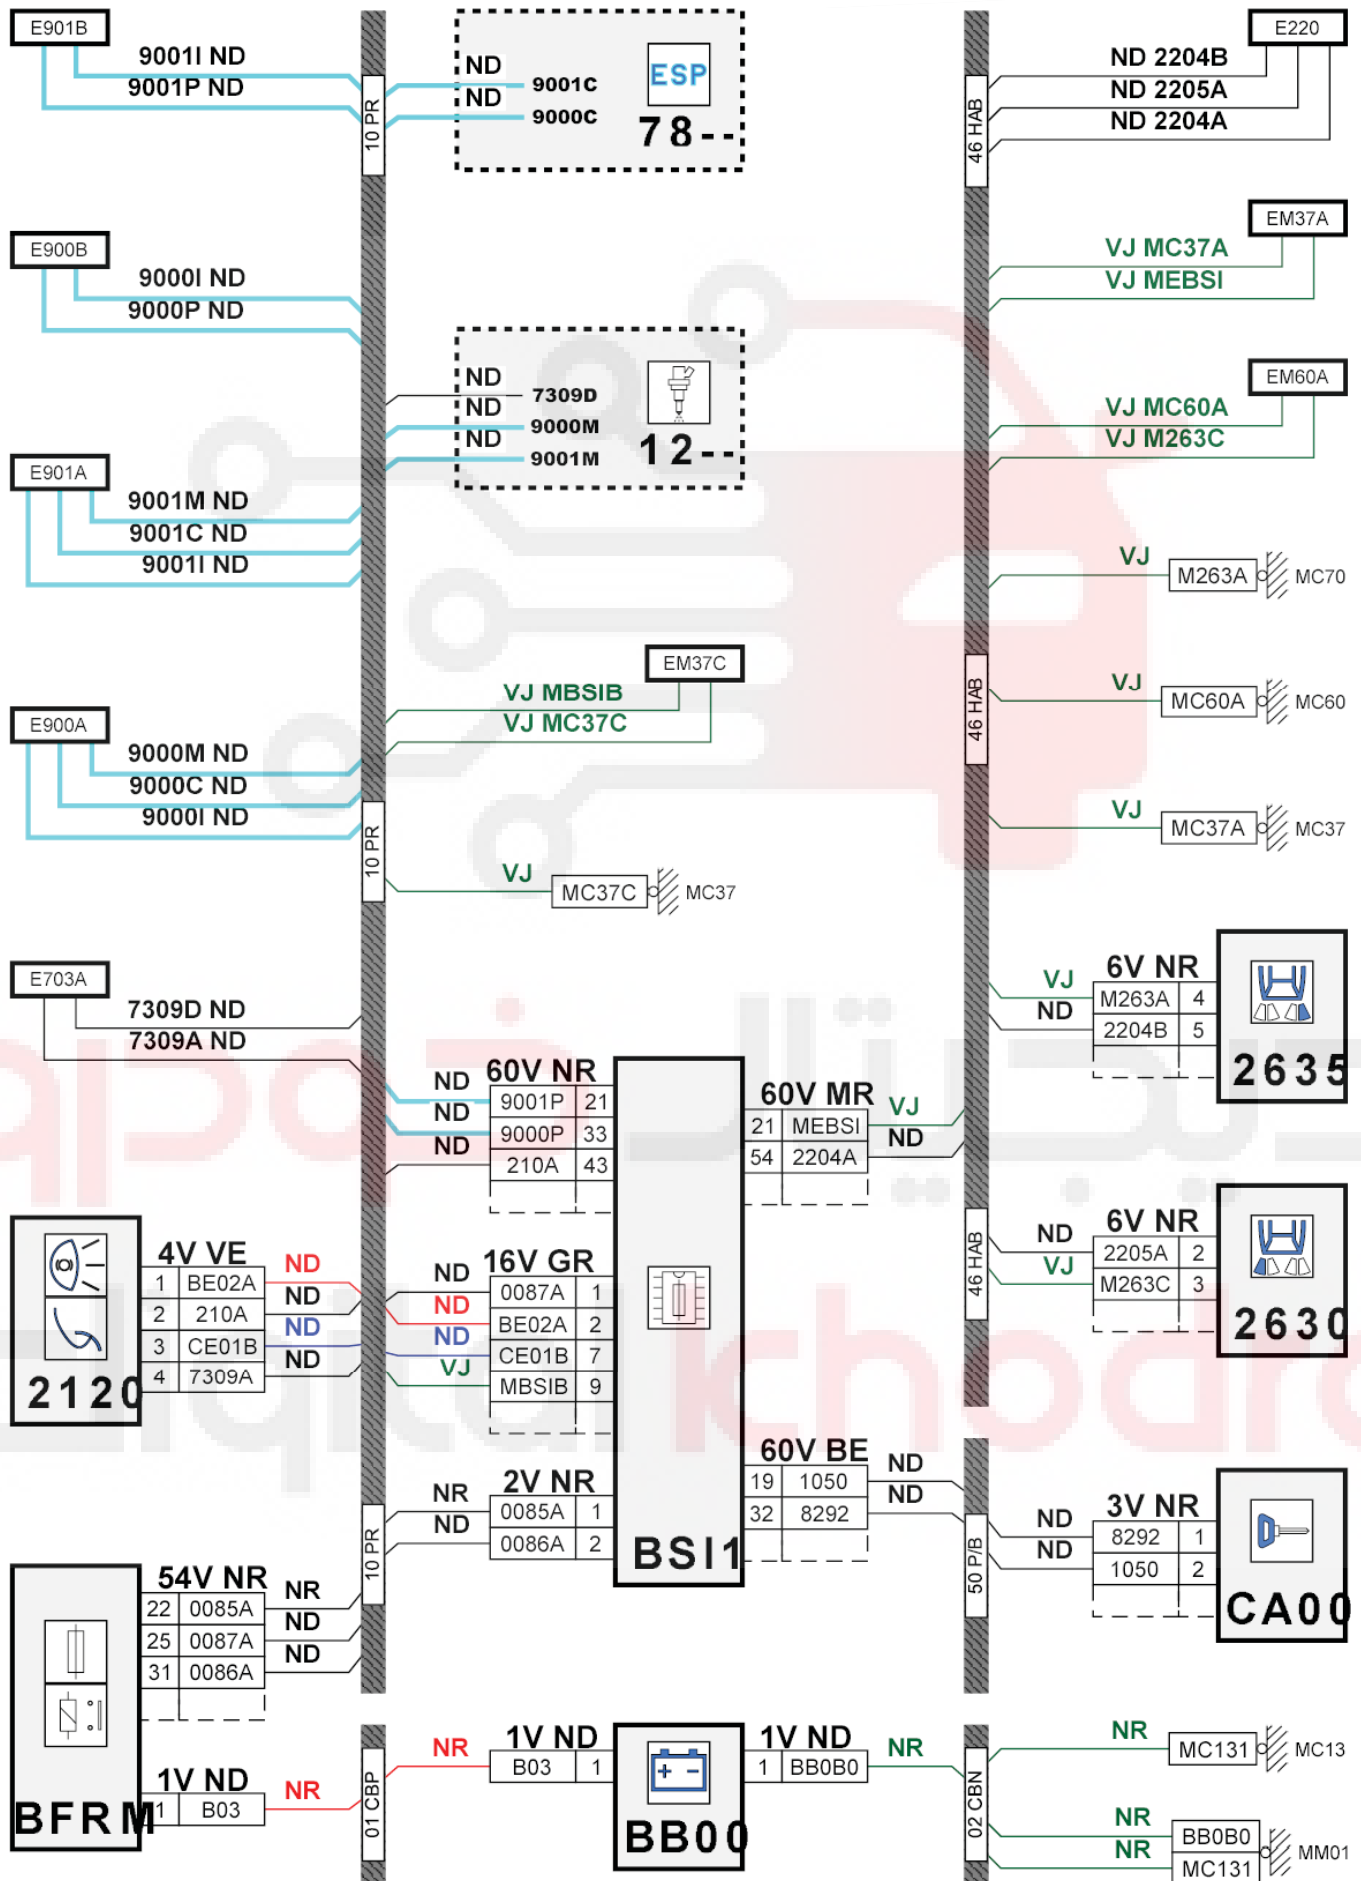

Reversing Lamps

item code	description	information
1320	null	engine ECU /
2120	null	dual function brake switch /
2630	null	rear left lamp on body
2635	null	rear right lamp on body
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E220	null	crimp one information (or equipotential 220) wire
E703A	null	crimp one information (or equipotential 703) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
EM37A	null	crimp earth (earth point number 37A)
EM37C	null	crimp earth (earth point number 37C)
EM60A	null	crimp earth (earth point number 60A)
MC13	null	body earth point number 13
MC37A	null	body earth point number 37A
MC37C	null	body earth point number 37
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01

Dipped & Main Head Lamps

item code	description	information
0004	null	/ instrument panel
2610	null	left-hand headlamp
2615	null	right-hand headlamp
2630	null	rear left lamp on body
2633	null	right-hand number plate lamp
2635	null	rear right lamp on body
2636	null	left-hand number plate lamp
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BS11	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E271A	null	crimp one information (or equipotential 271) wire
E292	null	crimp one information (or equipotential 292) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EC02A	null	splice of an "ignition +" protected by fuse no. 02
EM10B	null	crimp earth (earth point number 10B)
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM60A	null	crimp earth (earth point number 60A)
MC10A	null	body earth point number 10A
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01

Dipped & Main Head Lamps

