

Dipped & Main Head Lamps

item code	description	information
0004	null	/ instrument panel
2610	null	left-hand headlamp
2615	null	right-hand headlamp
2630	null	rear left lamp on body
2633	null	right-hand number plate lamp
2635	null	rear right lamp on body
2636	null	left-hand number plate lamp
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E271A	null	crimp one information (or equipotential 271) wire
E292	null	crimp one information (or equipotential 292) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EC02A	null	splice of an "ignition +" protected by fuse no. 02
EM10B	null	crimp earth (earth point number 10B)
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM60A	null	crimp earth (earth point number 60A)
MC10A	null	body earth point number 10A
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01




Fog Lamps

item code	description	information
0004	null	/ instrument panel
2630	null	rear left lamp on body
2670	null	front left foglamp
2675	null	front right foglamp
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM10B	null	crimp earth (earth point number 10B)
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM60A	null	crimp earth (earth point number 60A)
MC10A	null	body earth point number 10A
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01

Fog Lamps

item code	description	information
0004	null	/ instrument panel
2630	null	rear left lamp on body
2670	null	front left foglamp
2675	null	front right foglamp
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM10B	null	crimp earth (earth point number 10B)
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM60A	null	crimp earth (earth point number 60A)
MC10A	null	body earth point number 10A
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01

Height Corrector & Headlamp Correctors

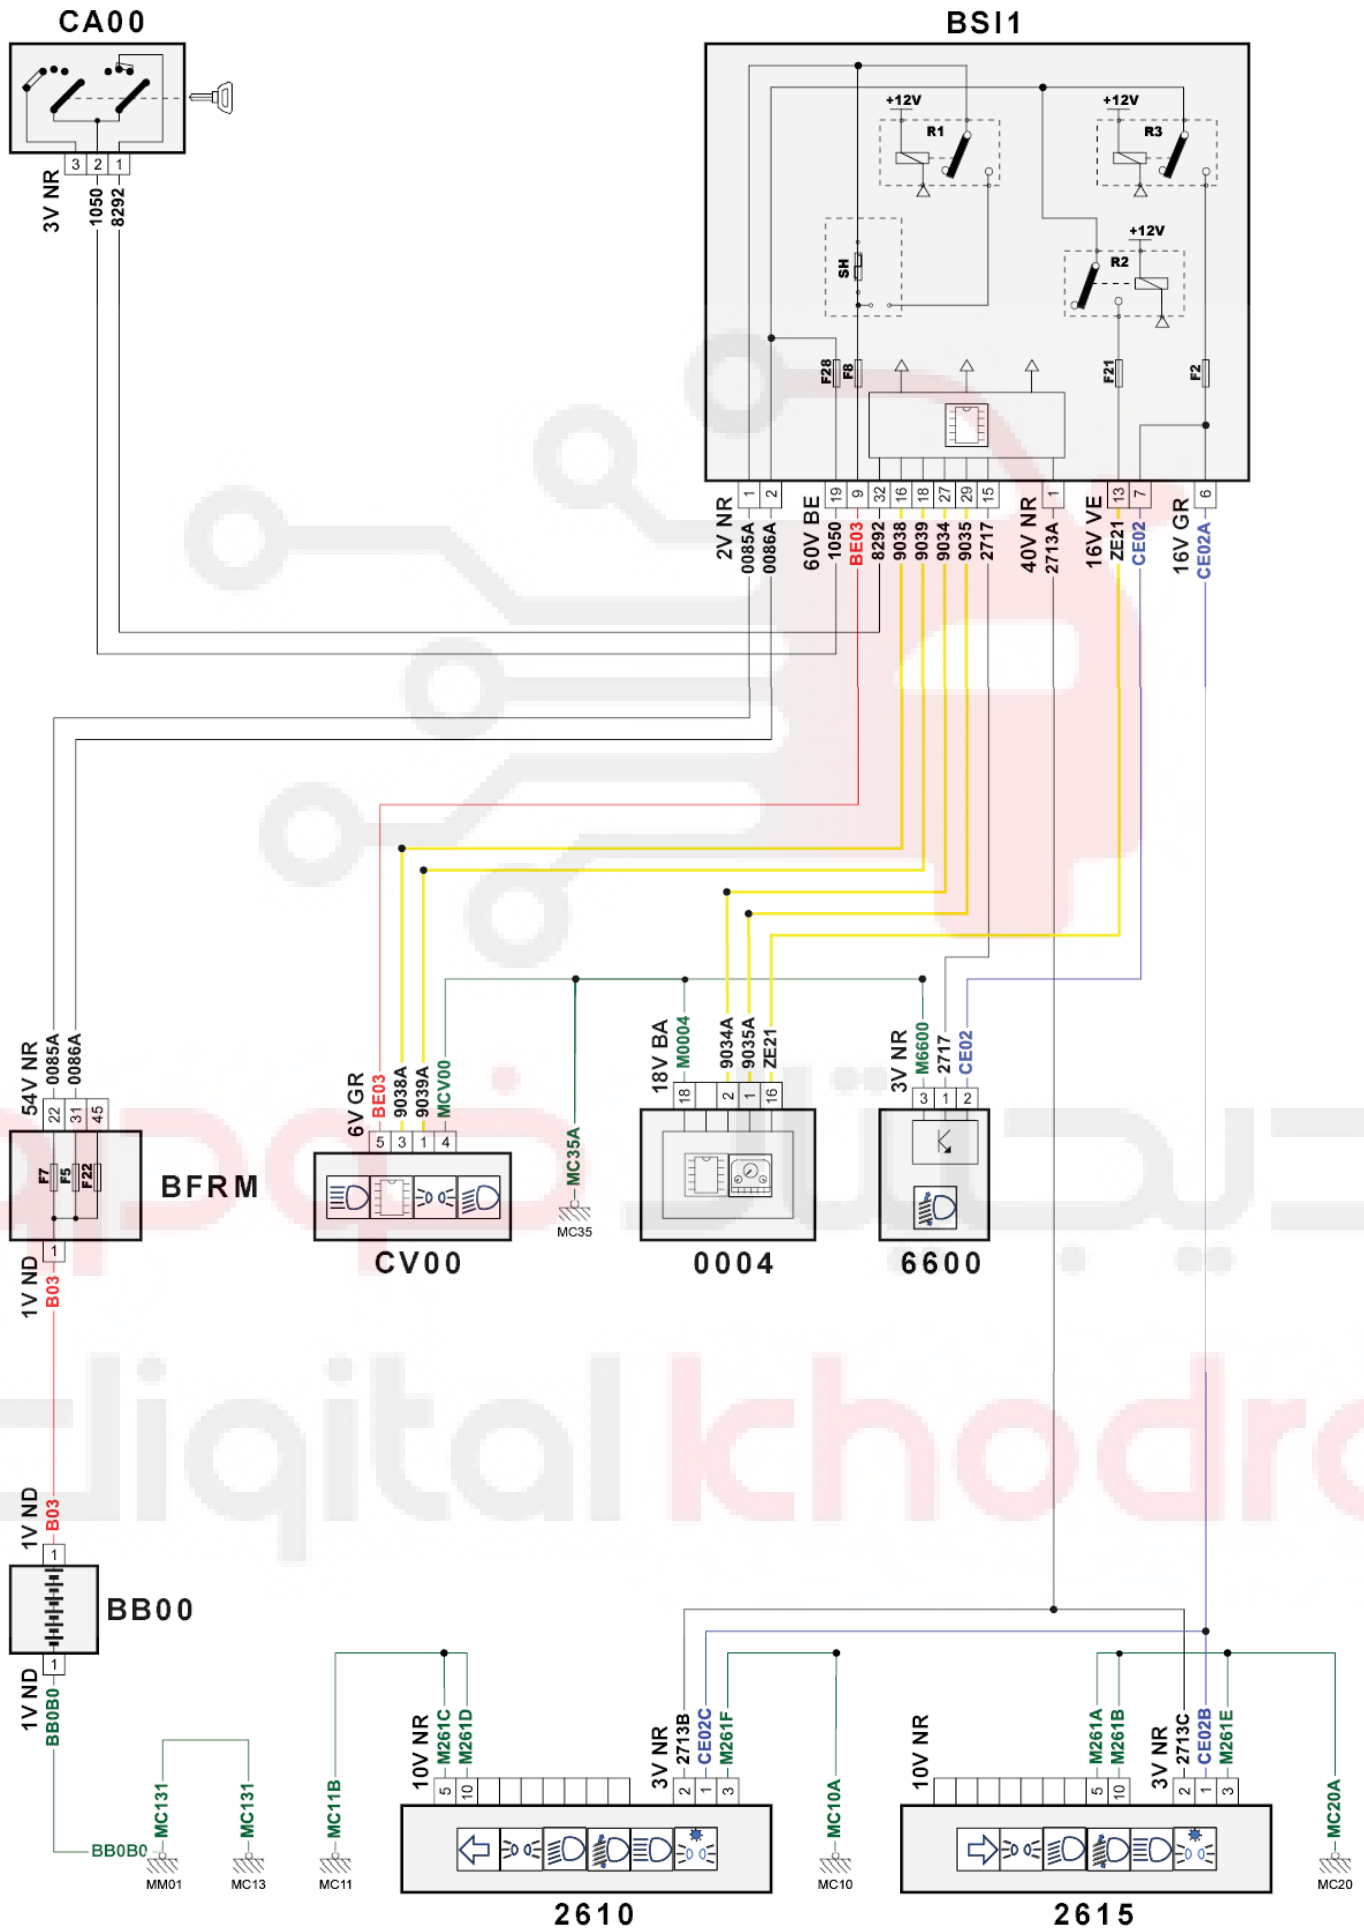


D3CZHJLR

Height Corrector & Headlamp Correctors

item code	description	information
0004	null	/ instrument panel
2610	null	left-hand headlamp
2615	null	right-hand headlamp
6600	null	front headlamps beam corrector switch
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E271A	null	crimp one information (or equipotential 271) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EC02A	null	splice of an "ignition +" protected by fuse no. 02
EM10B	null	crimp earth (earth point number 10B)
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35A	null	crimp earth (earth point number 35A)
EM35B	null	crimp earth (earth point number 35B)
MC10A	null	body earth point number 10A
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MM01	null	engine earth point number 01

Height Corrector & Headlamp Correctors

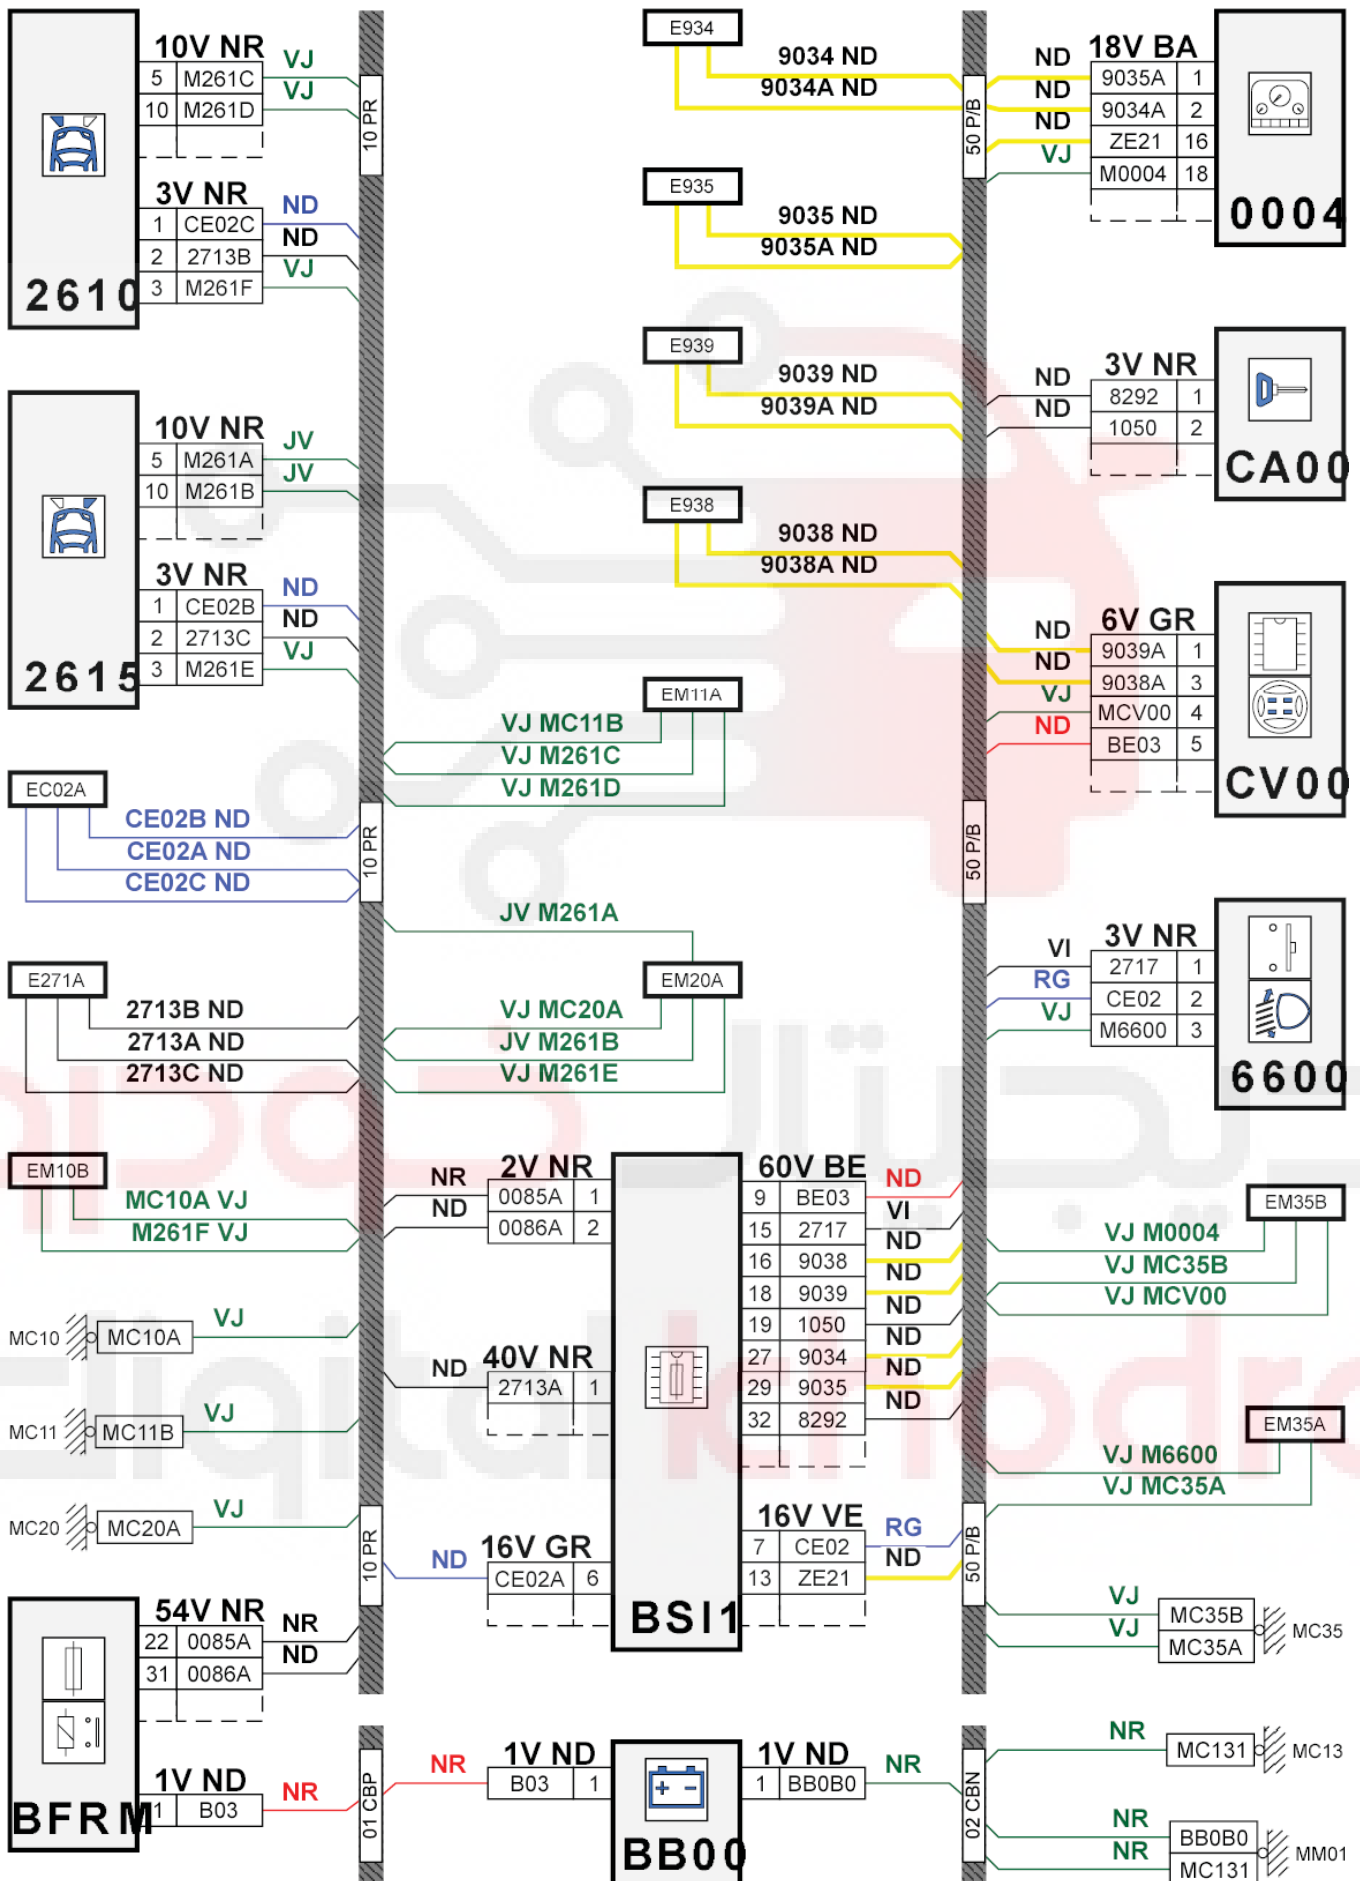

Height Corrector & Headlamp Correctors

item code	description	information
0004	null	/ instrument panel
2610	null	left-hand headlamp
2615	null	right-hand headlamp
6600	null	front headlamps beam corrector switch
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E271A	null	crimp one information (or equipotential 271) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EC02A	null	splice of an "ignition +" protected by fuse no. 02
EM10B	null	crimp earth (earth point number 10B)
EM11A	null	crimp earth (earth point number 11A)
EM20A	null	crimp earth (earth point number 20A)
EM35A	null	crimp earth (earth point number 35A)
EM35B	null	crimp earth (earth point number 35B)
MC10A	null	body earth point number 10A
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MM01	null	engine earth point number 01


Electronic Injection

item code	description	information
0004	null	/ instrument panel
1010	null	starter motor
1020	null	alternator
1115	null	cylinder reference sensor /
1120	null	knock sensor /
1135	null	ignition coil
1211	null	fuel pump - gauge assembly
1215	null	purge canister solenoid valve
1220	null	coolant temperature sensor
1261	null	accelerator pedal position sensor /
1262	null	Motorised throttle housing
1268	null	variable timing electrovalve 2
12C5	null	oil vapour recirculation circuit heater 1
1313	null	engine speed sensor
1320	null	engine ECU /
1331	null	no. 1 cylinder injector
1332	null	no. 2 cylinder injector
1333	null	no. 3 cylinder injector
1334	null	no. 4 cylinder injector
1352	null	front downstream oxygen sensor
1353	null	front upstream oxygen sensor
1356	null	braking circuit vacuum sensor /
13A3	null	inlet air pressure and temperature sensor
13B6	null	vacuum pump control relay
1522	null	dual-speed fan assembly control ECU
2120	null	dual function brake switch /
4110	null	engine oil pressure switch
7126	null	electric power steering ECU /
7306	null	cruise control safety switch (clutch)
7800	null	calculateur controle de stabilite
8007	null	pressure switch/refrigerant pressure sensor
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BS11	null	built-in systems interface
CA00	null	ignition switch
E115	null	crimp one information (or equipotential 115) wire
E132	null	crimp one information (or equipotential 132) wire
E135	null	crimp one information (or equipotential 135) wire
E809A	null	crimp one information (or equipotential 809A) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EC03A	null	splice of an "ignition +" protected by fuse no. 03A
EM10B	null	crimp earth (earth point number 10B)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
MC10A	null	body earth point number 10A
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37C	null	body earth point number 37
MM01	null	engine earth point number 01
MM02	null	engine earth point number 02

Electronic Injection

item code	description	information
0004	null	/ instrument panel
1010	null	starter motor
1020	null	alternator
1115	null	cylinder reference sensor /
1120	null	knock sensor /
1135	null	ignition coil
1211	null	fuel pump - gauge assembly
1215	null	purge canister solenoid valve
1220	null	coolant temperature sensor
1261	null	accelerator pedal position sensor /
1262	null	Motorised throttle housing
1268	null	variable timing electrovalve 2
12C5	null	oil vapour recirculation circuit heater 1
1313	null	engine speed sensor
1320	null	engine ECU /
1331	null	no. 1 cylinder injector
1332	null	no. 2 cylinder injector
1333	null	no. 3 cylinder injector
1334	null	no. 4 cylinder injector
1352	null	front downstream oxygen sensor
1353	null	front upstream oxygen sensor
1356	null	braking circuit vacuum sensor /
13A3	null	inlet air pressure and temperature sensor
13B6	null	vacuum pump control relay
1522	null	dual-speed fan assembly control ECU
2120	null	dual function brake switch /
4110	null	engine oil pressure switch
7126	null	electric power steering ECU /
7306	null	cruise control safety switch (clutch)
7800	null	calculateur controle de stabilite
8007	null	pressure switch/refrigerant pressure sensor
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E115	null	crimp one information (or equipotential 115) wire
E132	null	crimp one information (or equipotential 132) wire
E135	null	crimp one information (or equipotential 135) wire
E809A	null	crimp one information (or equipotential 809A) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EC03A	null	splice of an "ignition +" protected by fuse no. 03A
EM10B	null	crimp earth (earth point number 10B)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
MC10A	null	body earth point number 10A
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37C	null	body earth point number 37
MM01	null	engine earth point number 01
MM02	null	engine earth point number 02


Engine Cooling

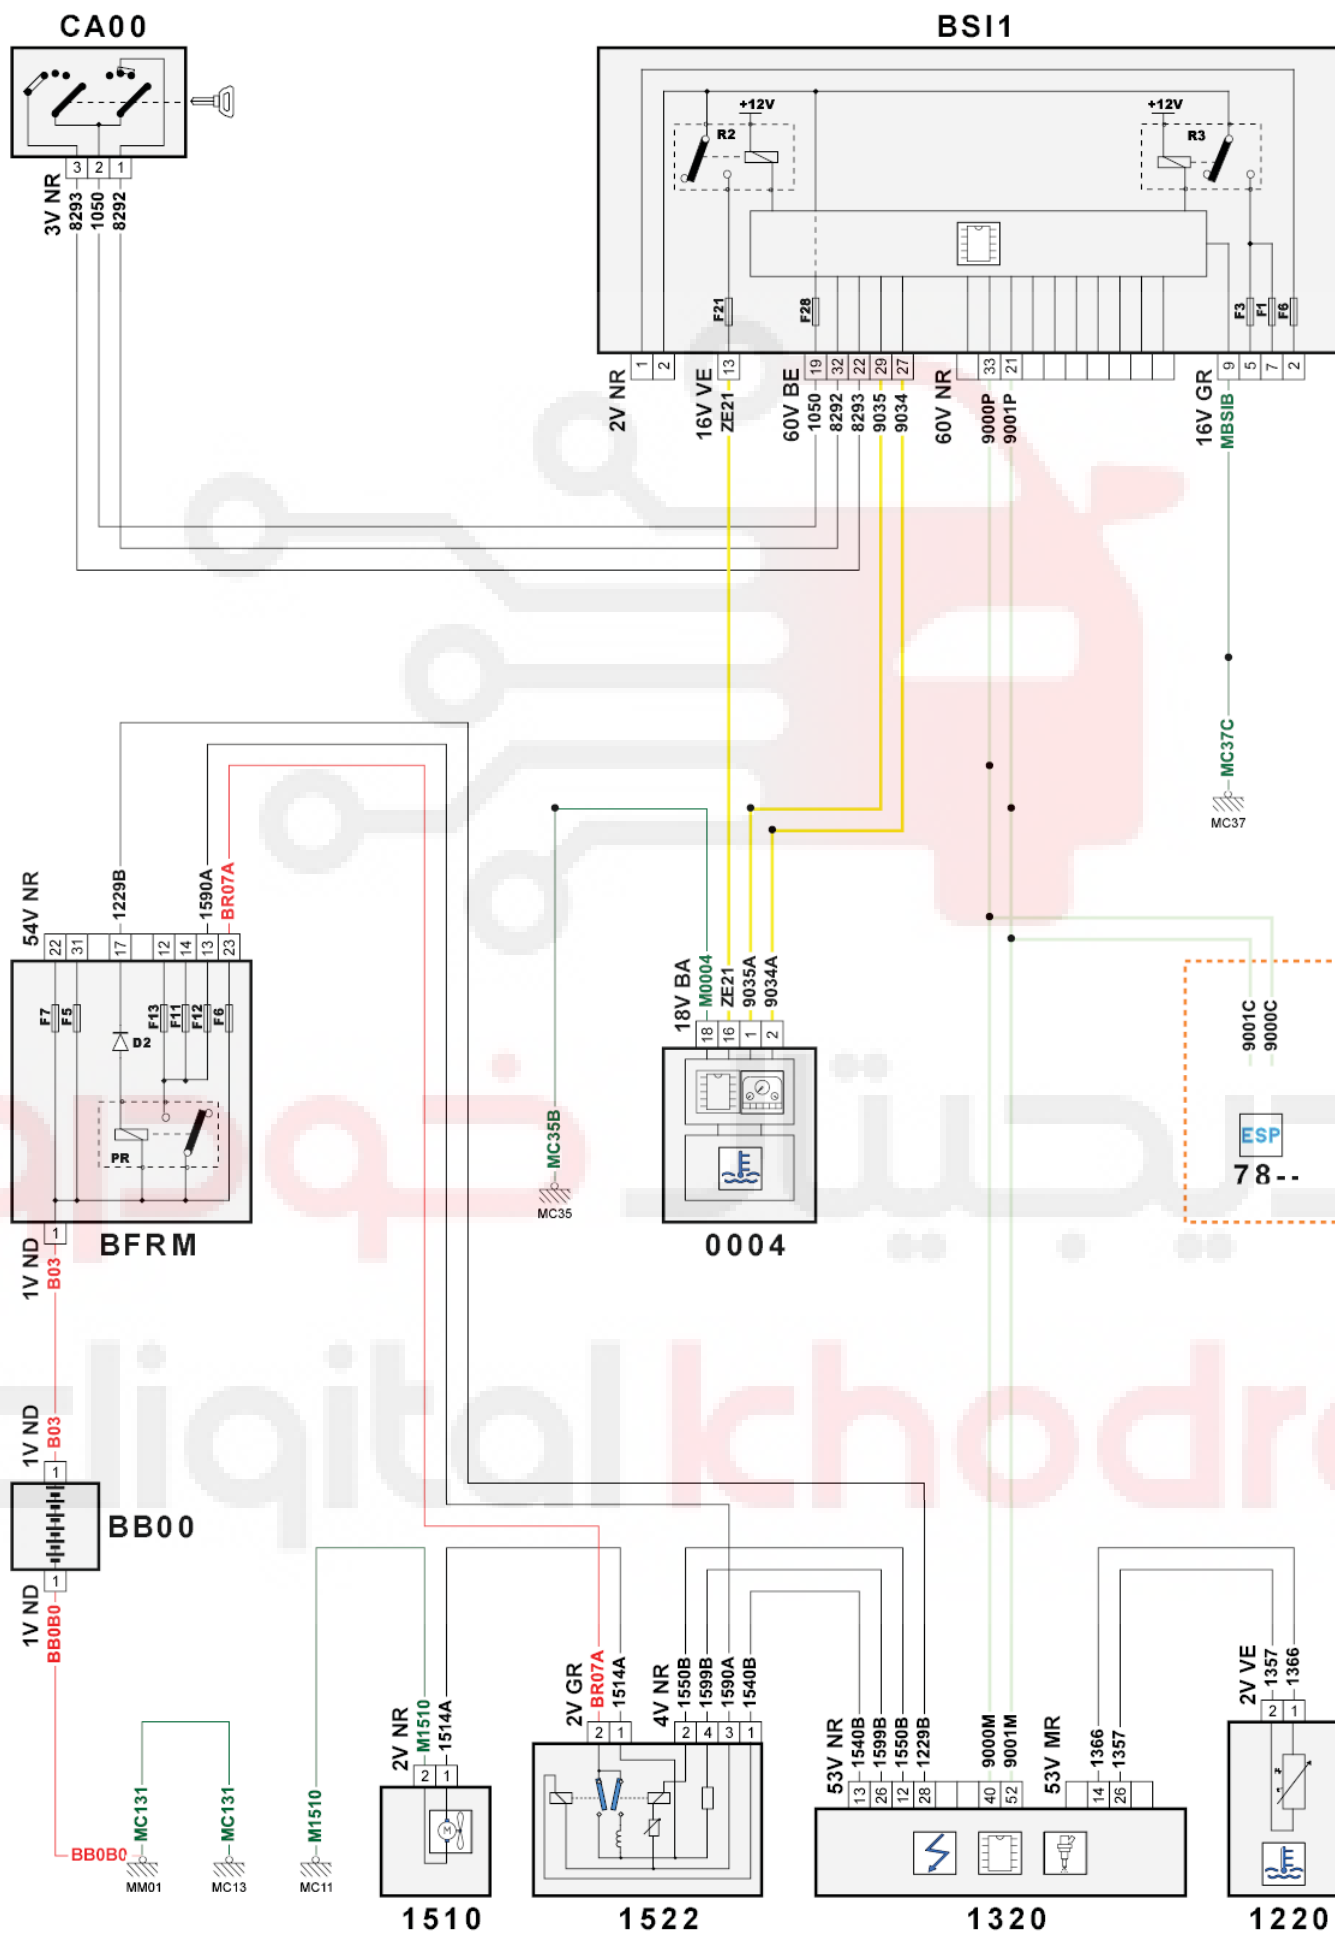

Engine Cooling

item code	description	information
0004	null	/ instrument panel
1220	null	coolant temperature sensor
1320	null	engine ECU /
1510	null	fan assembly /
1522	null	dual-speed fan assembly control ECU
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
MC11A	null	body earth point number 11A
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37C	null	body earth point number 37
MM01	null	engine earth point number 01


Engine Cooling

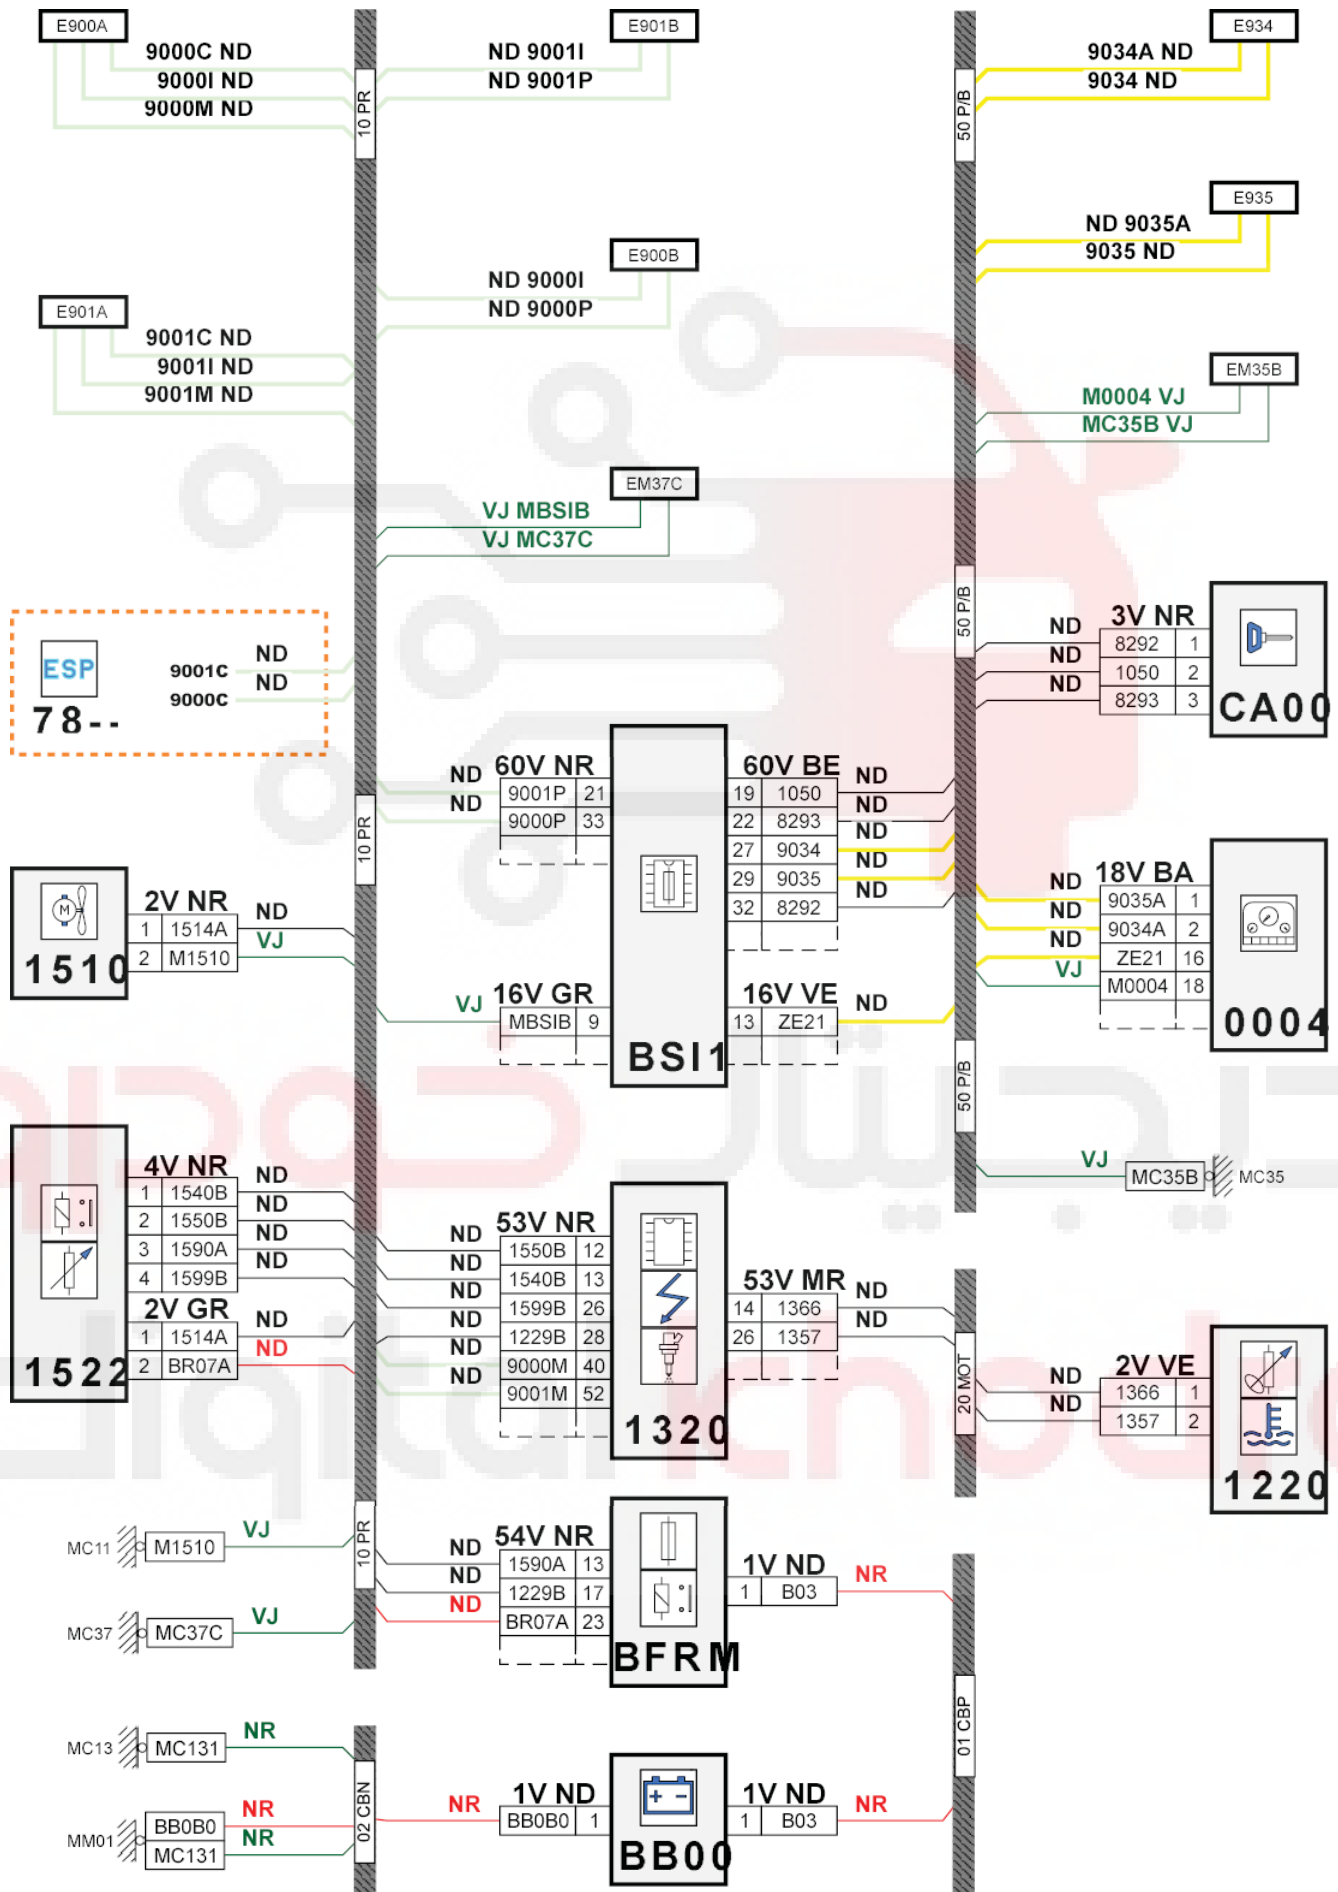

Engine Cooling

item code	description	information
0004	null	/ instrument panel
1220	null	coolant temperature sensor
1320	null	engine ECU /
1510	null	fan assembly /
1522	null	dual-speed fan assembly control ECU
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
MC11A	null	body earth point number 11A
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37C	null	body earth point number 37
MM01	null	engine earth point number 01


Engine Starting

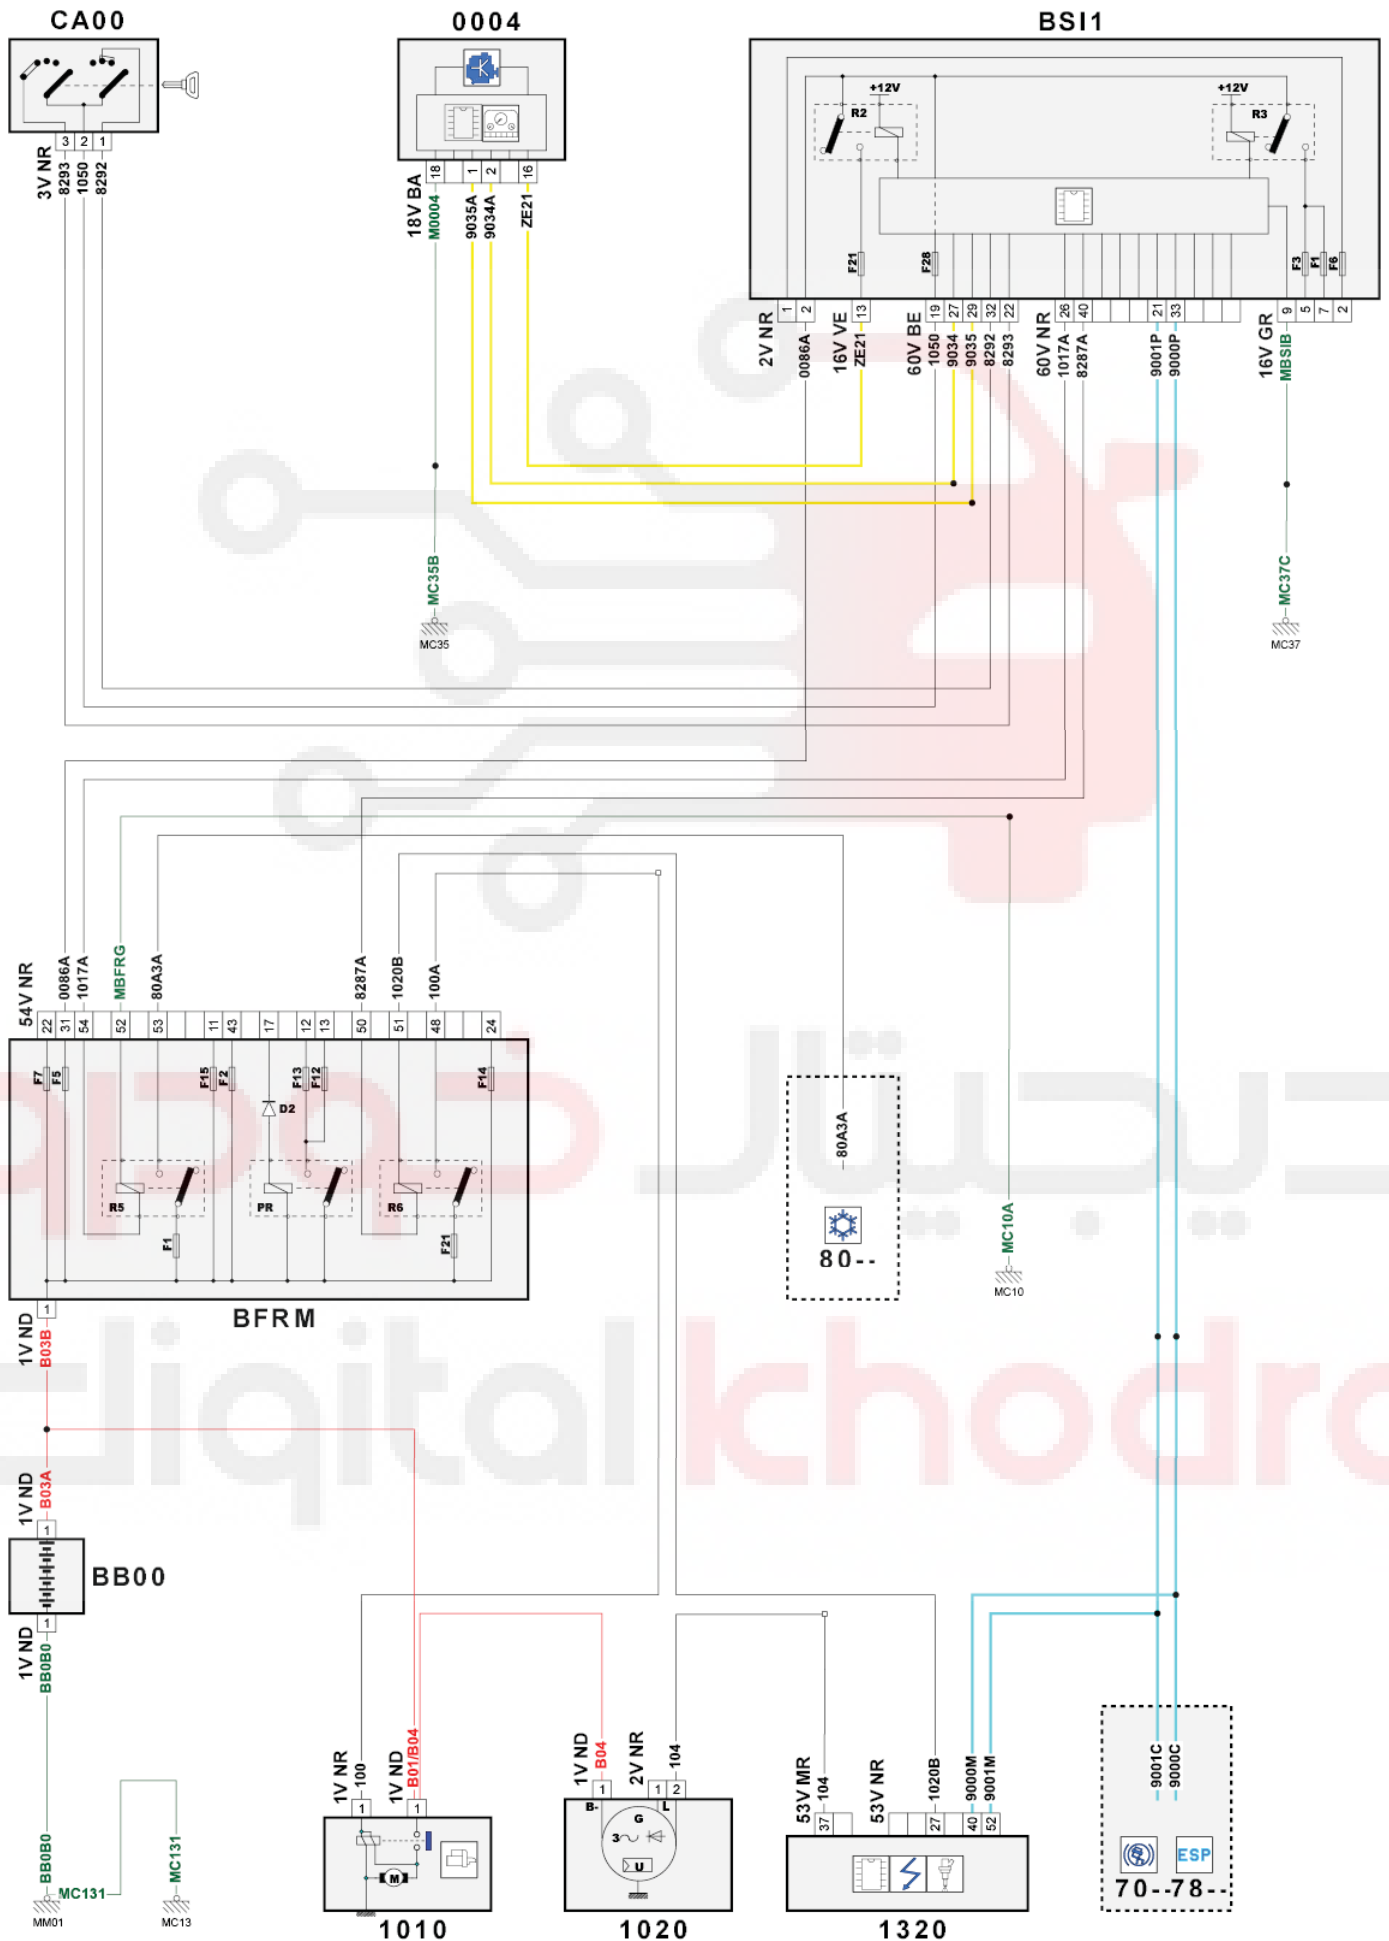

Engine Starting

item code	description	information
0004	null	/ instrument panel
1010	null	starter motor
1020	null	alternator
1320	null	engine ECU /
7800	null	calculateur controle de stabilite
8060	null	heater unit
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EB01	null	splice of a "battery +" protected by fuse no. 01
EM10B	null	crimp earth (earth point number 10B)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
MC10A	null	body earth point number 10A
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37C	null	body earth point number 37
MM01	null	engine earth point number 01

Engine Starting

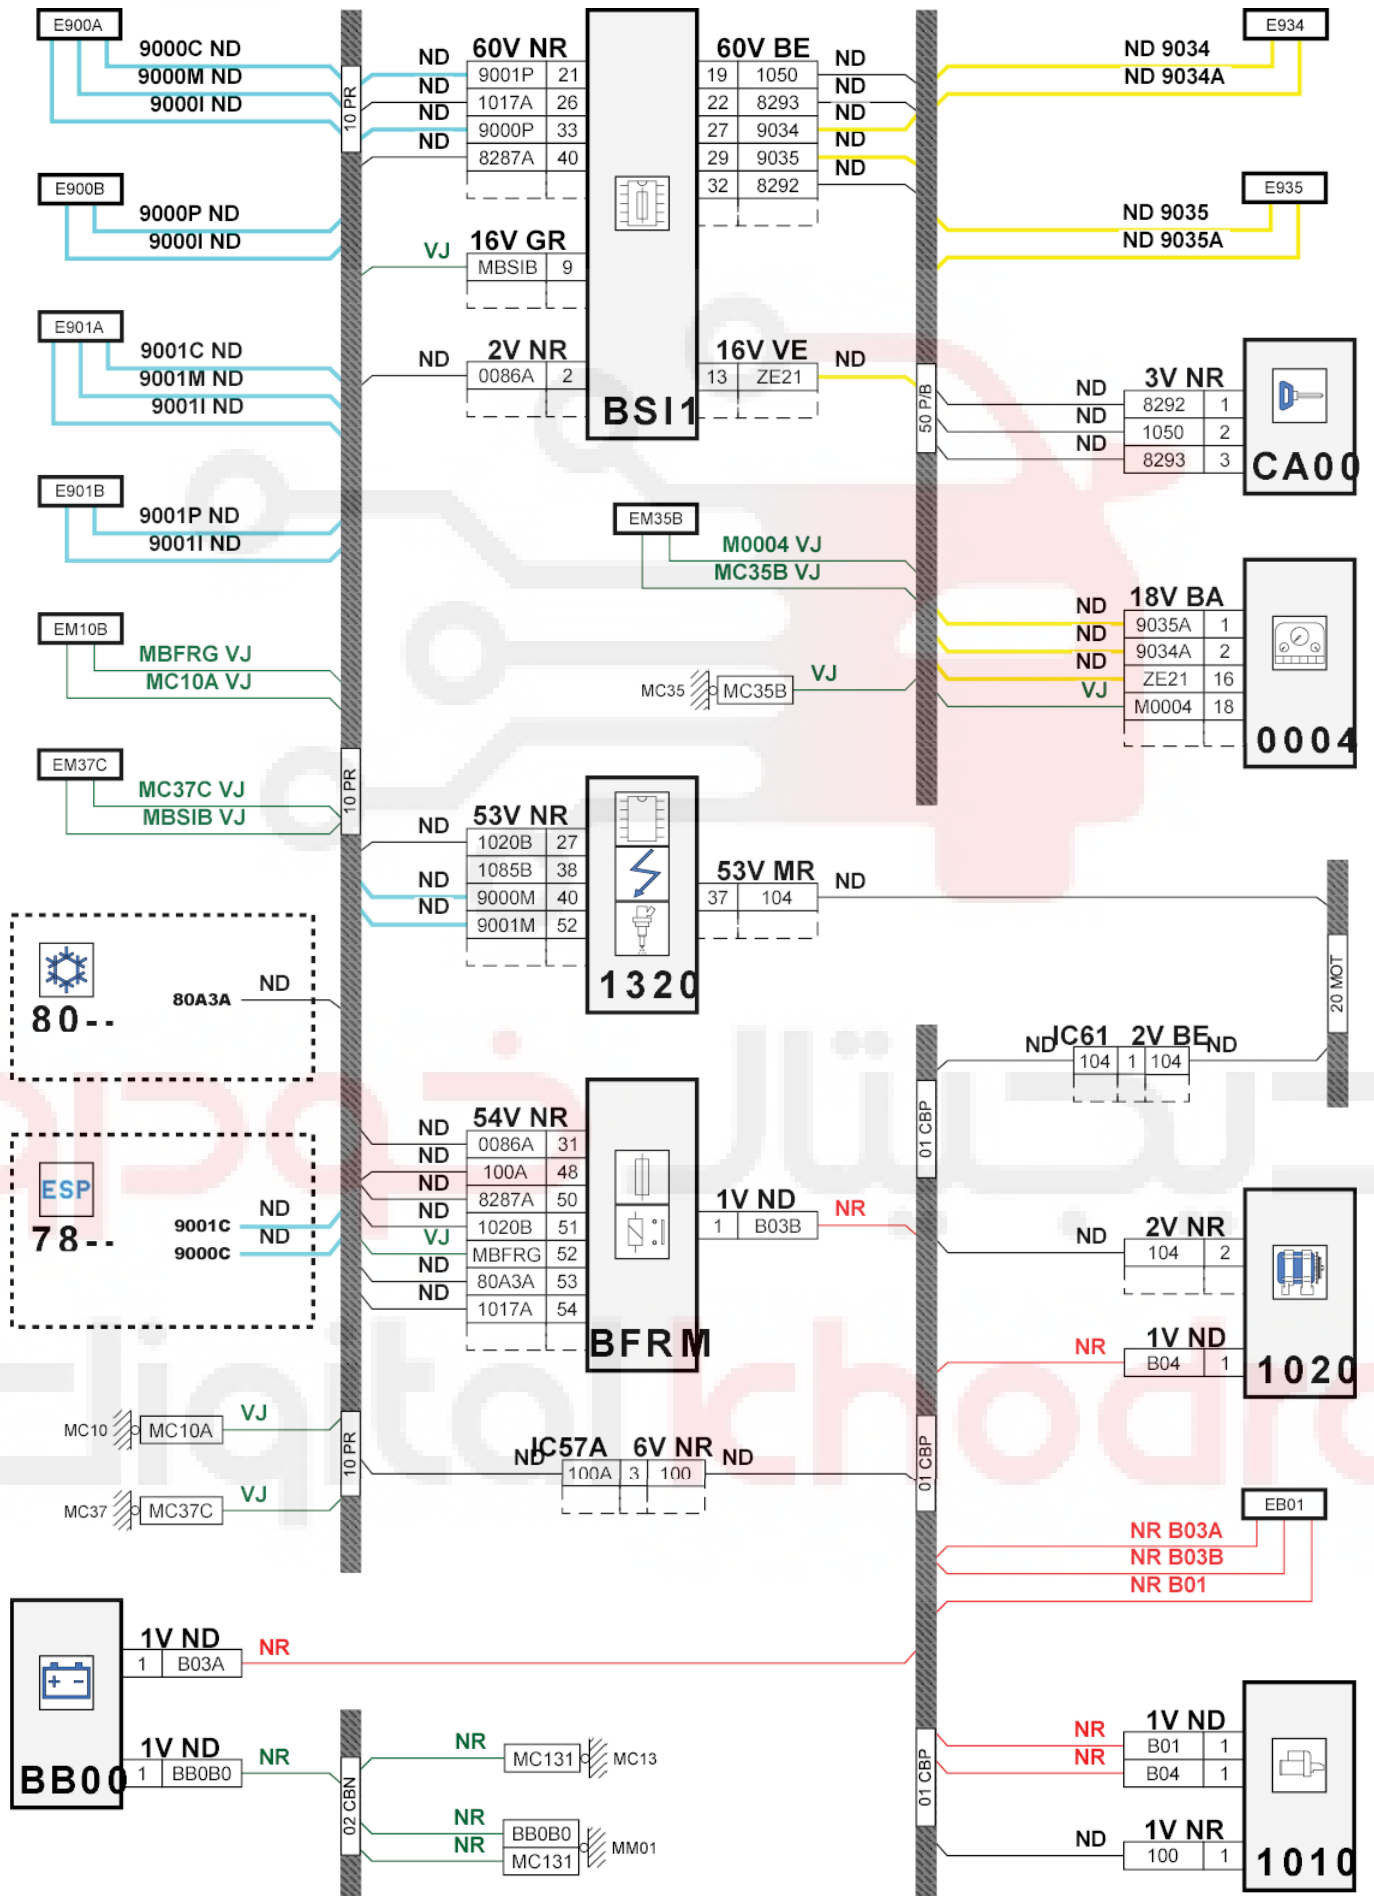


Engine Starting

item code	description	information
0004	null	/ instrument panel
1010	null	starter motor
1020	null	alternator
1320	null	engine ECU /
7800	null	calculateur controle de stabilite
8060	null	heater unit
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EB01	null	splice of a "battery +" protected by fuse no. 01
EM10B	null	crimp earth (earth point number 10B)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
MC10A	null	body earth point number 10A
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37C	null	body earth point number 37
MM01	null	engine earth point number 01

Fuel Pump & Gauge















item code	description	information
0004	null	/ instrument panel
1294	null	/ vacuum pump
1320	null	engine ECU /
13B6	null	vacuum pump control relay
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E806A	null	crimp one information (or equipotential 806A) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM10B	null	crimp earth (earth point number 10B)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
MC10A	null	body earth point number 10A
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MM01A	null	engine earth point number 01A

Fuel Pump & Gauge

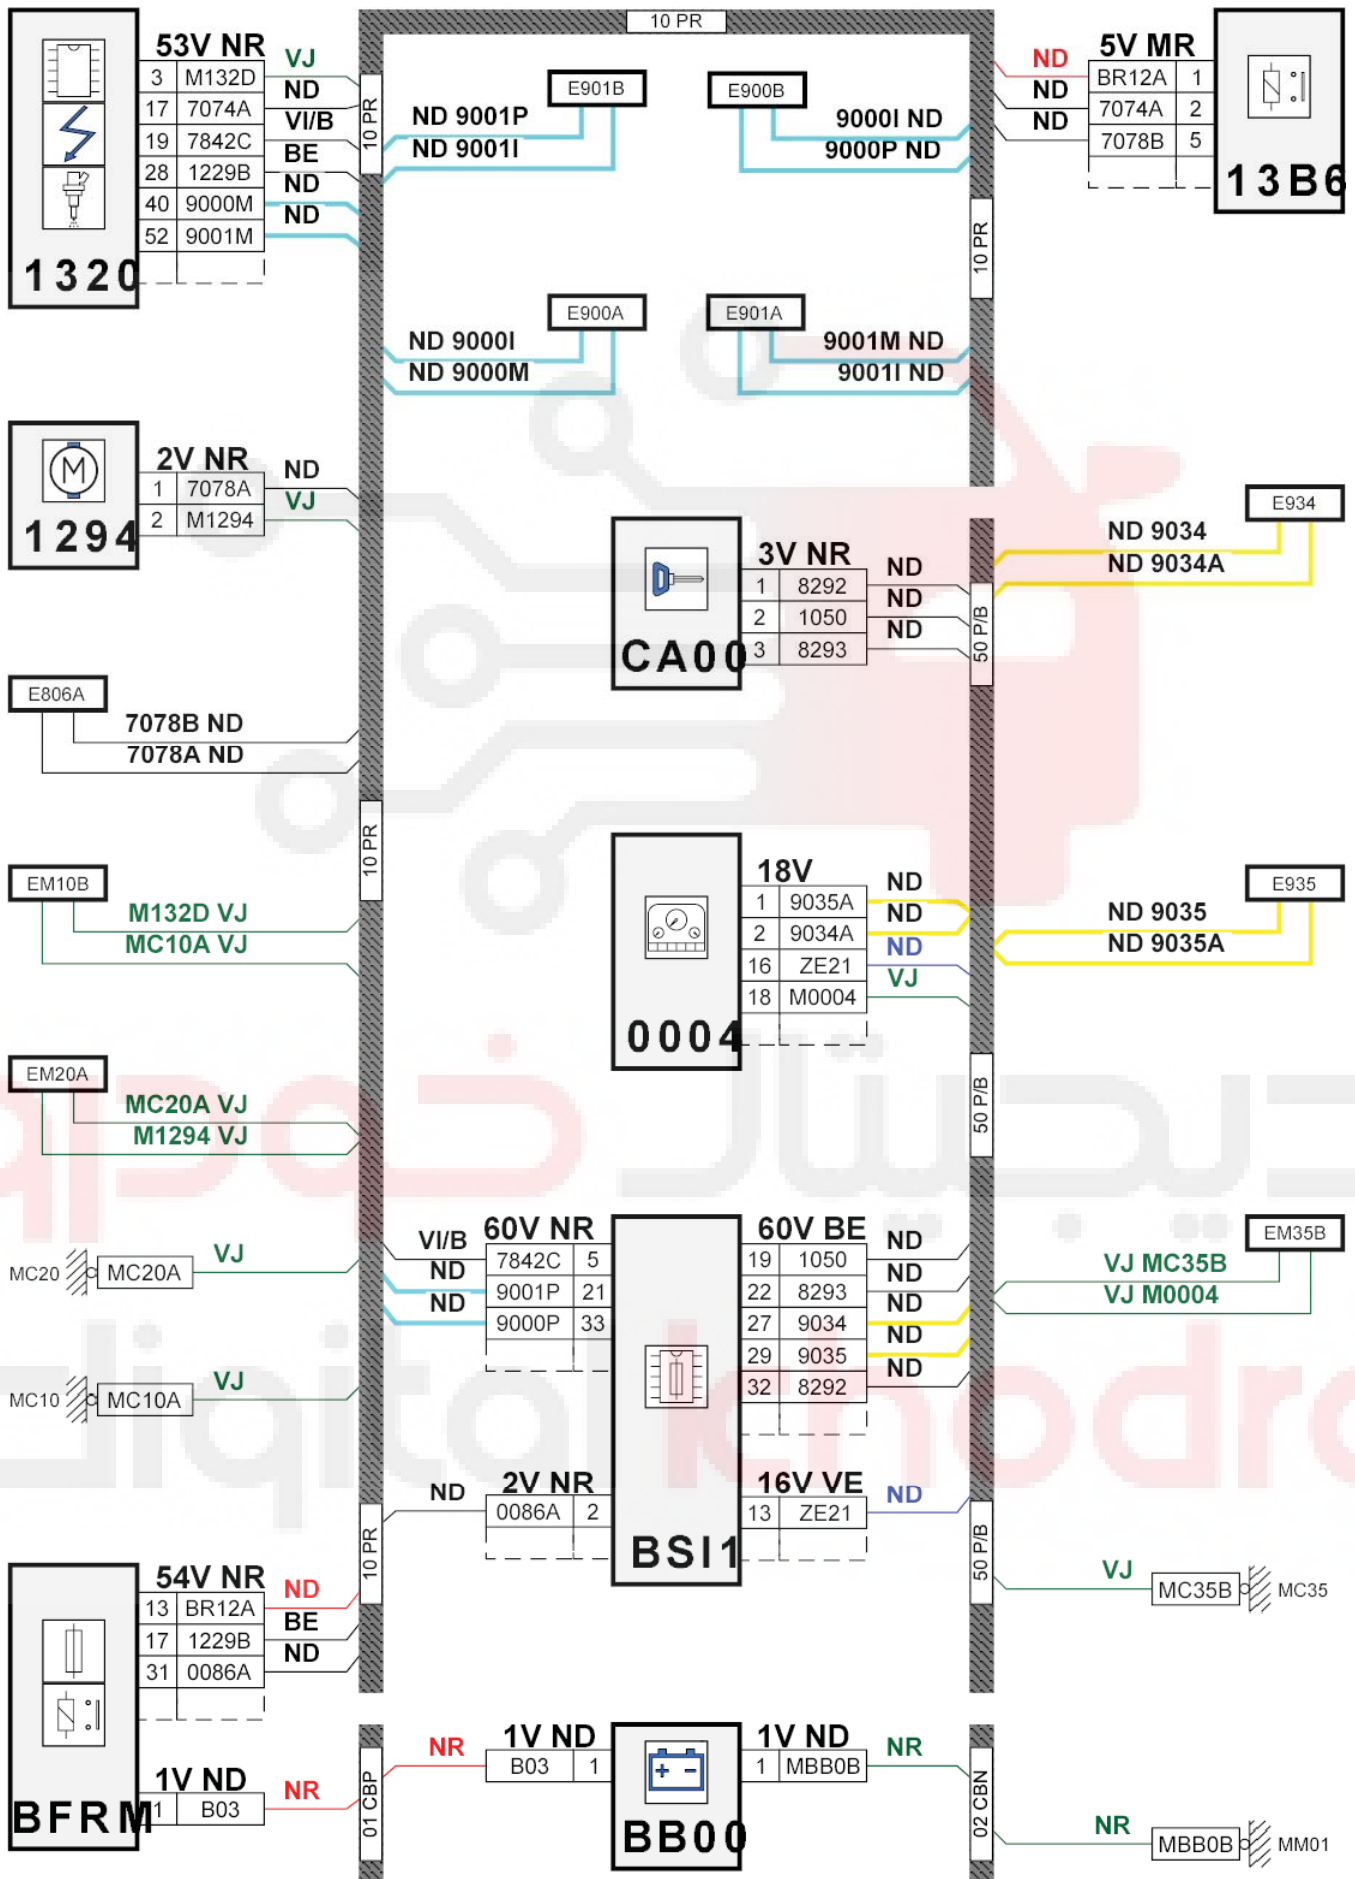

Fuel Pump & Gauge


item code	description	information
0004	null	/ instrument panel
1294	null	/ vacuum pump
1320	null	engine ECU /
13B6	null	vacuum pump control relay
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E806A	null	crimp one information (or equipotential 806A) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM10B	null	crimp earth (earth point number 10B)
EM20A	null	crimp earth (earth point number 20A)
EM35B	null	crimp earth (earth point number 35B)
MC10A	null	body earth point number 10A
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MM01A	null	engine earth point number 01A

    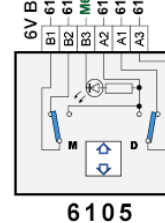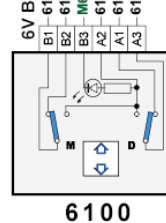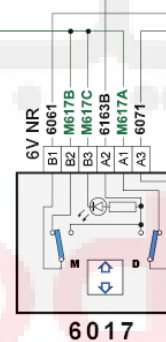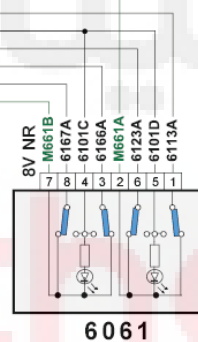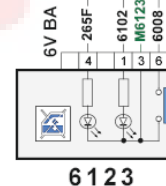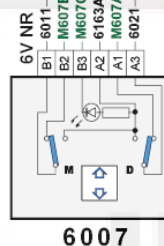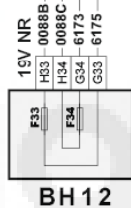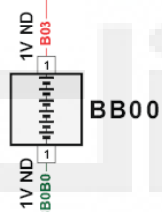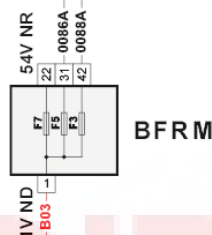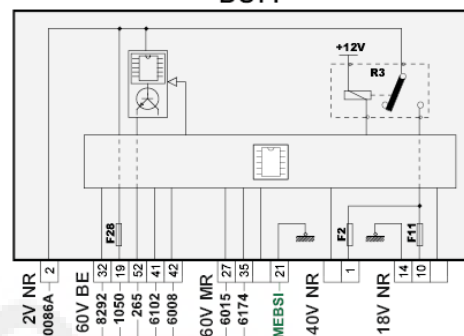

Electric Window

item code	description	information
6007	null	driver's electric window switch, driver's side
6017	null	front passenger's electric window switch /
6021	null	electric windows relay
6040	null	driver's electric window motor
6045	null	front passenger door electric window reduction motor
6061	null	double module electric window control
6100	null	left rear electric window switch
6105	null	right rear electric window switch
6123	null	Rear window neutralisation command
6130	null	rear left door electric window reduction motor
6135	null	rear right door electric window reduction motor
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BH12	null	passenger compartment fuse box /, 12 fuses
BSI1	null	built-in systems interface
CA00	null	ignition switch
E265A	null	crimp one information (or equipotential 265A) wire
E611	null	crimp one information (or equipotential 611) wire
EB88A	null	splice of a "battery +" protected by fuse no. 88A
EM35A	null	crimp earth (earth point number 35A)
EM37A	null	crimp earth (earth point number 37A)
EM37B	null	crimp earth (earth point number 37B)
EM40B	null	crimp earth (earth point number 40B)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC40A	null	body earth point number 40
MM01	null	engine earth point number 01

Electric Window

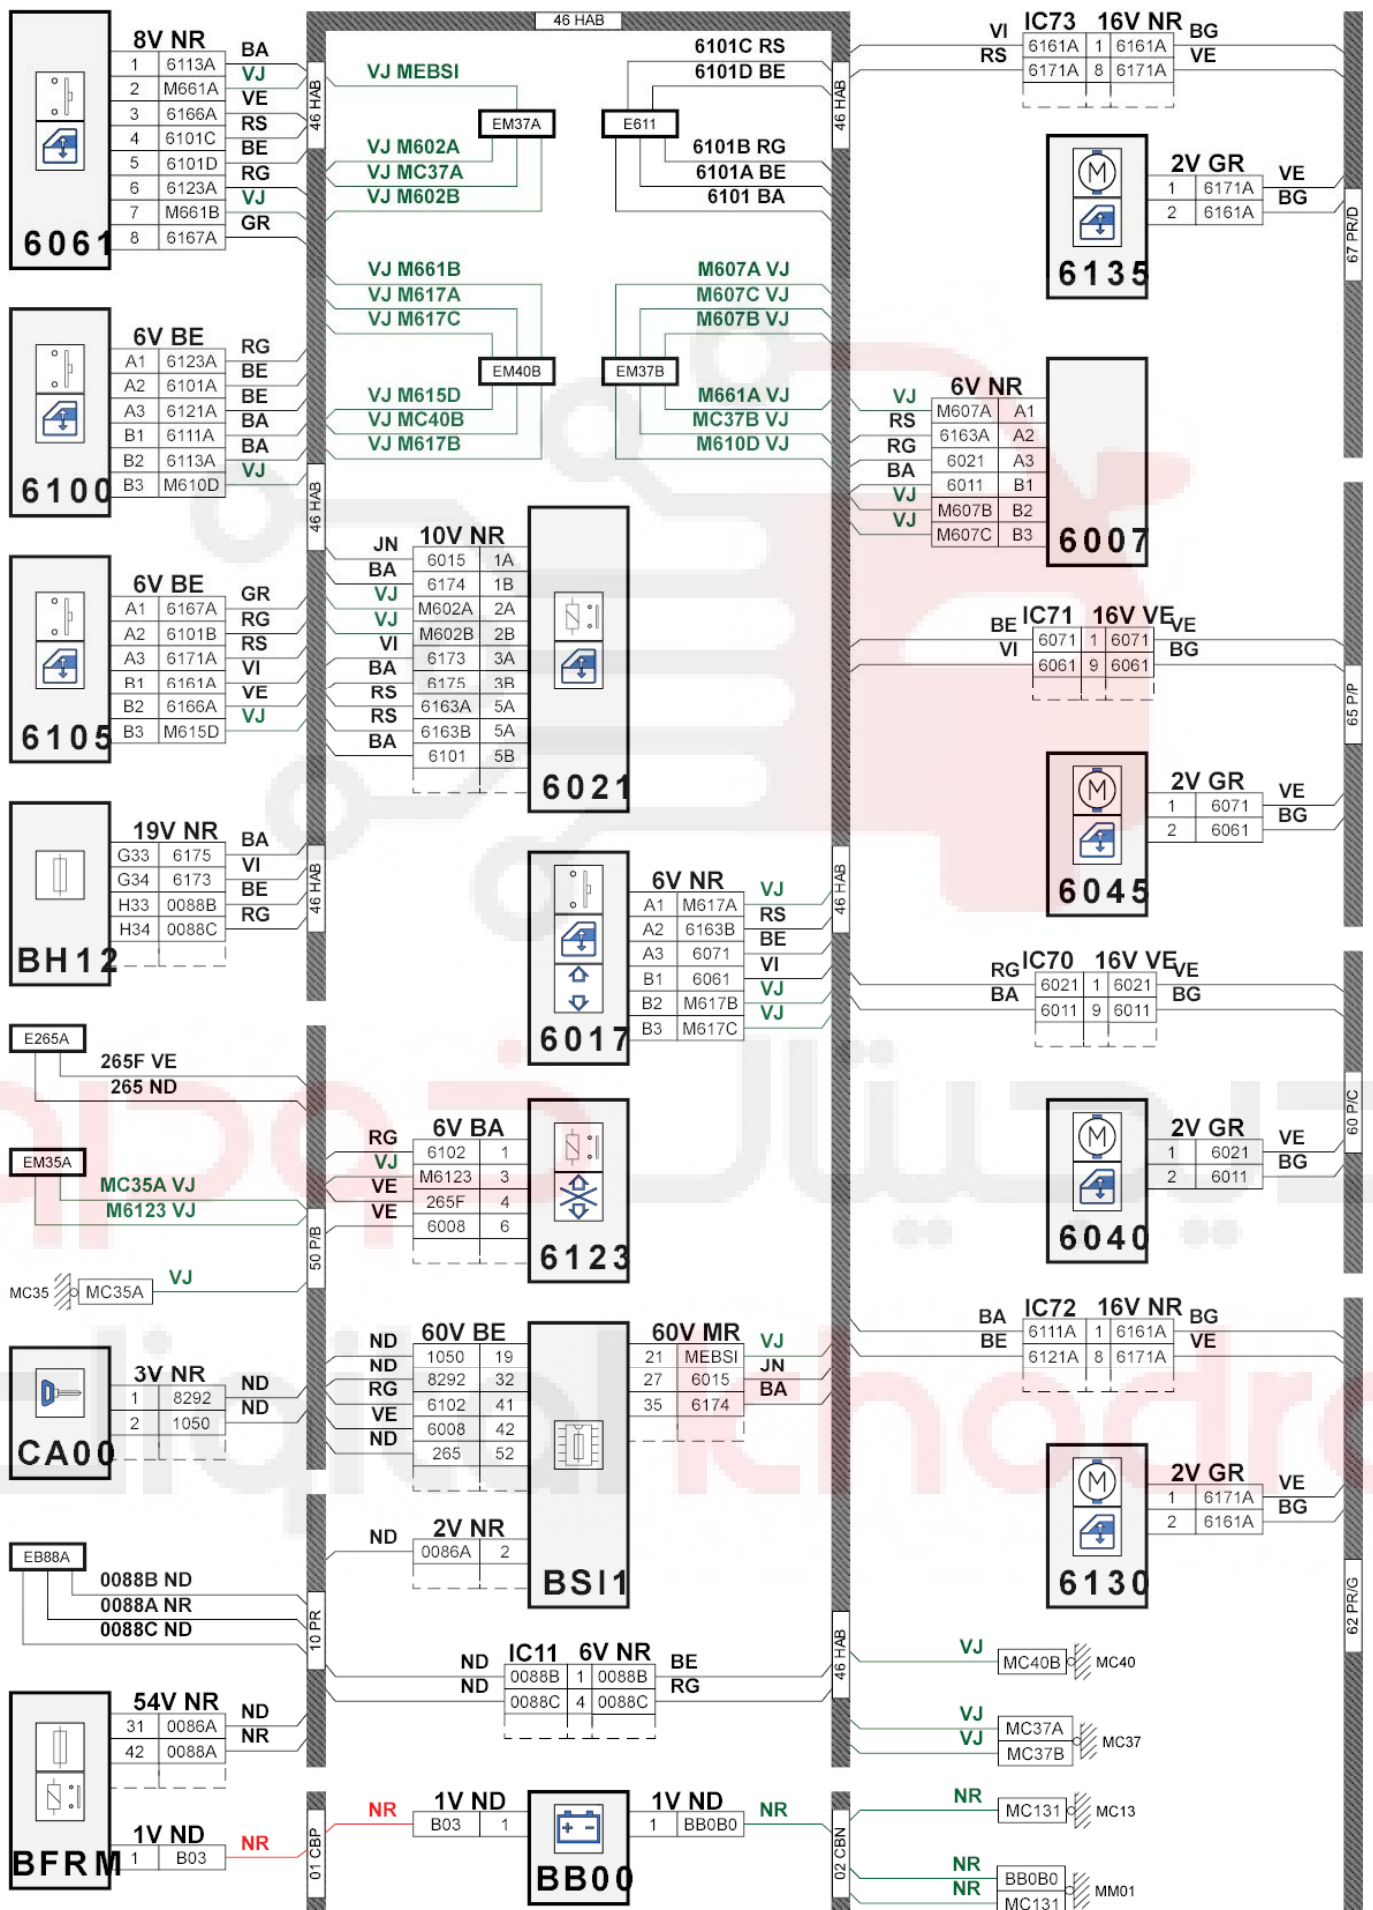


Electric Window

item code	description	information
6007	null	driver's electric window switch, driver's side
6017	null	front passenger's electric window switch /
6021	null	electric windows relay
6040	null	driver's electric window motor
6045	null	front passenger door electric window reduction motor
6061	null	double module electric window control
6100	null	left rear electric window switch
6105	null	right rear electric window switch
6123	null	Rear window neutralisation command
6130	null	rear left door electric window reduction motor
6135	null	rear right door electric window reduction motor
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BH12	null	passenger compartment fuse box /, 12 fuses
BSI1	null	built-in systems interface
CA00	null	ignition switch
E265A	null	crimp one information (or equipotential 265A) wire
E611	null	crimp one information (or equipotential 611) wire
EB88A	null	splice of a "battery +" protected by fuse no. 88A
EM35A	null	crimp earth (earth point number 35A)
EM37A	null	crimp earth (earth point number 37A)
EM37B	null	crimp earth (earth point number 37B)
EM40B	null	crimp earth (earth point number 40B)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC40A	null	body earth point number 40
MM01	null	engine earth point number 01

Central Locking

item code	description	information
0004	null	/ instrument panel
6202	null	driver's side front door lock assembly
6207	null	front passenger side door lock assembly
6212	null	rear left door lock assembly
6217	null	rear right door lock assembly
6220	null	door locking switch
6222	null	boot or tailgate lock assembly
63C2	null	interior boot opening button
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E265A	null	crimp one information (or equipotential 265A) wire
E622	null	crimp one information (or equipotential 622) wire
E623	null	crimp one information (or equipotential 623) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM40A	null	crimp earth (earth point number 40A)
EM60A	null	crimp earth (earth point number 60A)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC40A	null	body earth point number 40
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01

Central Locking

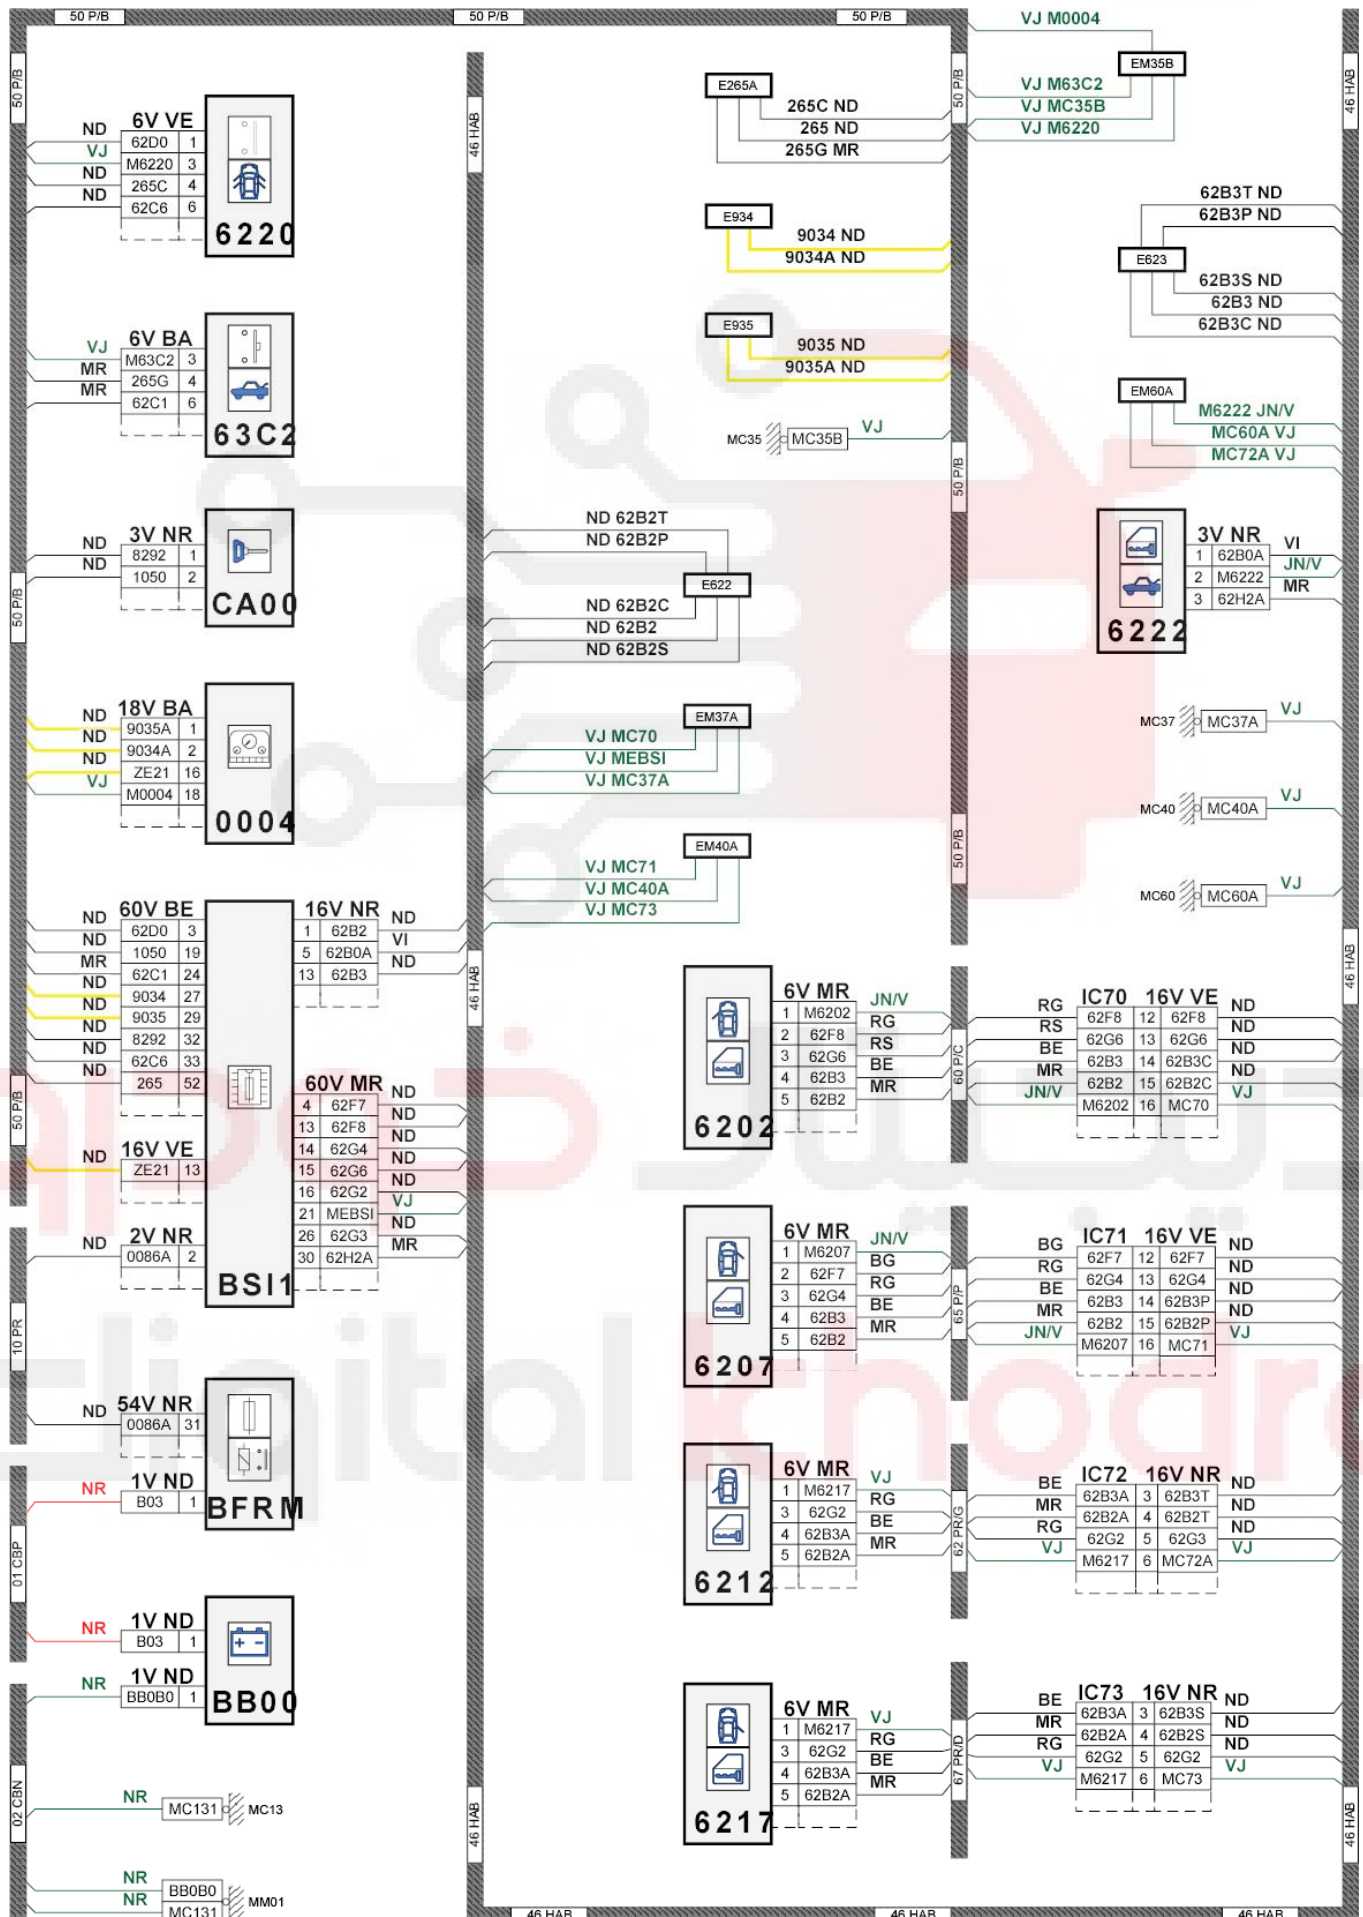


Central Locking

item code	description	information
0004	null	/ instrument panel
6202	null	driver's side front door lock assembly
6207	null	front passenger side door lock assembly
6212	null	rear left door lock assembly
6217	null	rear right door lock assembly
6220	null	door locking switch
6222	null	boot or tailgate lock assembly
63C2	null	interior boot opening button
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E265A	null	crimp one information (or equipotential 265A) wire
E622	null	crimp one information (or equipotential 622) wire
E623	null	crimp one information (or equipotential 623) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
EM40A	null	crimp earth (earth point number 40A)
EM60A	null	crimp earth (earth point number 60A)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MC40A	null	body earth point number 40
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01

Seat Belts, Airbag

item code	description	information
0004	null	/ instrument panel
6562	null	chest type right-hand side airbag
6563	null	chest type left-hand side airbag
6564	null	front passenger's airbag
6569	null	passenger's airbag deactivation switch
6570	null	airbags and pretensioners ECU
6573	null	left-hand lateral acceleration sensor /
6574	null	right-hand lateral acceleration sensor /
6575	null	front left pyrotechnic pretensioner
6576	null	front right pyrotechnic pretensioner
84C4	null	independent telematic unit
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E656	null	crimp one information (or equipotential 656) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM35A	null	crimp earth (earth point number 35A)
EM35B	null	crimp earth (earth point number 35B)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC40B	null	body earth point number 40
MC50	null	body earth point number 50
MM01	null	engine earth point number 01


Seat Belts, Airbag

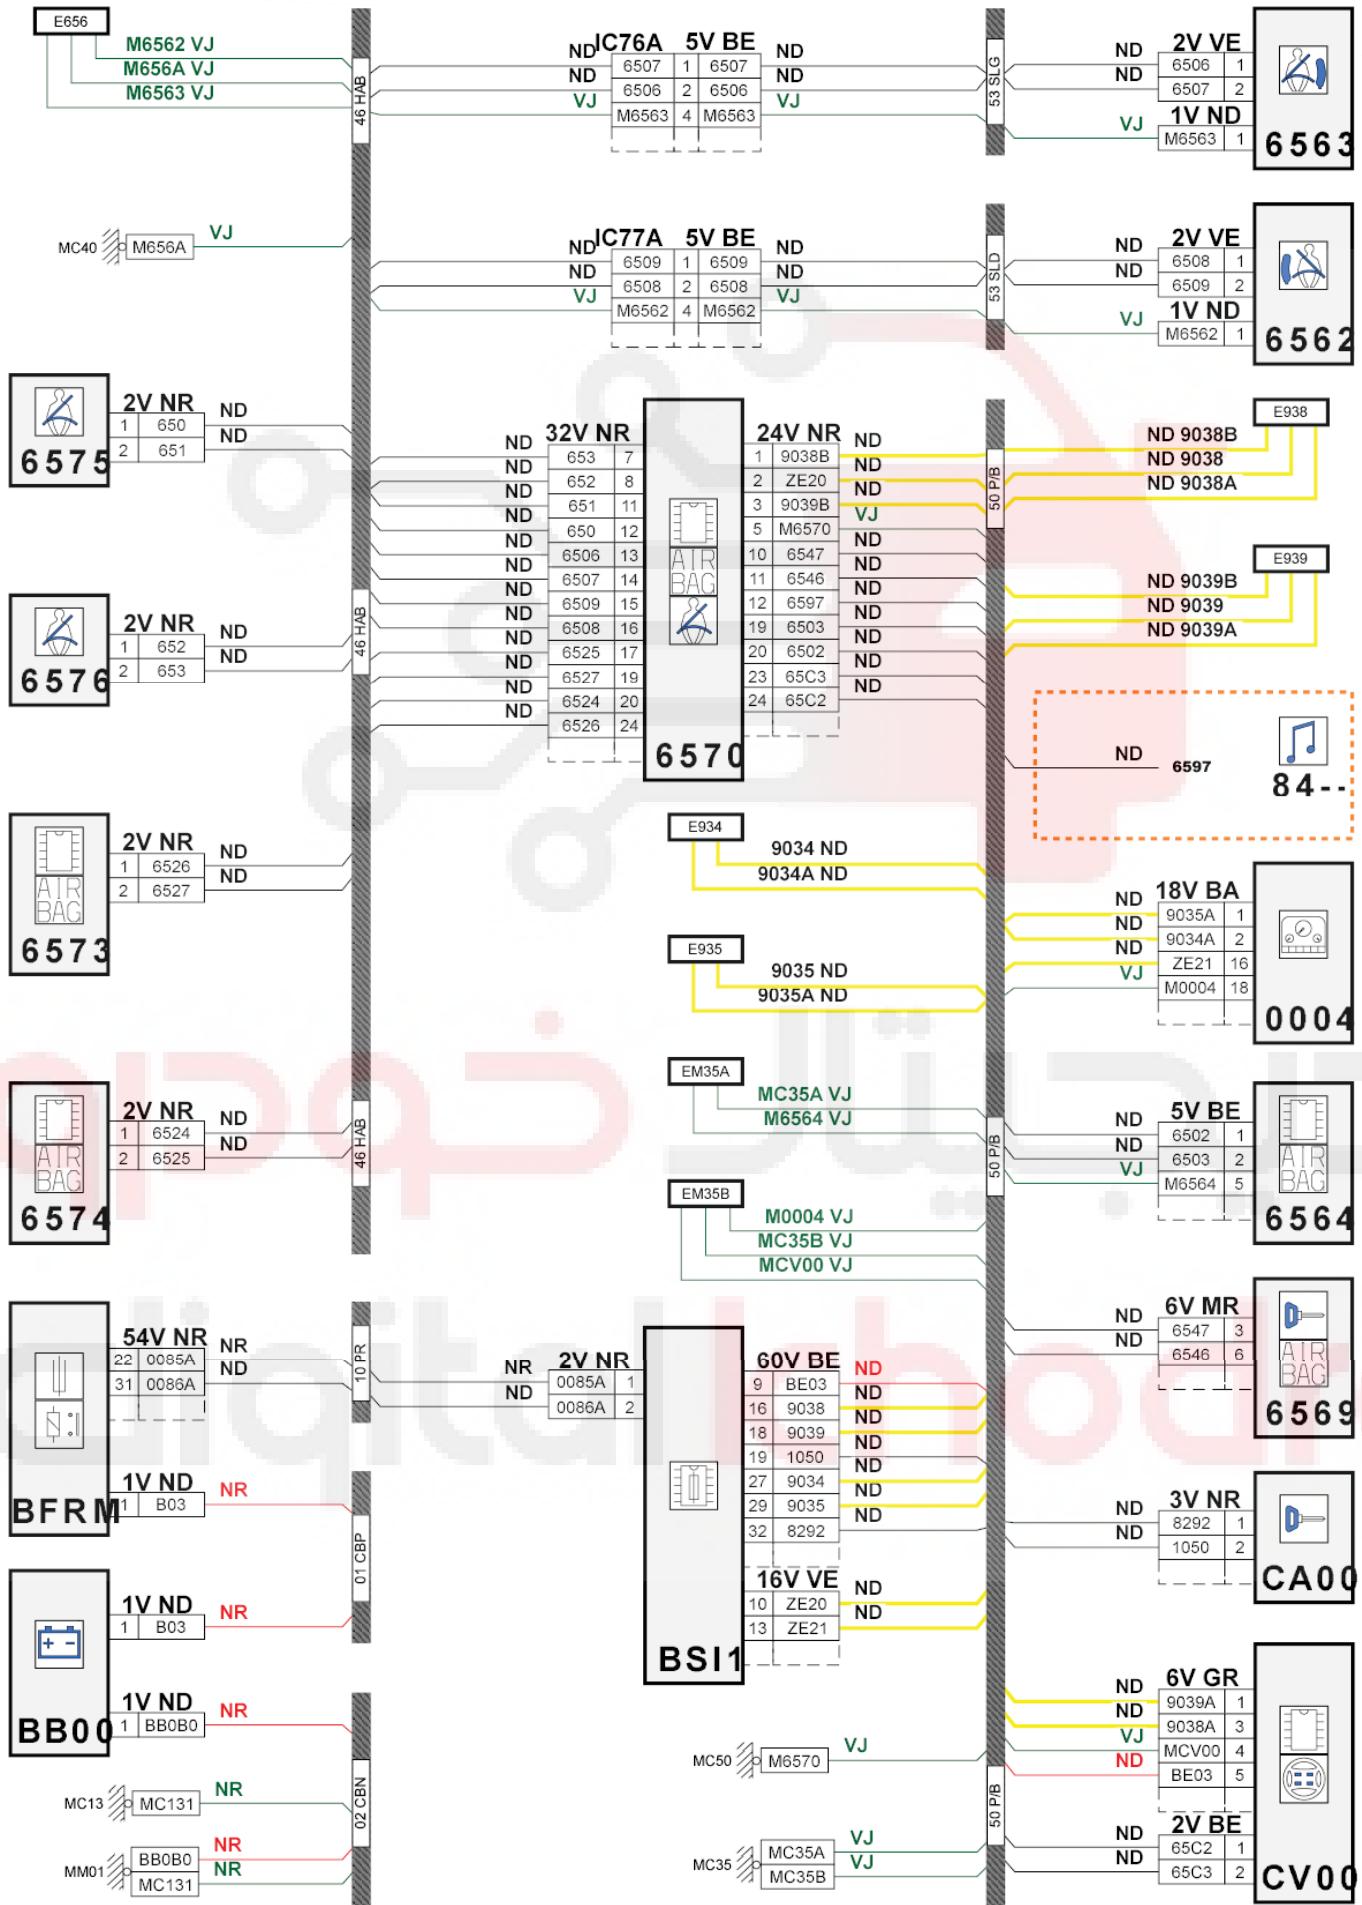

Seat Belts, Airbag

item code	description	information
0004	null	/ instrument panel
6562	null	chest type right-hand side airbag
6563	null	chest type left-hand side airbag
6564	null	front passenger's airbag
6569	null	passenger's airbag deactivation switch
6570	null	airbags and pretensioners ECU
6573	null	left-hand lateral acceleration sensor /
6574	null	right-hand lateral acceleration sensor /
6575	null	front left pyrotechnic pretensioner
6576	null	front right pyrotechnic pretensioner
84C4	null	independent telematic unit
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E656	null	crimp one information (or equipotential 656) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM35A	null	crimp earth (earth point number 35A)
EM35B	null	crimp earth (earth point number 35B)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC40B	null	body earth point number 40
MC50	null	body earth point number 50
MM01	null	engine earth point number 01


Alarm

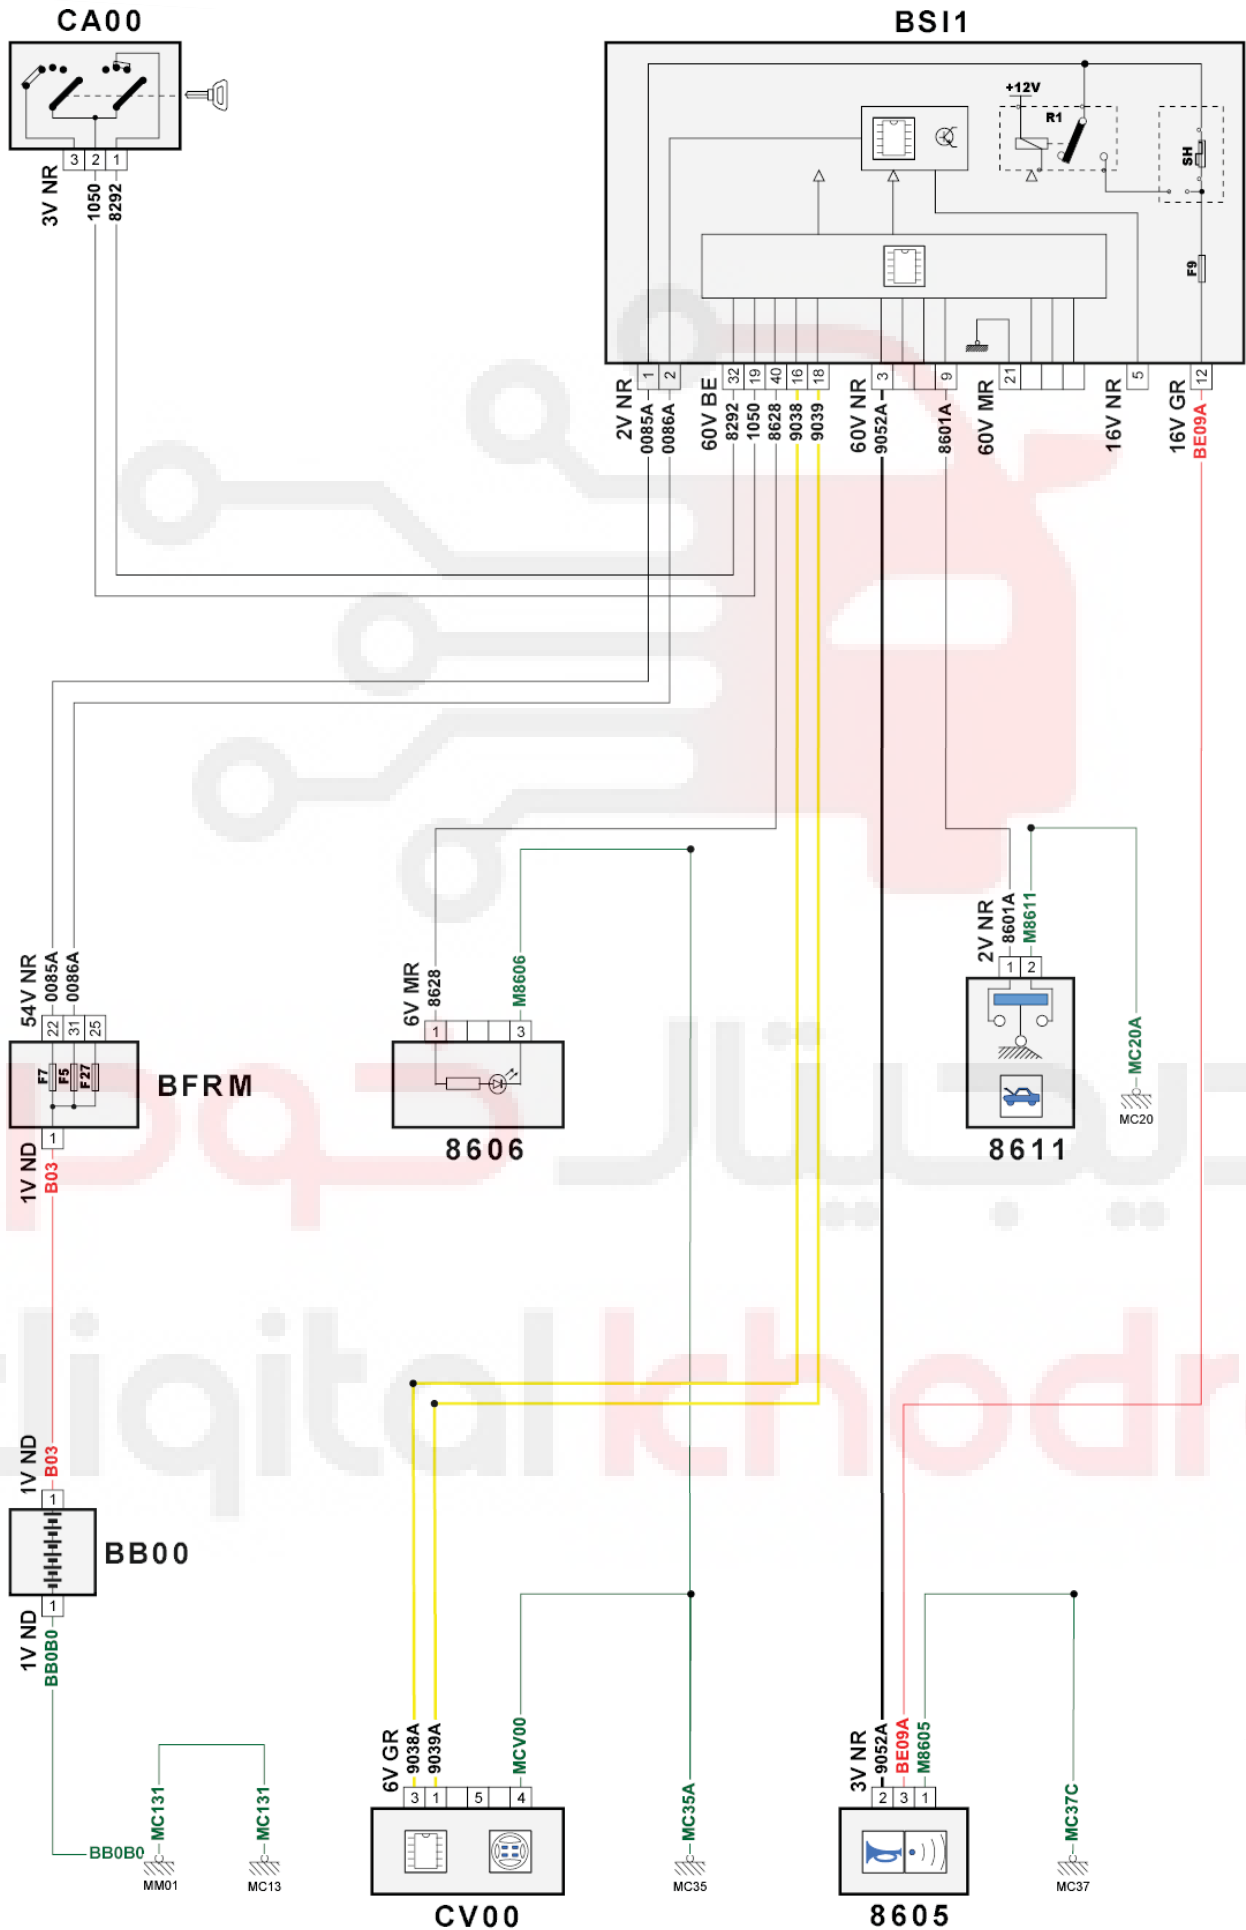

Alarm

item code	description	information
8605	null	intrusion alarm siren
8606	null	intrusion alarm LED
8611	null	bonnet opening alarm switch /
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM20A	null	crimp earth (earth point number 20A)
EM35A	null	crimp earth (earth point number 35A)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MC37C	null	body earth point number 37
MM01	null	engine earth point number 01


Alarm

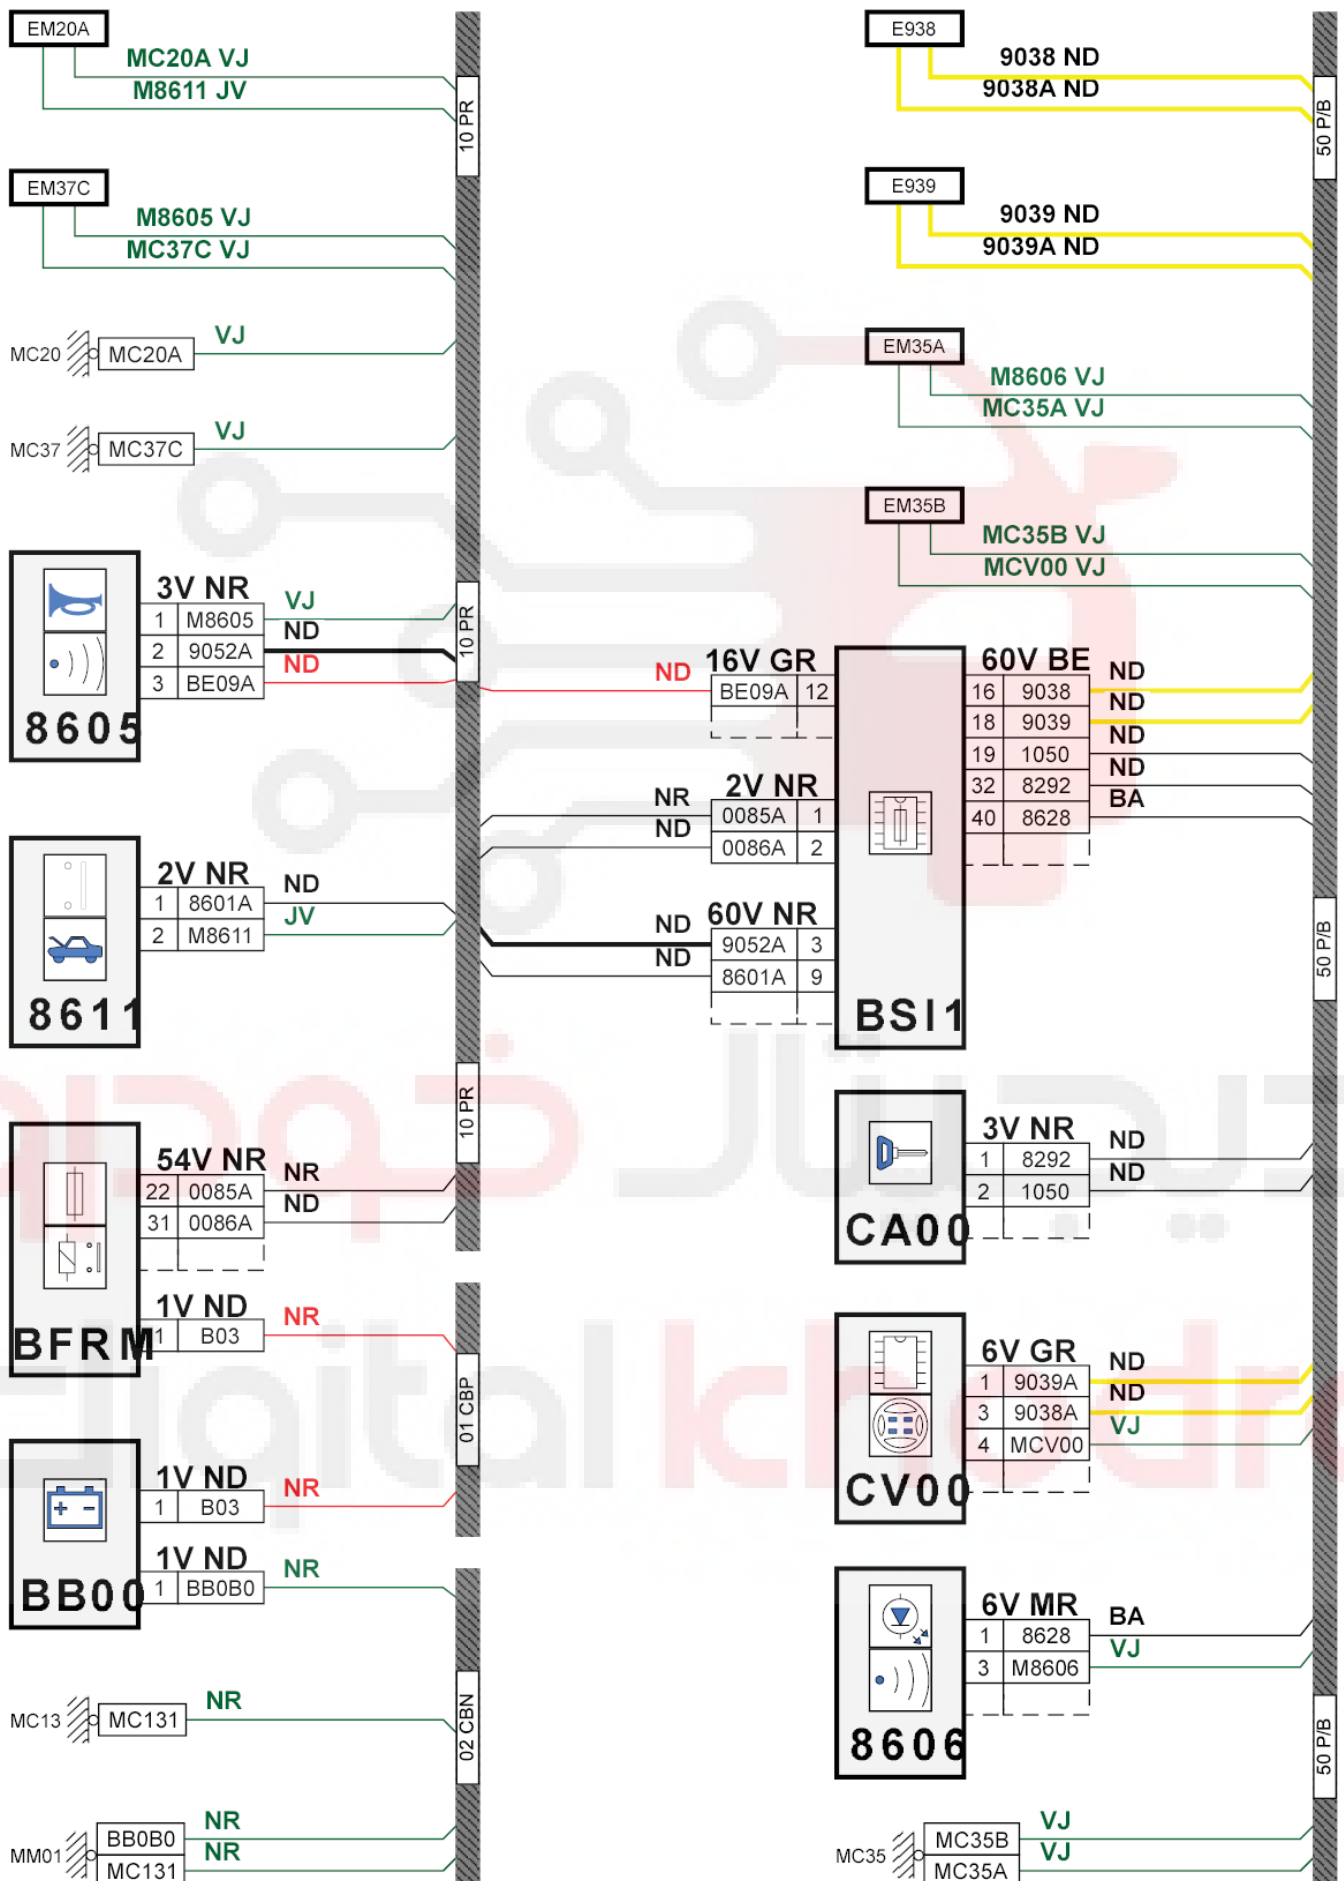

Alarm

item code	description	information
8605	null	intrusion alarm siren
8606	null	intrusion alarm LED
8611	null	bonnet opening alarm switch /
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM20A	null	crimp earth (earth point number 20A)
EM35A	null	crimp earth (earth point number 35A)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35	null	body earth point number 35
MC37C	null	body earth point number 37
MM01	null	engine earth point number 01

 
www.digitalkhodro.org




Immobiliser

item code	description	information
1320	null	engine ECU /
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM35B	null	crimp earth (earth point number 35B)
EM37A	null	crimp earth (earth point number 37A)
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37A	null	body earth point number 37A
MM01	null	engine earth point number 01

Immobiliser

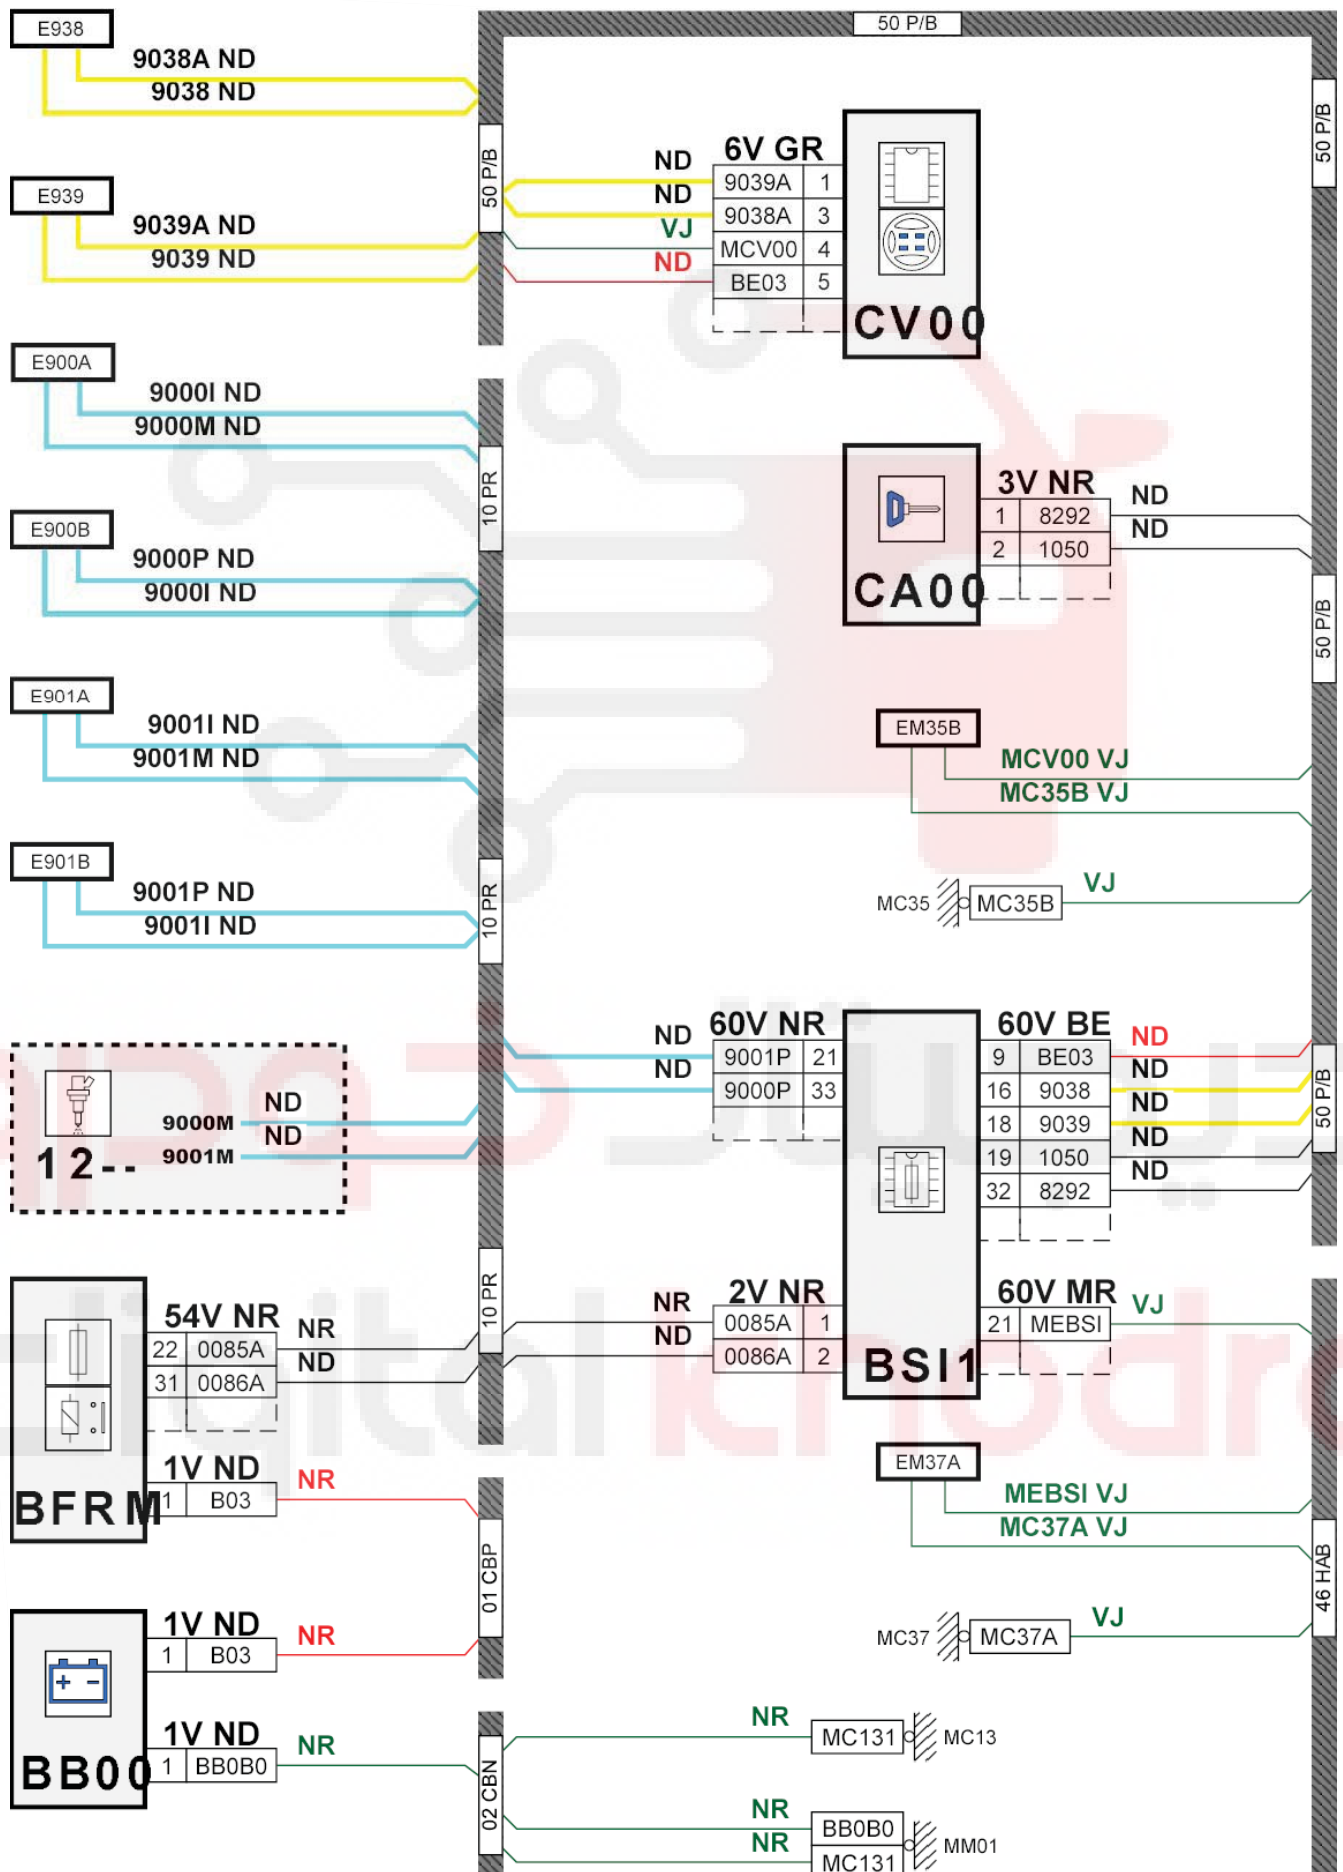


Screen Wiper & Wash

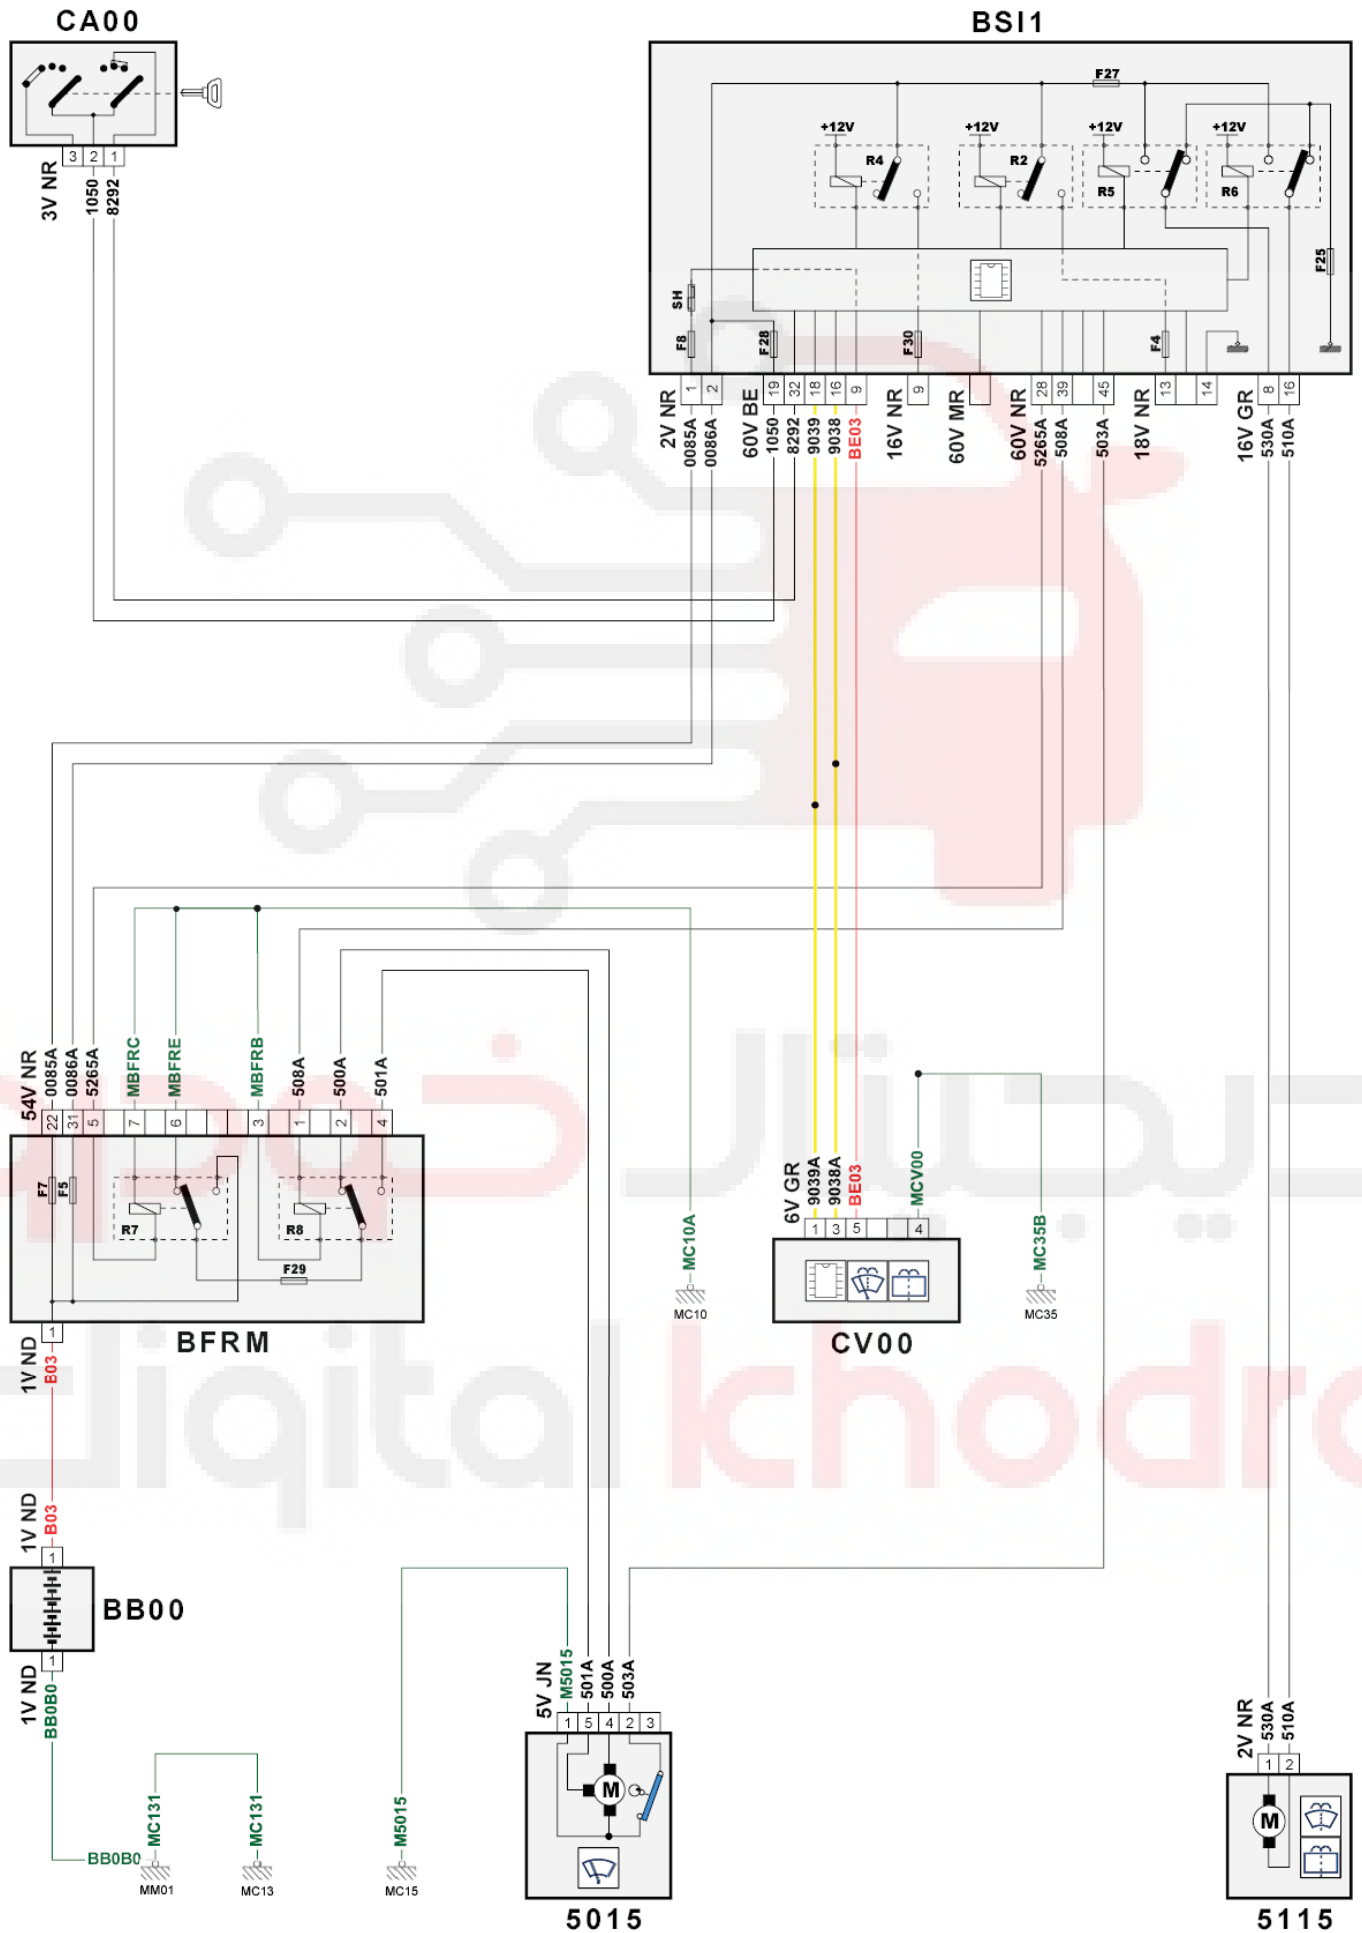

Screen Wiper & Wash

item code	description	information
5015	null	windscreen wiper motor
5115	null	windscreen and rear screen washer pump
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM10B	null	crimp earth (earth point number 10B)
EM35B	null	crimp earth (earth point number 35B)
MC10A	null	body earth point number 10A
MC13	null	body earth point number 13
MC15A	null	body earth point number 15
MC35	null	body earth point number 35
MM01	null	engine earth point number 01


Screen Wiper & Wash

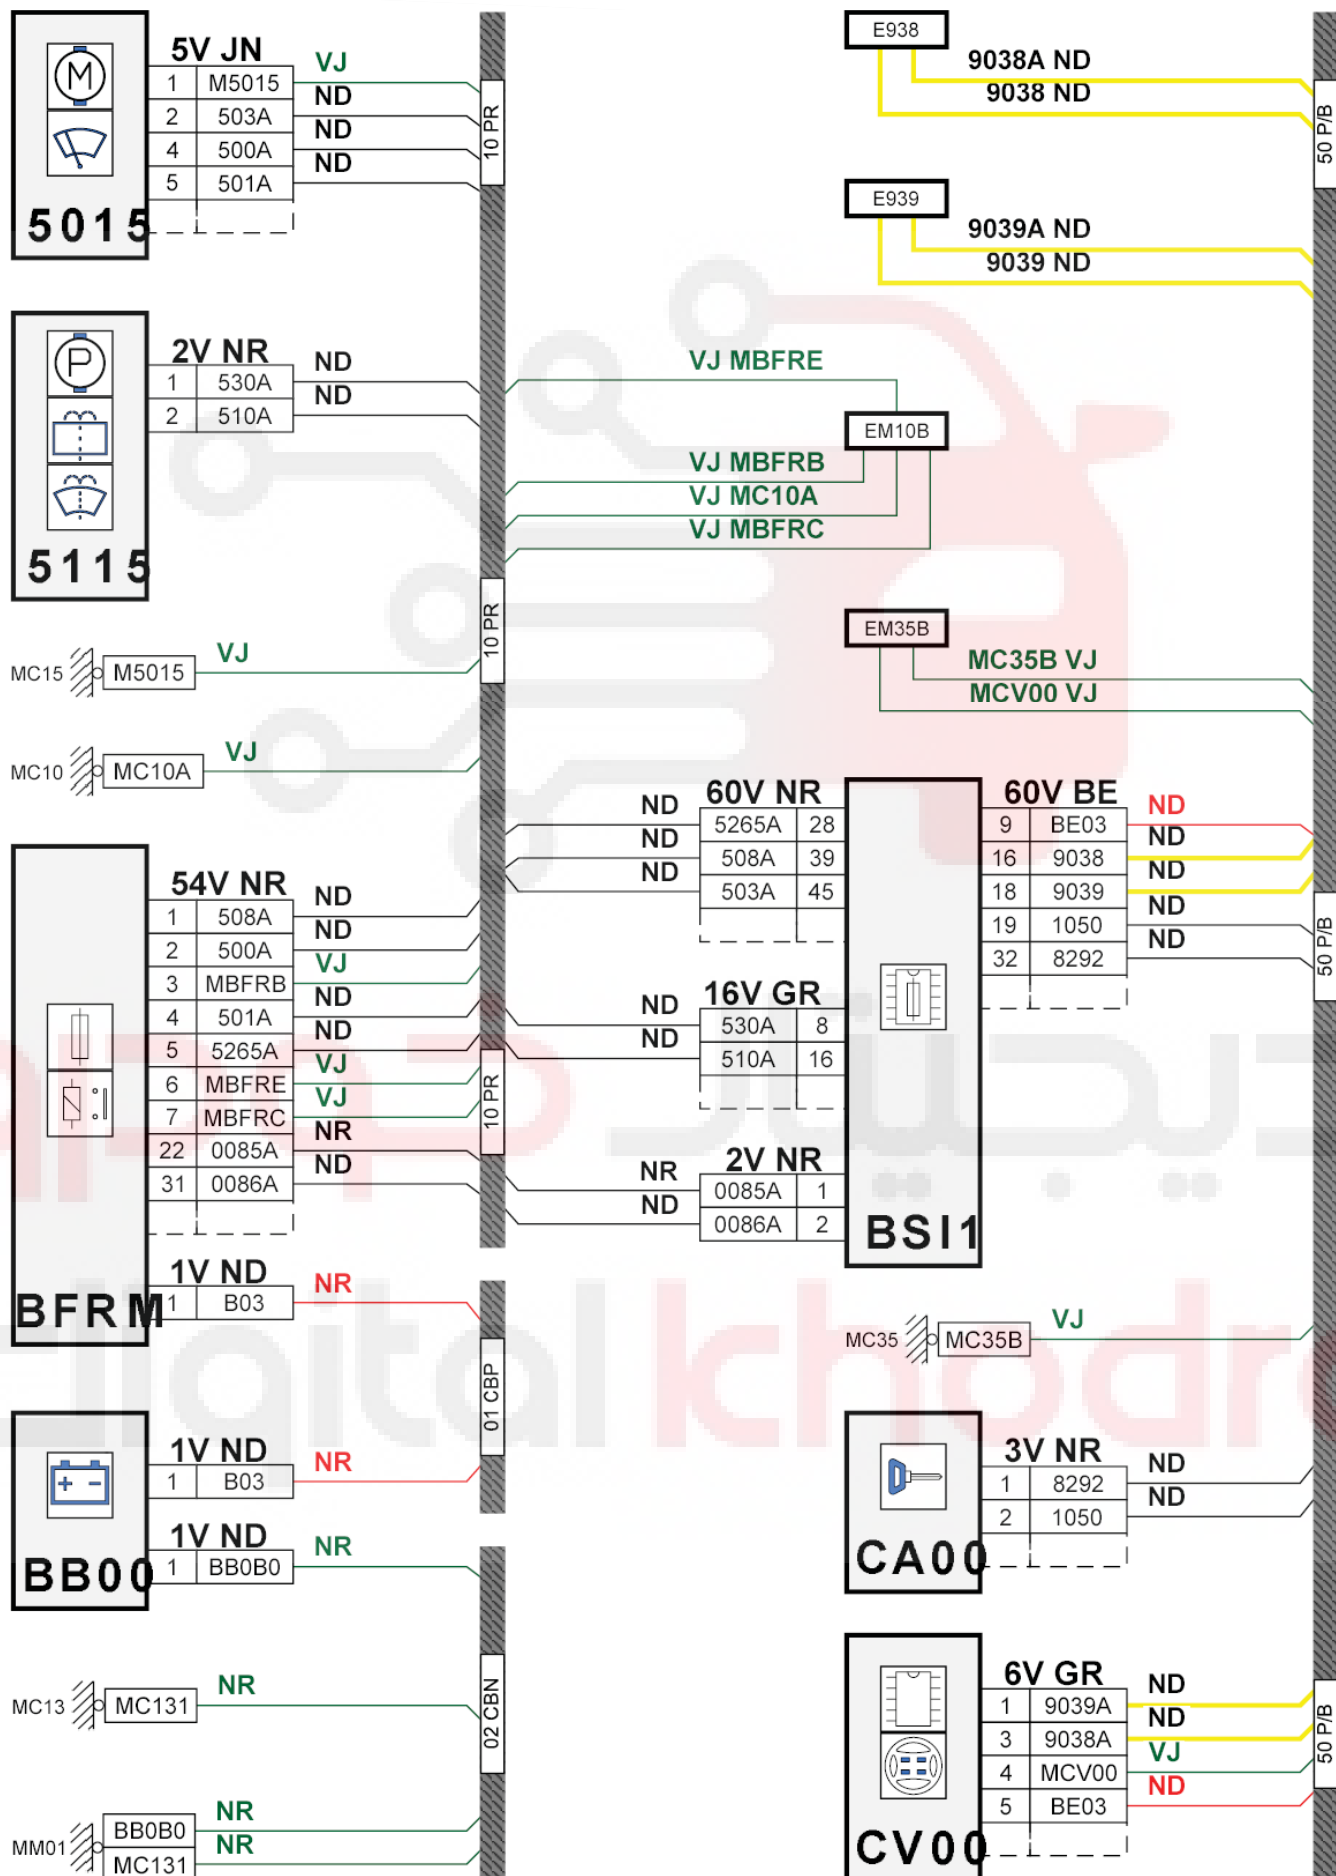

Screen Wiper & Wash


item code	description	information
5015	null	windscreen wiper motor
5115	null	windscreen and rear screen washer pump
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E938	null	crimp one information (or equipotential 938) wire
E939	null	crimp one information (or equipotential 939) wire
EM10B	null	crimp earth (earth point number 10B)
EM35B	null	crimp earth (earth point number 35B)
MC10A	null	body earth point number 10A
MC13	null	body earth point number 13
MC15A	null	body earth point number 15
MC35	null	body earth point number 35
MM01	null	engine earth point number 01

Automatic Gearbox

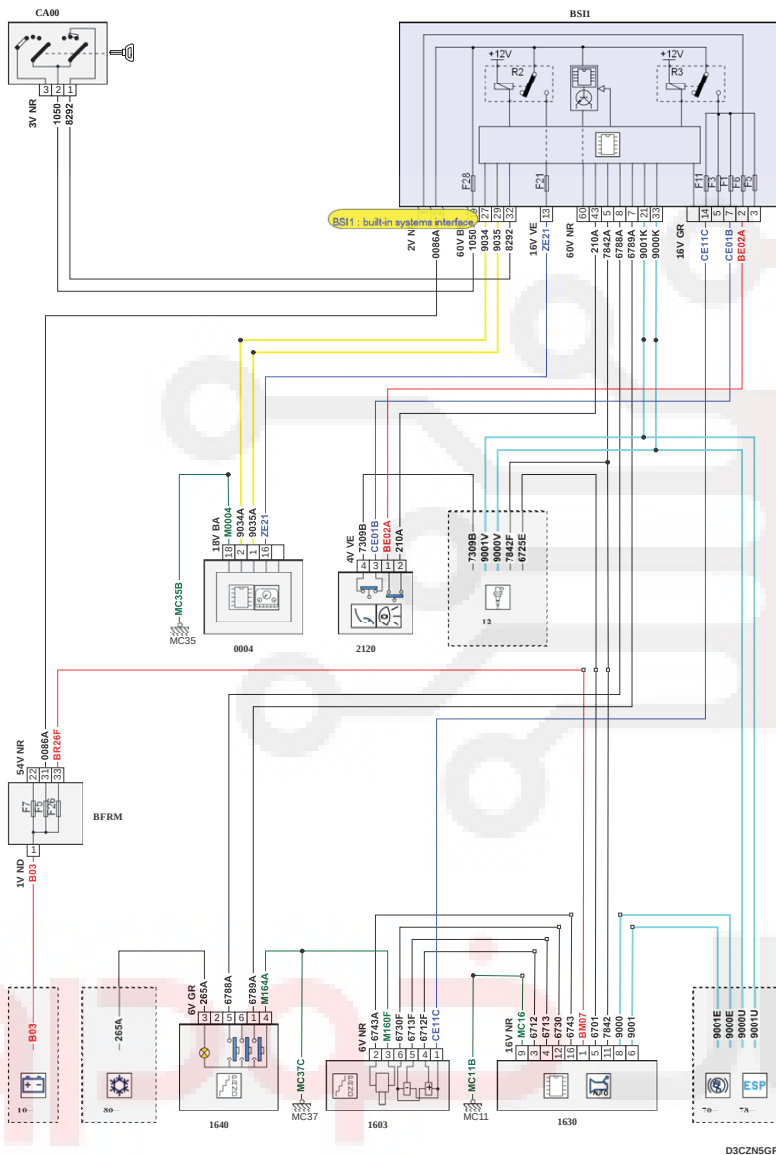

item code	description	information
0004	null	/ instrument panel
1320	null	engine ECU /
1603	null	automatic gearbox control assembly
1630	null	/ automatic gearbox ECU
1640	null	automatic transmission programme selector
2120	null	dual function brake switch /
7800	null	calculateur controle de stabilite
8060	null	heater unit
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E784A	null	crimp one information (or equipotential 784A) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM11A	null	crimp earth (earth point number 11A)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
MC11B	null	body earth point number 11B
MC35	null	body earth point number 35
MC37C	null	body earth point number 37

Automatic Gearbox

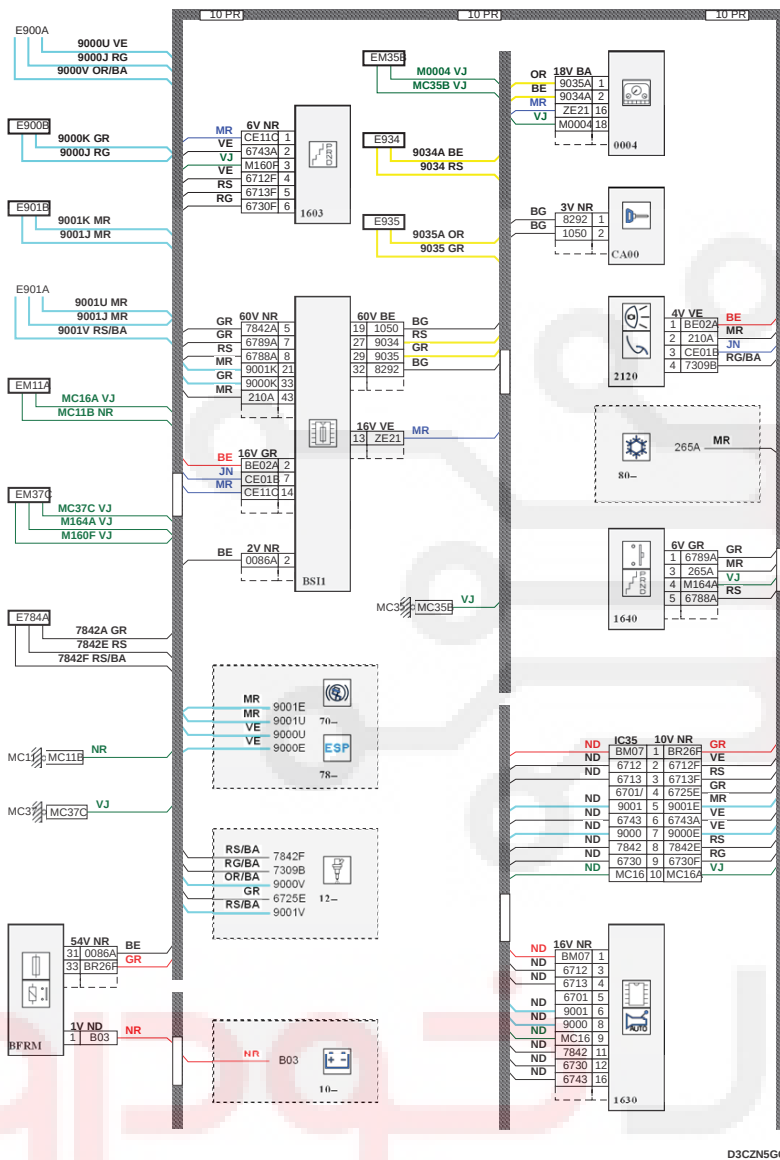

D3CZNSGG

Automatic Gearbox

Item code	description	information
0004	null	/ instrument panel
1320	null	engine ECU /
1603	null	automatic gearbox control assembly
1630	null	/ automatic gearbox ECU
1640	null	automatic transmission programme selector
2120	null	dual function brake switch /
7800	null	calculateur controle de stabilite
8060	null	heater unit
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BS11	null	built-in systems interface
CA00	null	ignition switch
E784A	null	crimp one information (or equipotential 784A) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM11A	null	crimp earth (earth point number 11A)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
MC11B	null	body earth point number 11B
MC35	null	body earth point number 35
MC37C	null	body earth point number 37