

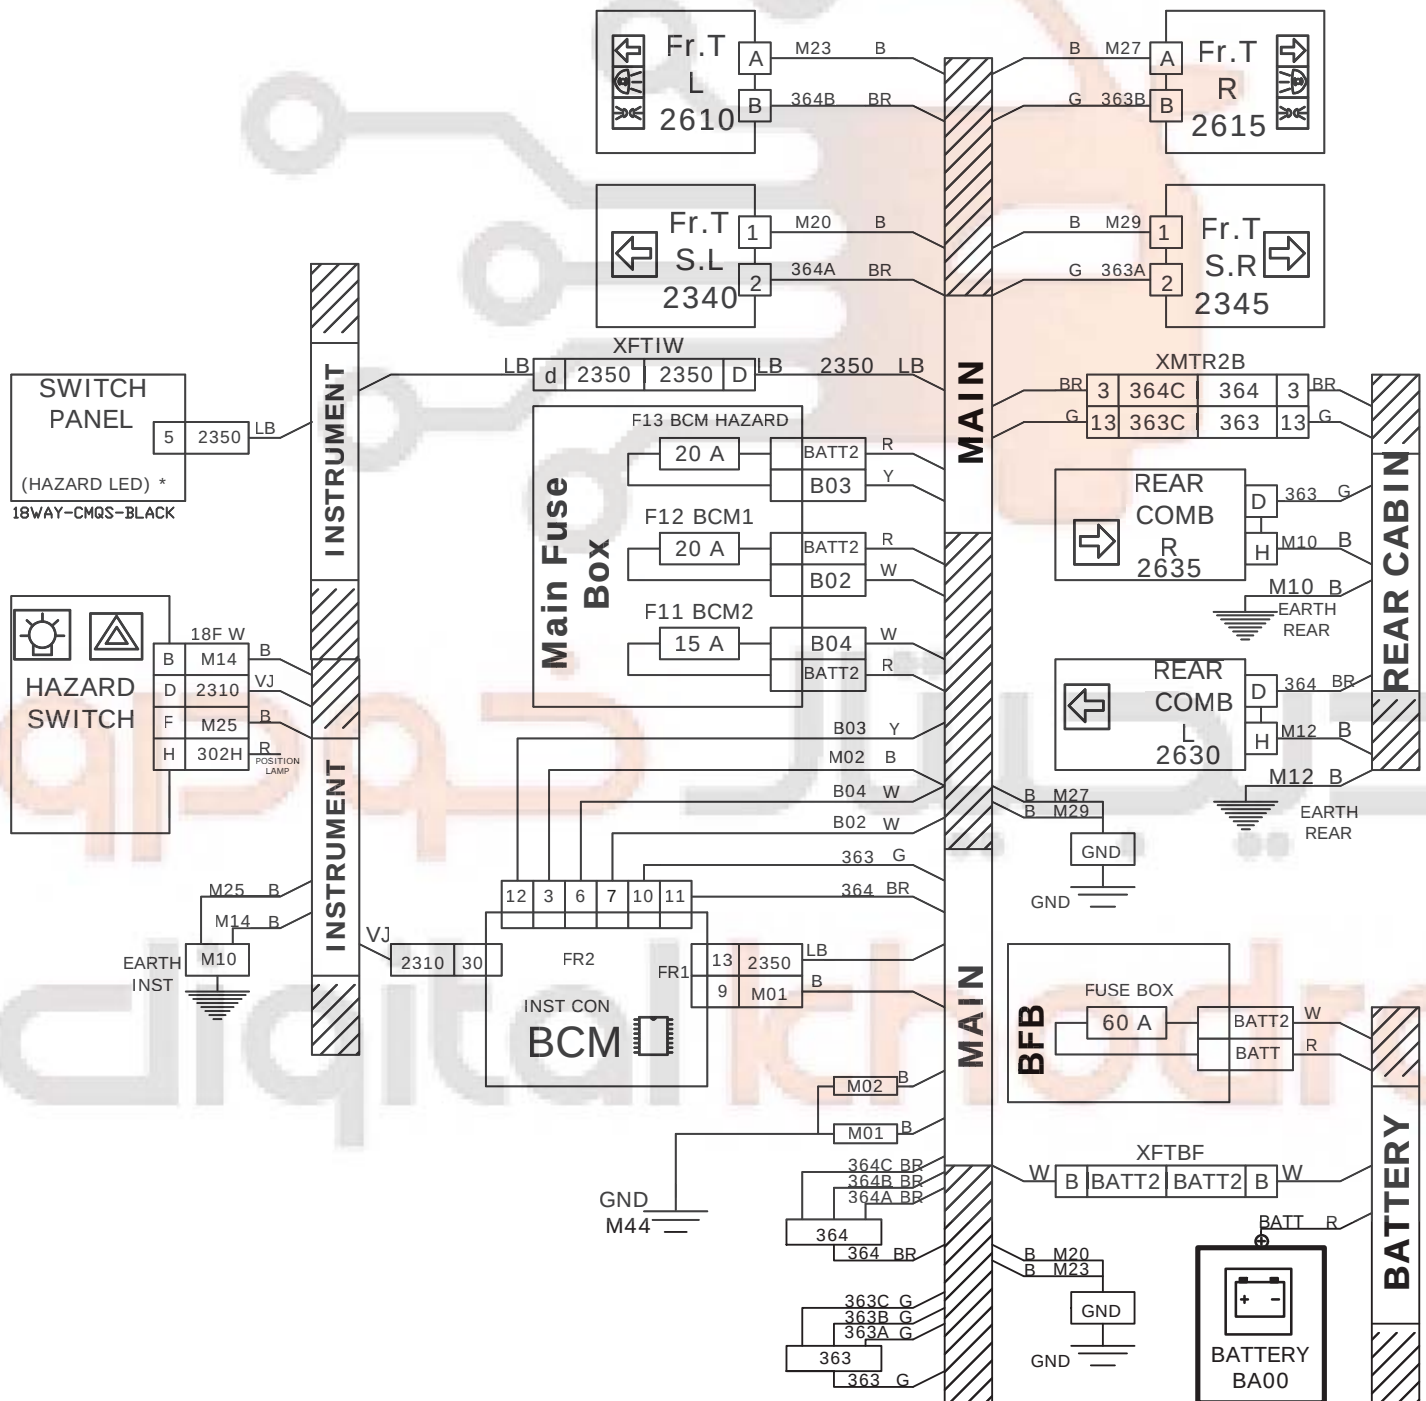
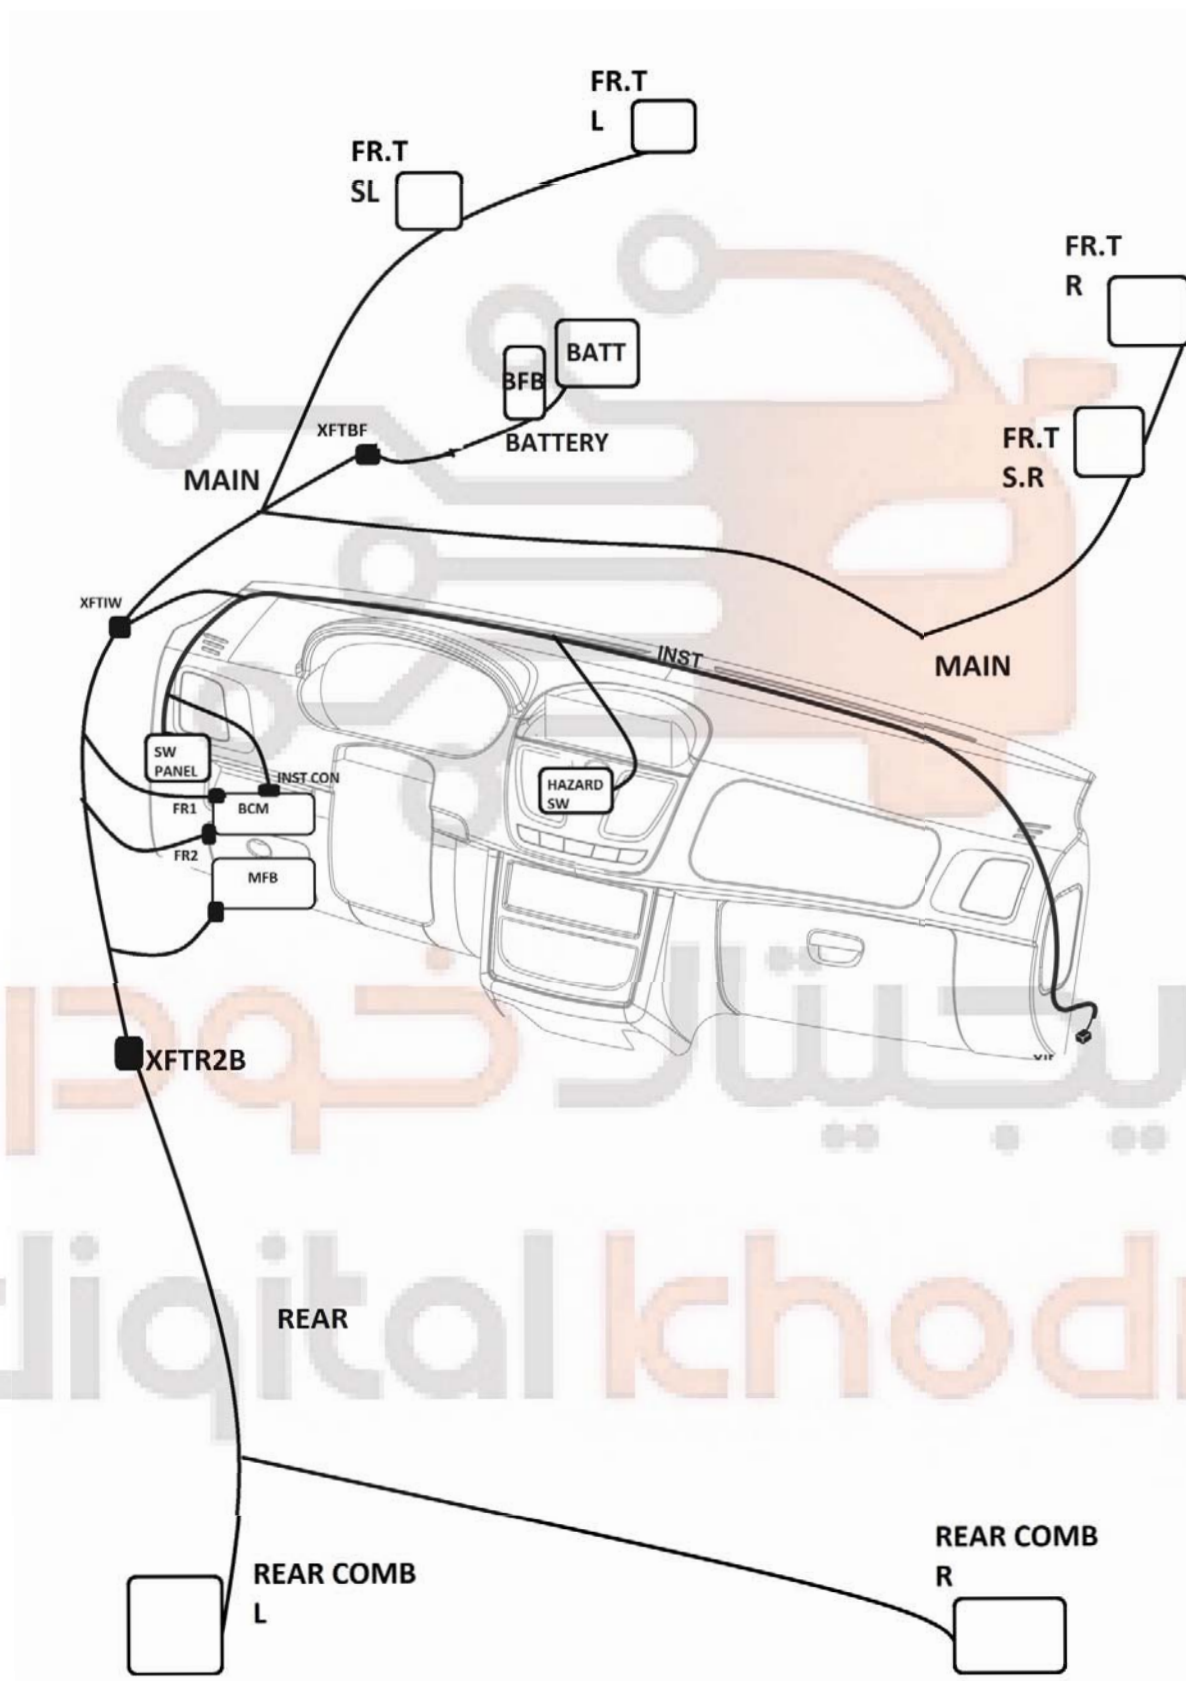











[illegible]


The diagram illustrates the electrical system for a vehicle, showing the following components and their connections:

  - Front Lights:**
 - Fr.T L 2610:** Connected to BATT2 R (20 A) via wire 364B BR.
 - Fr.T S.L 2340:** Connected to BATT2 R (15 A) via wire 364A BR.
 - Fr.T S.R 2345:** Connected to BATT2 R (15 A) via wire 363A G.
 - Fr.T R 2615:** Connected to BATT2 R (15 A) via wire 363B G.
- Rear Lights:**
 - REAR COMB L 2630:** Connected to BATT2 R (15 A) via wire 364 BR.
 - REAR COMB R 2635:** Connected to BATT2 R (15 A) via wire 363 G.
- Fuses:**
 - F12 BCM1:** 20 A, connected to BATT2 R.
 - F11 BCM2:** 15 A, connected to BATT2 R.
 - F13 BCM HAZARD:** 15 A, connected to BATT2 R.
- BCM (Body Control Module):**
 - Inputs: 11, 10, 12, 6, 7, 3, 9, 13.
 - Outputs: 11, 10, 12, 6, 7, 3, 9, 13.
 - Connections: 364 BR, 363 G, 363A G, 363B G, 364A BR, 364B BR, 364 BR, 363 G, 363A G, 363B G, 364A BR, 364B BR.
- BFB (Battery Fuse Block):**
 - 60 A fuse connected to BATT2 R.
 - 60 A fuse connected to BATT R.
- HAZARD SWITCH:**
 - Inputs: D, H, B, F.
 - Outputs: 2310, 302H, M14, M25.
 - Connections: 18F W, VJ, 2310, 302H, M14, M25.
- SWITCH PANEL:**
 - 5, 2350, LB.
- Battery:**
 - BATT2 R (20 A).
 - BATT R (15 A).
 - BATT (15 A).
- Other Components:**
 - REAR COMB L 2630:** Connected to BATT2 R (15 A) via wire 364 BR.
 - REAR COMB R 2635:** Connected to BATT2 R (15 A) via wire 363 G.
 - HAZARD SWITCH:** Connected to BATT2 R (15 A) via wire 363 G.
 - SWITCH PANEL:** Connected to BATT2 R (15 A) via wire 363 G.

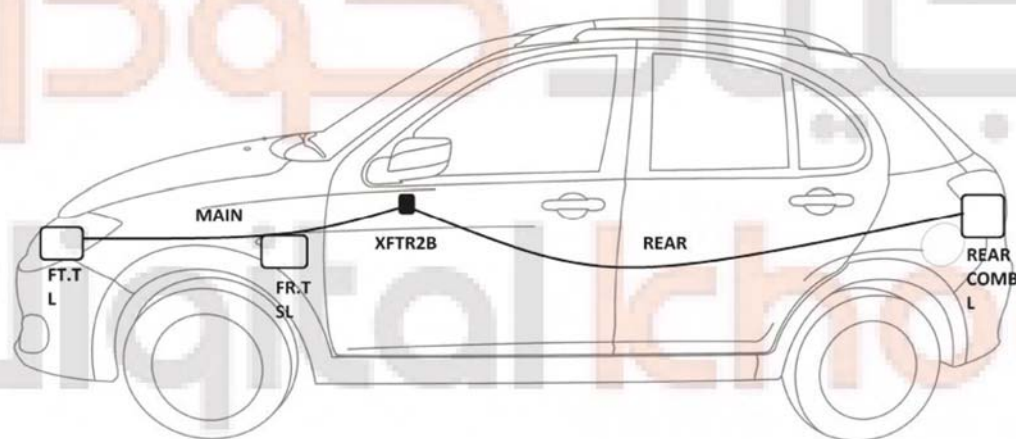

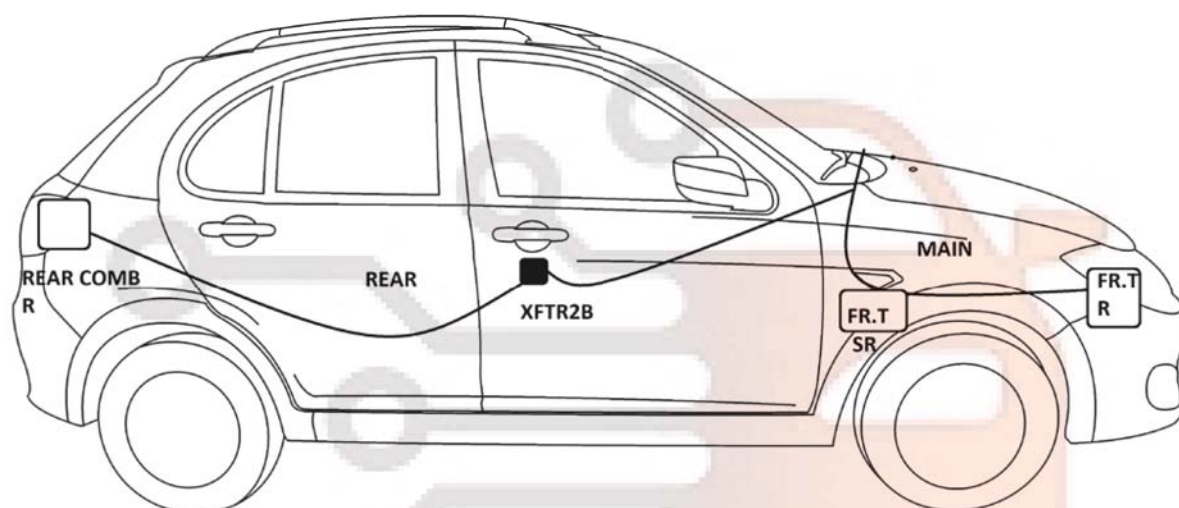


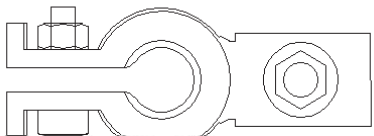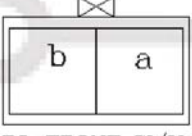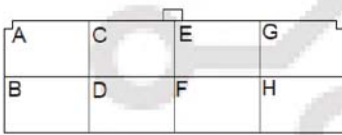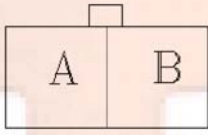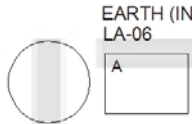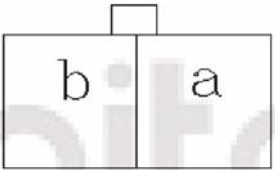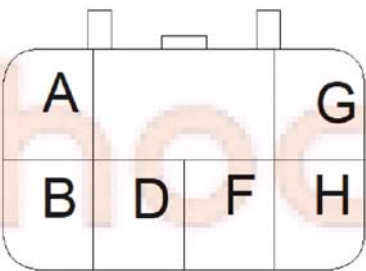 کانکتور قطب مثبت باطری	 کانکتور قطب منفی باطری
 کانکتور ارتباطی دسته سیم باطری به دسته سیم اصلی 2 XBTF2	 کانکتور اتصال بدنه (شاسی)
 کانکتور مجموعه دسته راهنما COMB SW 8	 کانکتور ارتباطی دسته سیم باطری به دسته سیم اصلی XBTF2B
 کانکتور ارتباط دسته سیم اصلی به دسته سیم عقب XFTR2B	 کانکتور اتصال بدنه (شاسی)
 2 کانکتور ارتباط دسته سیم اصلی به دسته سیم باطری XFTB2B	 کانکتور مجموعه چراغ عقب

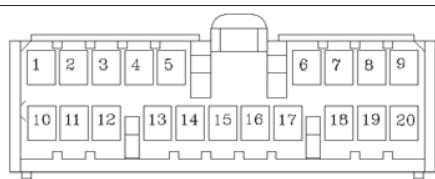


BCM FR1

FR1 کانکتور بی سی ام
BCM FR1

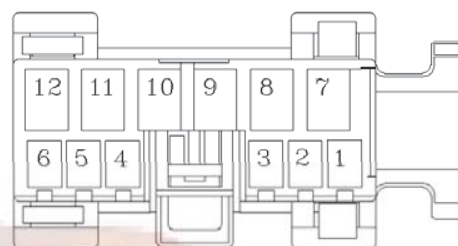

BCM FR2

FR2 کانکتور بی سی ام
BCM FR2

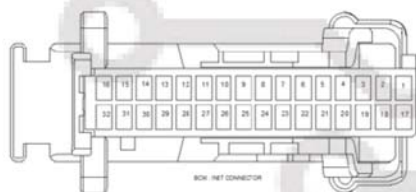

کانکتور بی سی ام
BCM INST



FRONT TURN(SMALL)

کانکتور راهنما (گلگیر)




FRONT TURN

کانکتور چراغ راهنما




TO FRONT W

W کانکتور ارتباط دسته سیم داشبورد به دسته سیم اصلی
XITFW

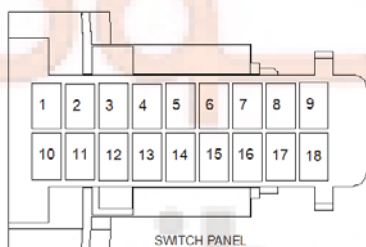

SWITCH PANEL

کانکتور مجموعه سویچ پنل
SWITCH PANEL

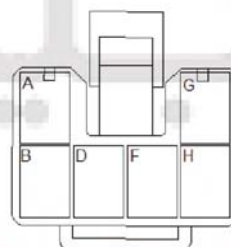

HAZARD SWITCH

کانکتور کلید فلاشر