


نقشه سیم کشی خودرو

سیم کشی کنترل موتور در نوع ۱،۶ و ۱،۸

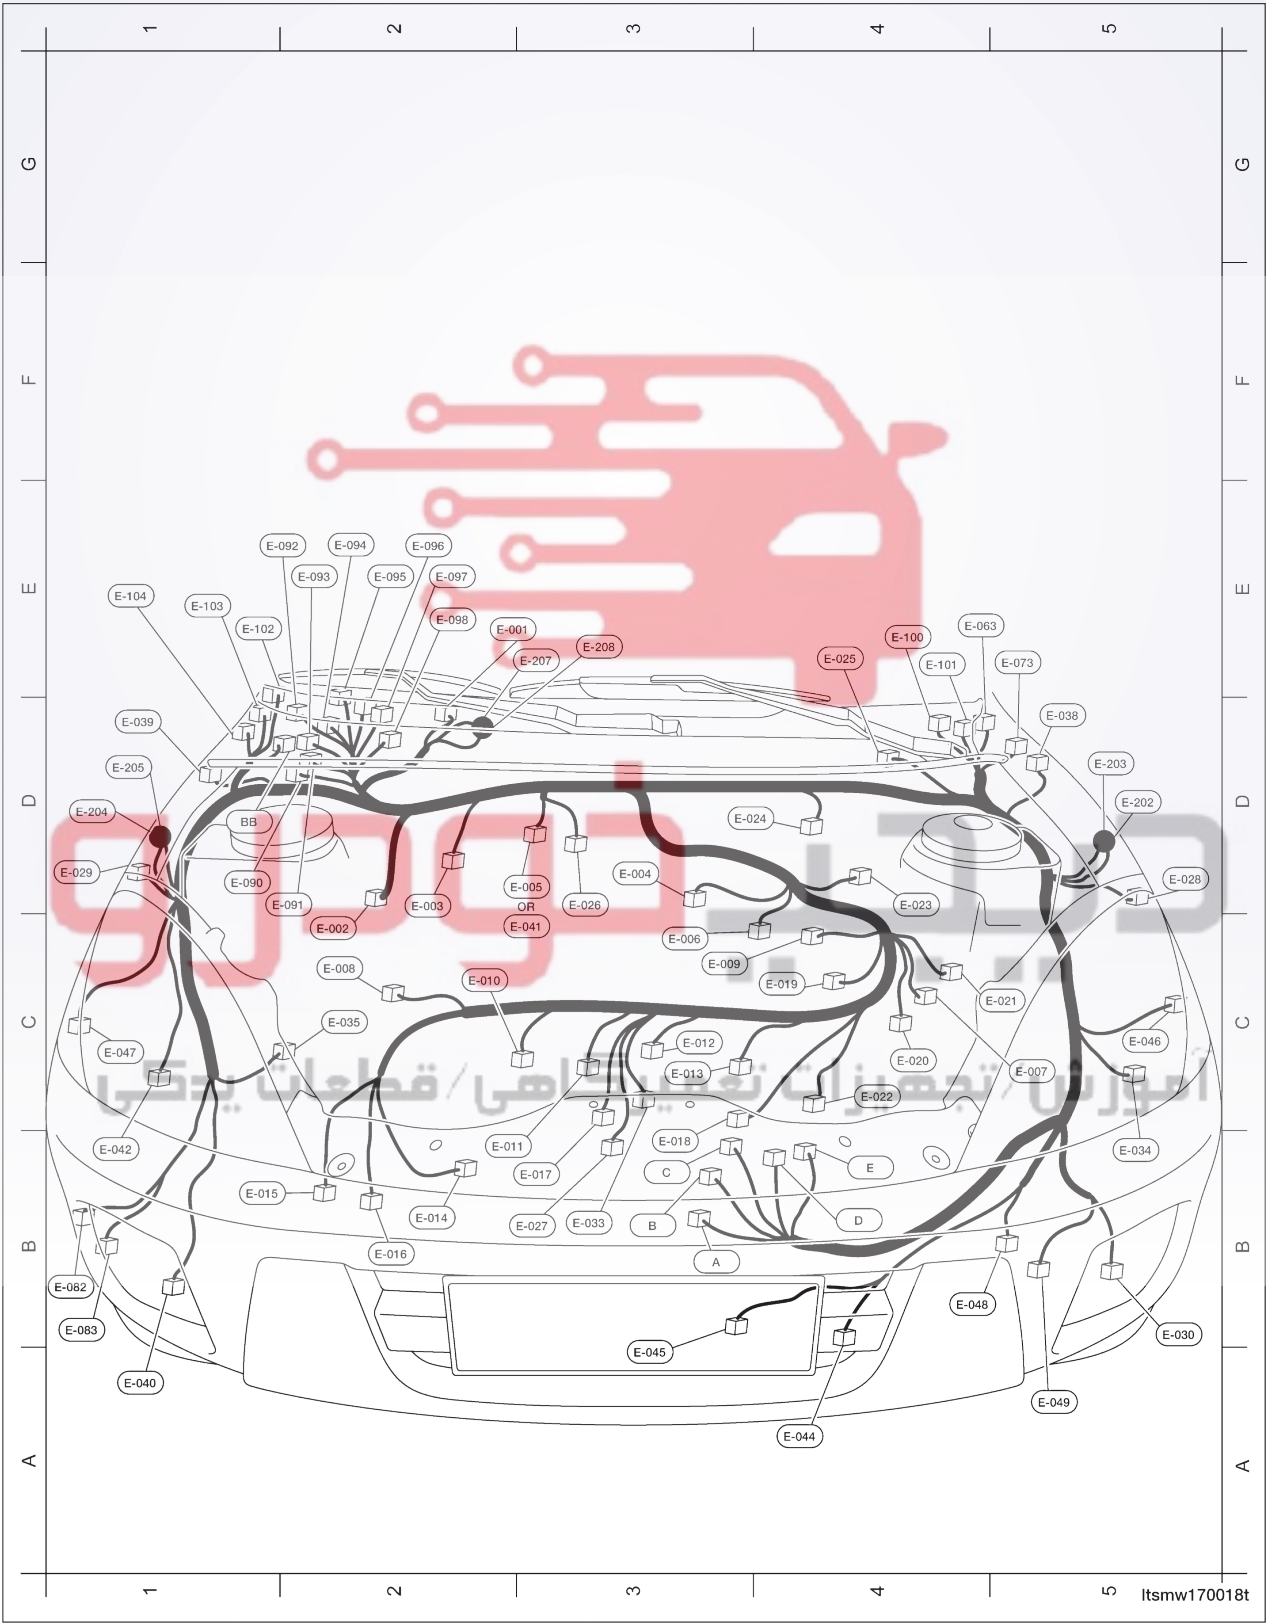

نقشه سیم کشی خودرو


B3	Power Fuse Box	/1	A
B3	Power Fuse Box	/1	B
B3	Power Fuse Box	/1	C
B4	Power Fuse Box	/1	D
B4	Power Fuse Box	/1	E
D2	ECM	B/81	E-001
D2	ماژول ترمز ضد قفل	B/25	E-002
D2	سویچ فشار تهویه	B/4	E-003
D3	سنسور اکسیژن	W-O/4	E-004
D3	Sownstream Oxygen Sensor (With EOBD)	W-O/4	E-005
C4	سنسور میل لنگ	B/3	E-006
C4	سنسور میل بادامک	B/3	E-007
C2	دینام	B/3	E-008
C4	سنسور هوا	B/5	E-009
C3	انژکتور سوخت شماره ۱	B/2	E-010
C3	انژکتور سوخت شماره ۲	B/2	E-011
C3	انژکتور سوخت شماره ۳	B/2	E-012
C4	انژکتور سوخت شماره ۴	B/2	E-013
B2	فرمان	B/1	E-014
B2	کمپرسور	B/2	E-015
B2	فشار روغن	W/1	E-016
B3	سنسور ضربه	B/3	E-017
B4	استارت	B/1	E-018
C4	قشنگی دمای آب موتور	B/2	E-019
C4	کوئل / تجهیزات تعمیرگاهی / قطعات یدکی	B/4	E-020
C4	سویچ چراغ Backup	B/2	E-021
C4	سوپاپ کنترل کانیستر	B/3	E-022
D4	فشنگی سرعت	B/3	E-023
D4	سویچ سطح روغن ترمز	GR/2	E-024
D4	موتور برف پاک کن جلو	GR/5	E-025
D3	بوق	B/2	E-026
B3	کنترل دریچه گاز	B/6	E-027
D5	فشنگی سرعت چرخ جلو - چپ	B/2	E-028
D1	فشنگی سرعت چرخ جلو - راست	B/2	E-029
B5	چراغ مه شکن - چپ	B/2	E-030
C3	فشنگی فشار مانیفولد	B/4	E-033
C5	چراغ جلو - چپ	B/10	E-034

نقشه سیم کشی خودرو

C2	سنسور گاز	B/3	E-035
D5	Side Turn Signal Lamp LH	B/3	E-038
D1	Side Turn Signal Lamp RH	B/2	E-039
B1	چراغ مه شکن - راست	B/2	E-040
D3	فشنگی اکسیژن	B/4	E-041
C1	چراغ جلو - راست	B/10	E-042
B4	فن اول	B/2	E-044
B3	فن ثانویه	B/2	E-045
C5	Turn Signal Lamp LH	B/2	E-046
C1	Turn Signal Lamp RH	B/2	E-047
B5	بوق ۱	B/2	E-048
B5	بوق ۲	B/2	E-049
D4	جعبه رله	W/14	E-063
D4	جعبه رله	B/1	E-073
B1	Front Washer Motor	B/2	E-082
B1	Rear Washer Motor	W/2	E-083
D2	(A) فیوز جلو و جعبه رله	W/16	E-090
D2	(B) فیوز جلو و جعبه رله	W/8	E-091
D2	(C) فیوز جلو و جعبه رله	W/14	E-092
D2	(D) فیوز جلو و جعبه رله	B/1	E-093
D2	(E) فیوز جلو و جعبه رله	B/1	E-094
D2	(F) فیوز جلو و جعبه رله	W/4	E-095
D2	(G) فیوز جلو و جعبه رله	W/20	E-096
D2	(H) فیوز جلو و جعبه رله	B/10	E-097
D2	(I) فیوز جلو و جعبه رله	B/2	E-098
E4	To C-107 ¹	W/16	E-100
E4	To C-109 ¹	W/18	E-101
E2	To C-102 ¹	W/14	E-102
D2	To C-103 ¹	W/14	E-103
D2	To B-111 ¹	W/18	E-104
D5	اتصال بدنه	-	E-202
D5	اتصال بدنه	-	E-203
D1	اتصال بدنه	-	E-204
D1	اتصال بدنه	-	E-205
D2	اتصال بدنه	-	E-207
D2	اتصال بدنه	-	E-208

نقشه سیم کشی خودرو

سیم کشی کنترل موتور در نوع ACETO ۲,۰

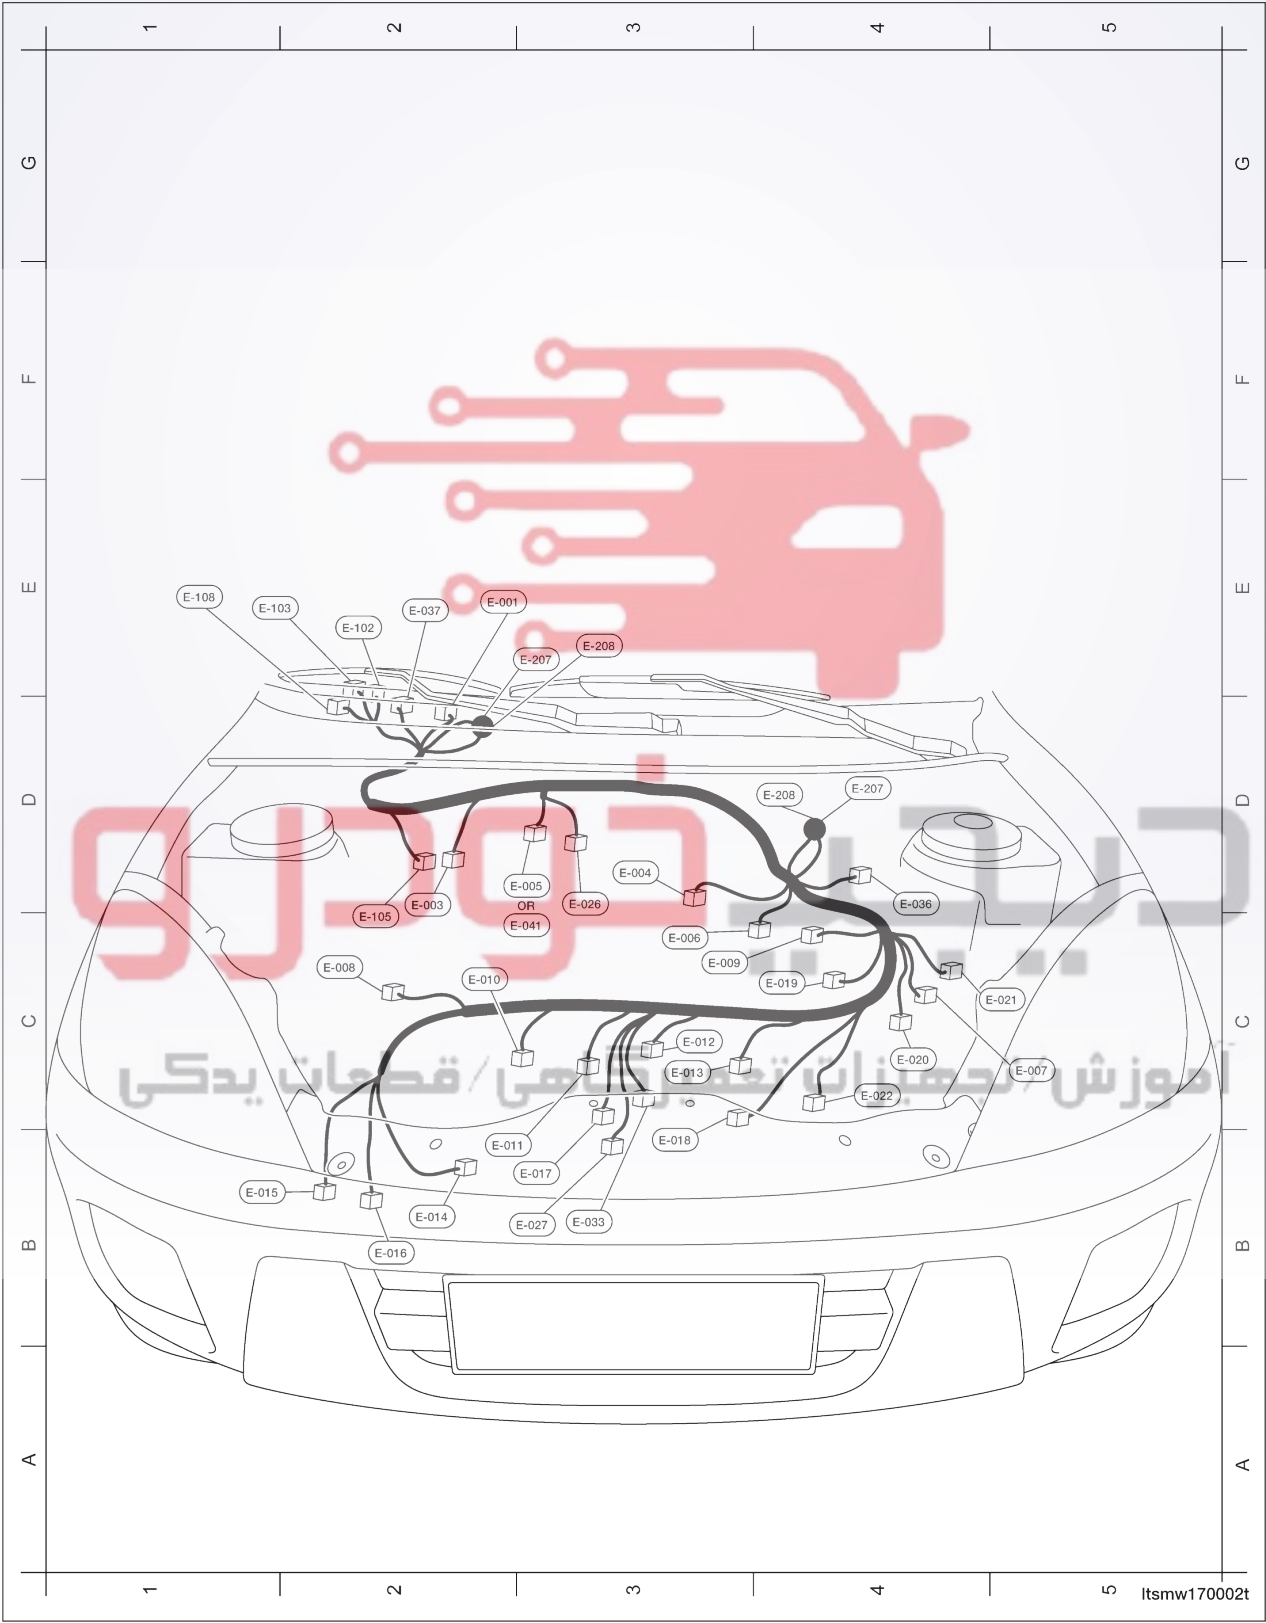


نقشه سیم کشی خودرو

E-001	B/81	ECM	D2
E-003	B/4	A/C Pressure Switch	D2
E-004	W-O/4	Upstream Oxygen Sensor	D3
E-005	W-O/4	Downstream Oxygen Sensor (With EOBD)	D3
E-006	B/3	Crankshaft Position Sensor	D4
E-007	B/3	Camshaft Position Sensor	C4
E-008	B/3	Generator	C2
E-009	B/5	Air Flow Sensor	C4
E-010	B/2	Fuel Injector No.1	C2
E-011	B/2	Fuel Injector No.2	C3
E-012	B/2	Fuel Injector No.3	C3
E-013	B/2	Fuel Injector No.4	C3
E-014	B/1	Power Steering Switch	B2
E-015	B/2	A/C Compressor	B2
E-016	B/1	Oil Pressure Switch	B2
E-017	B/3	Knock Sensor	C3
E-018	B/1	Starter Motor	C3
E-019	B/2	Engine Coolant Temperature Sensor	C4
E-020	B/4	Ignition Coil	C4
E-022	B/2	Canister Control Valve	C4
E-026	B/2	Siren	D3
E-027	B/6	Electronic Throttle Control Actuator	B3
E-033	B/4	Manifold Absolute Pressure Sensor	C3
E-036	GR/56	TCM (Transmission Control Module)	D2
E-037	GR/33	A/T Assembly	D4
E-041	B/4	Downstream Oxygen Sensor (Without EOBD)	D3
E-043	B/2	Fluid Cooler Flow Control Solenoid Valve	D4
E-102	W/14	To C-102	E2
E-103	B/14	To C-103	E2
E-105	B/16	To A-102	D3
E-108	B/2	To C-108	D2
E-207	-	Ground	D2
E-208	-	Ground	D2

نقشه سیم کشی خودرو

سیم کشی کنترل موتور در نوع میتسوبیشی ۲،۴

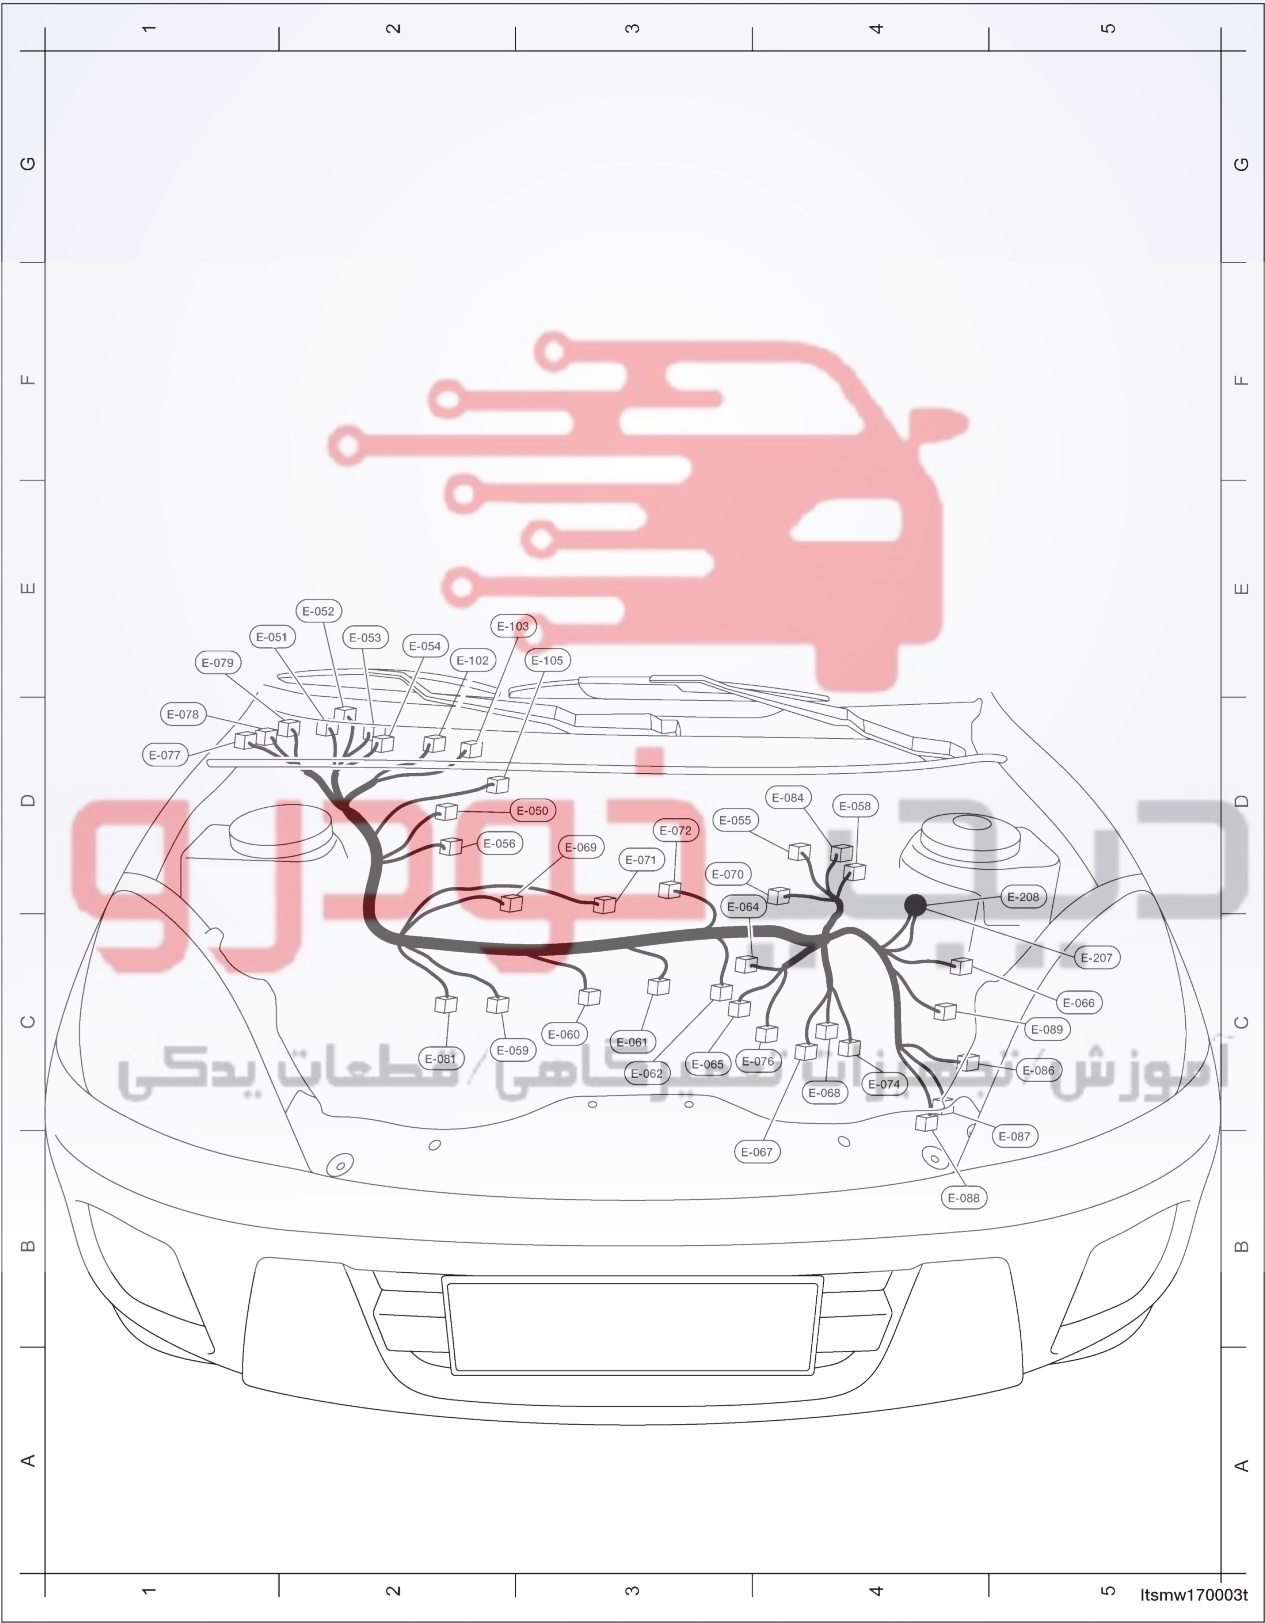


نقشه سیم کشی خودرو

E-050	B/4	A/C Pressure Switch	D2
E-051	W/26	ECM	D2
E-052	W/16	ECM	D2
E-053	W/12	ECM	D2
E-054	W/22	ECM	D2
E-055	GR/3	Camshaft Position Sensor	D4
E-056	GR/3	Crankshaft Position Sensor	D2
E-058	B/7	Air Flow Sensor	D4
E-059	GR/2	Fuel Injector No.1	C2
E-060	GR/2	Fuel Injector No.2	C3
E-061	GR/2	Fuel Injector No.3	C3
E-062	GR/2	Fuel Injector No.4	C3
E-064	B/6	Idle Air Control Motor	C3
E-065	B/1	Oil Pressure Switch	C3
E-066	BR/2	Knock Sensor	C4
E-067	B/1	Starter Motor	C4
E-068	B/2	Engine Coolant Temperature Sensor	C4
E-069	GR/3	Ignition Coil 1	D2
E-070	GR/3	Ignition Coil 2	D4
E-071	GR/2	Canister Control Valve	D3
E-072	BR/2	EGR Control Solenoid Valve	D3
E-074	B/4	Upstream Oxygen Sensor	C4
E-076	B/4	Throttle Position Sensor	C4
E-077	W/26	TCM (Transmission Control Module)	D1
E-078	W/16	TCM (Transmission Control Module)	D1
E-079	W/22	TCM (Transmission Control Module)	D1
E-081	GR/4	Generator	C2
E-084	B/1	Coolant Temperature Sensor (For Instrument Cluster)	D4
E-086	GR/10	A/T Assembly	C4
E-087	GR/10	Gearshift Switch	C4
E-088	B/3	Input Shaft Sensor	C4
E-089	GR/3	Output Shaft Sensor	C4
E-102	W/14	To C-102	D2
E-103	B/14	To C-103	D2
E-105	B/16	To A-105	D2
E-207	-	Ground	C4
E-208	-	Ground	C4

نقشه سیم کشی خودرو

سیم کشی اتاق موتور در نوع ۲،۰ و ۲،۴ لیتر

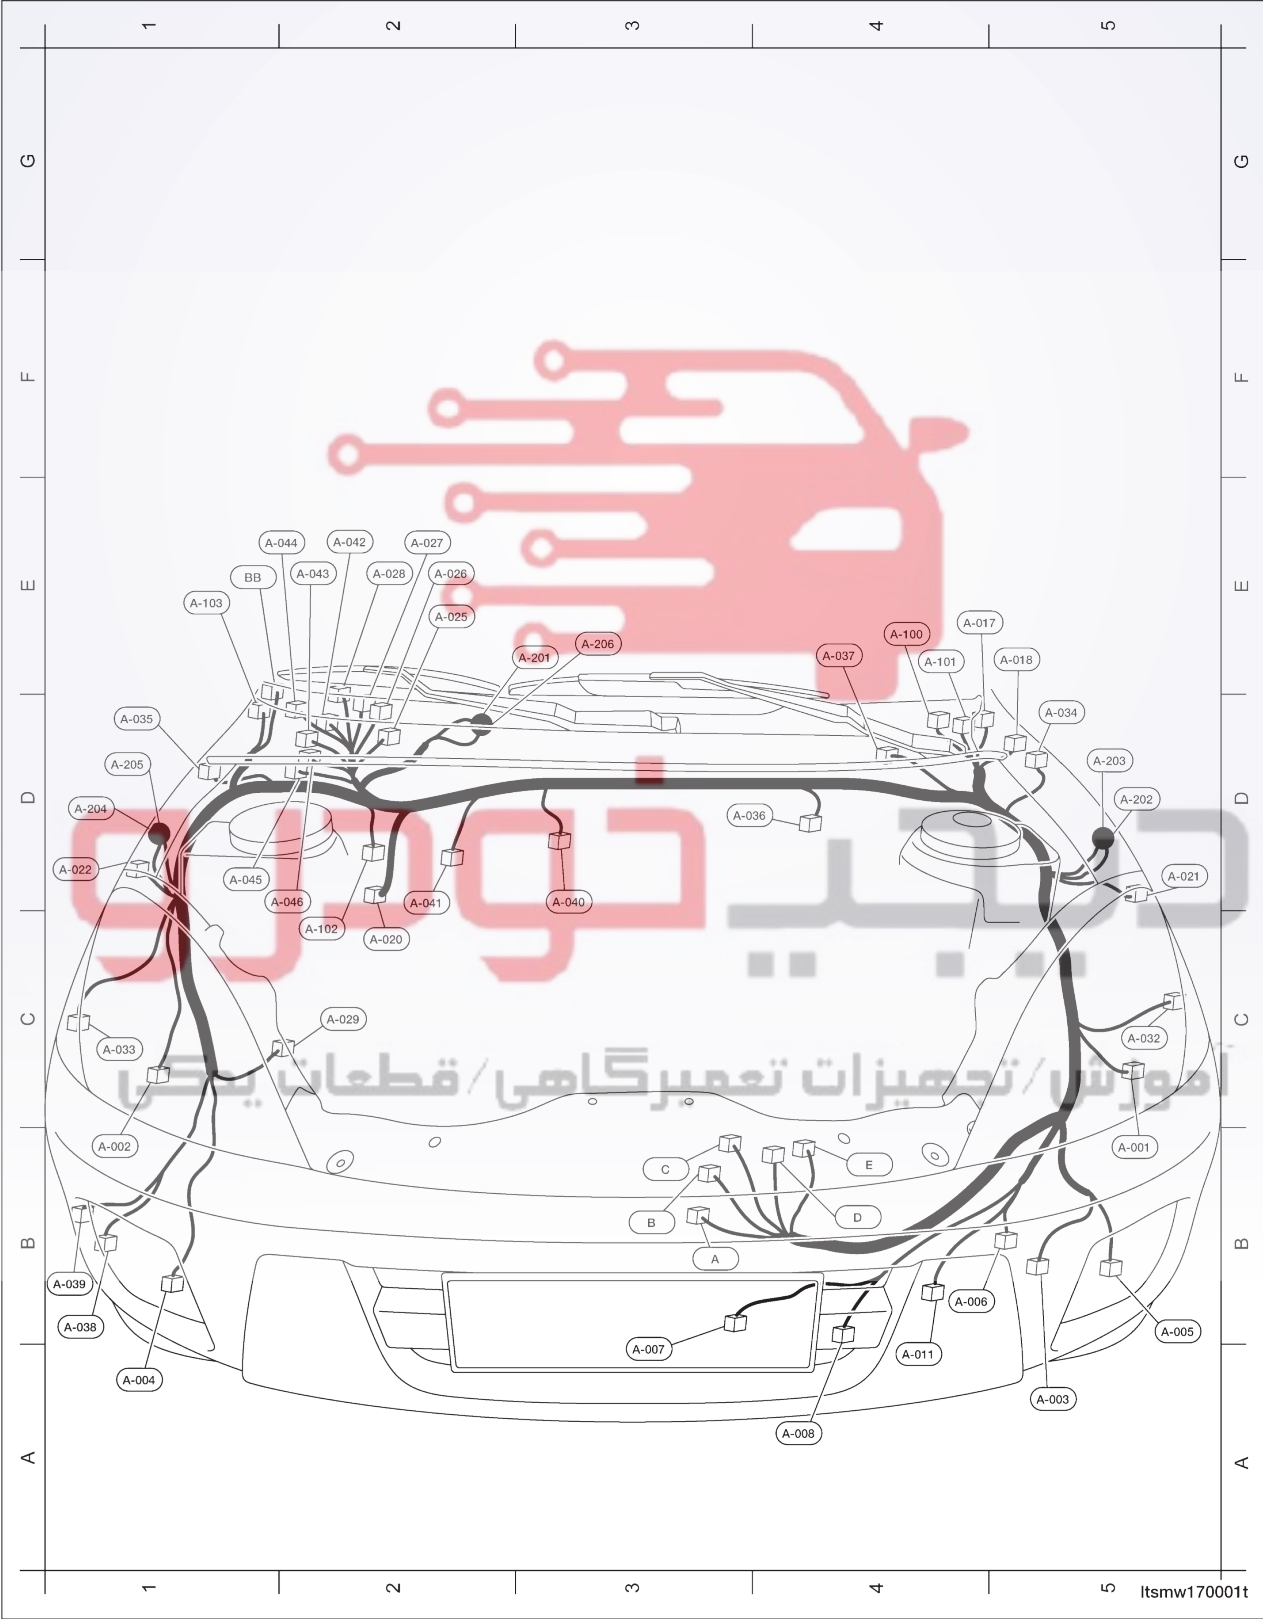

نقشه سیم کشی خودرو

A	/1	Power Fuse Box	B3
B	/1	Power Fuse Box	B3
C	/1	Power Fuse Box	B3
D	/1	Power Fuse Box	B4
E	/1	Power Fuse Box	B4
A-001	B/10	Front Combination Lamp LH	B5
A-002	B/10	Front Combination Lamp RH	B1
A-003	B/2	Front Fog Lamp LH	A5
A-004	B/2	Front Fog Lamp RH	A1
A-005	GR/1	Horn 1	B5
A-006	GR/2	Horn 2	B5
A-007	B/2	Main Fan Motor	B3
A-008	B/2	Secondary Fan Motor	B4
A-011	GR/3	Cooling Fan Control Module	B4
A-017	W/14	Body Fuse And Relay Box (H)	D5
A-018	B/1	Body Fuse And Relay Box (C)	D5
A-020	B/25	ABS Hydraulic Control Module	C2
A-021	B/2	Front Wheel Speed Sensor LH	D5
A-022	B/2	Front Wheel Speed Sensor RH	D1
A-023	B/2	A/C Compressor	B2
A-024	B/1	Power Steering Switch	C2
A-025	W/16	Front Fuse And Relay Box (A)	D2
A-026	W/8	Front Fuse And Relay Box (B)	D2
A-027	W/14	Front Fuse And Relay Box (C)	D2
A-028	B/1	Front Fuse And Relay Box (D)	D2
A-029	B/3	Accelerator Sensor	C2
A-032	B/2	Turn Signal Lamp LH	C5
A-033	B/2	Turn Signal Lamp RH	C1
A-034	B/2	Side Turn Signal Lamp LH	D5
A-035	B/2	Side Turn Signal Lamp RH	D1
A-036	GR/2	Brake Fluid Level Switch	D4
A-037	GR/5	Front Wiper Motor	D4
A-038	W/2	Front Washer Motor	B1
A-039	B/2	Rear Washer Motor	B1
A-040	B/2	Siren	D3
A-041	B/1	A/C Pressure Switch	D2
A-042	B/1	Front Fuse And Relay Box (E)	D2
A-043	W/4	Front Fuse And Relay Box (F)	D2
A-044	W/20	Front Fuse And Relay Box (G)	D2
A-045	B/10	Front Fuse And Relay Box (H)	D2
A-046	B/2	Front Fuse And Relay Box (I)	D2
BB	B/1	BCM (Body Control Module) (Battery)	D2
A-100	W/18	To C-100	D4
A-101	W/18	To C-101	D4

نقشه سیم کشی خودرو

A-102	B/16	To E-105	D3
A-103	W/18	To B-106	D1
A-201	-	Ground	D2
A-202	-	Ground	D5
A-203	-	Ground	D5
A-204	-	Ground	D1
A-205	-	Ground	D1
A-206	-	Ground	D2



دیجی خودرو

آموزش / تجهیزات تعمیرگاهی / قطعات یدکی



CHERY