

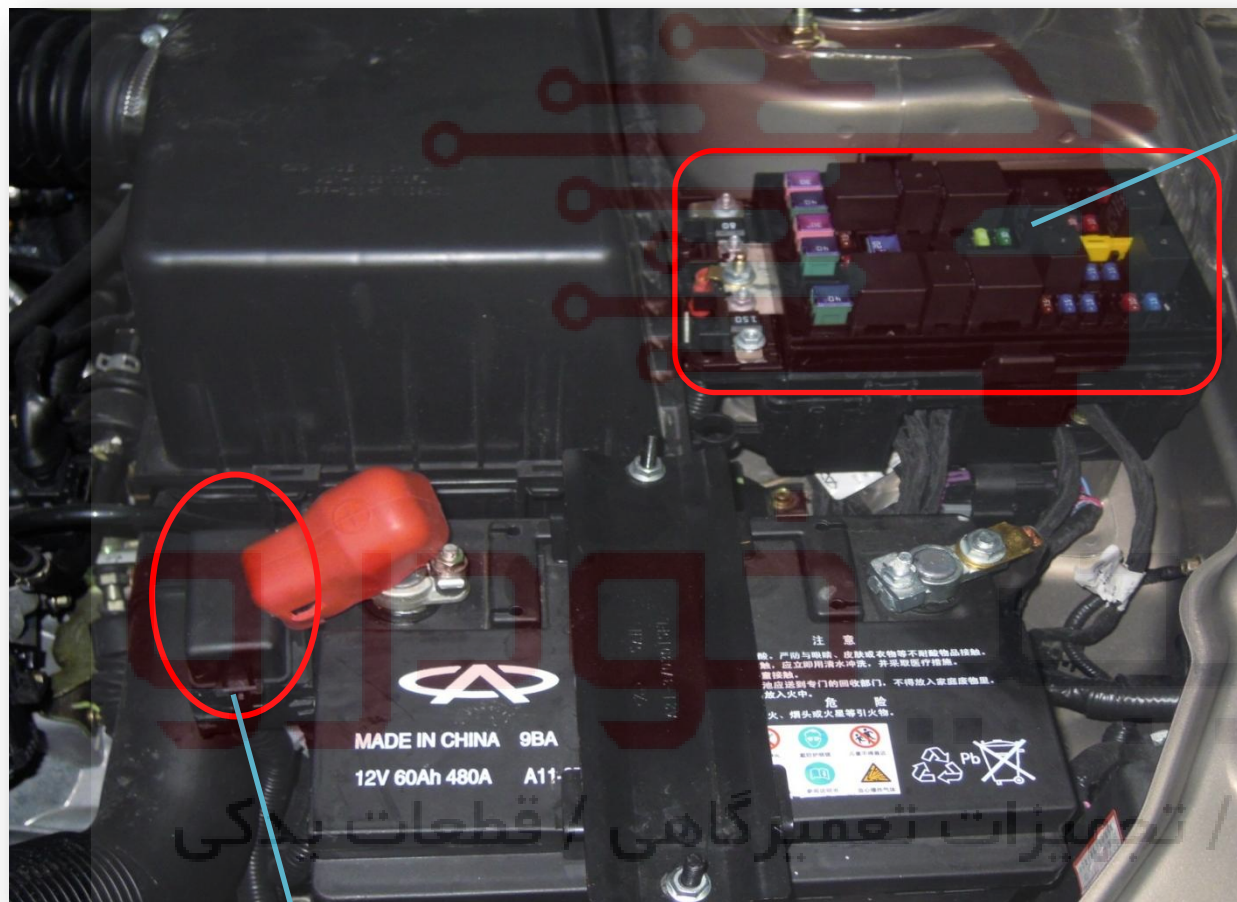




جعبه فیوز داخل محفظه موتور

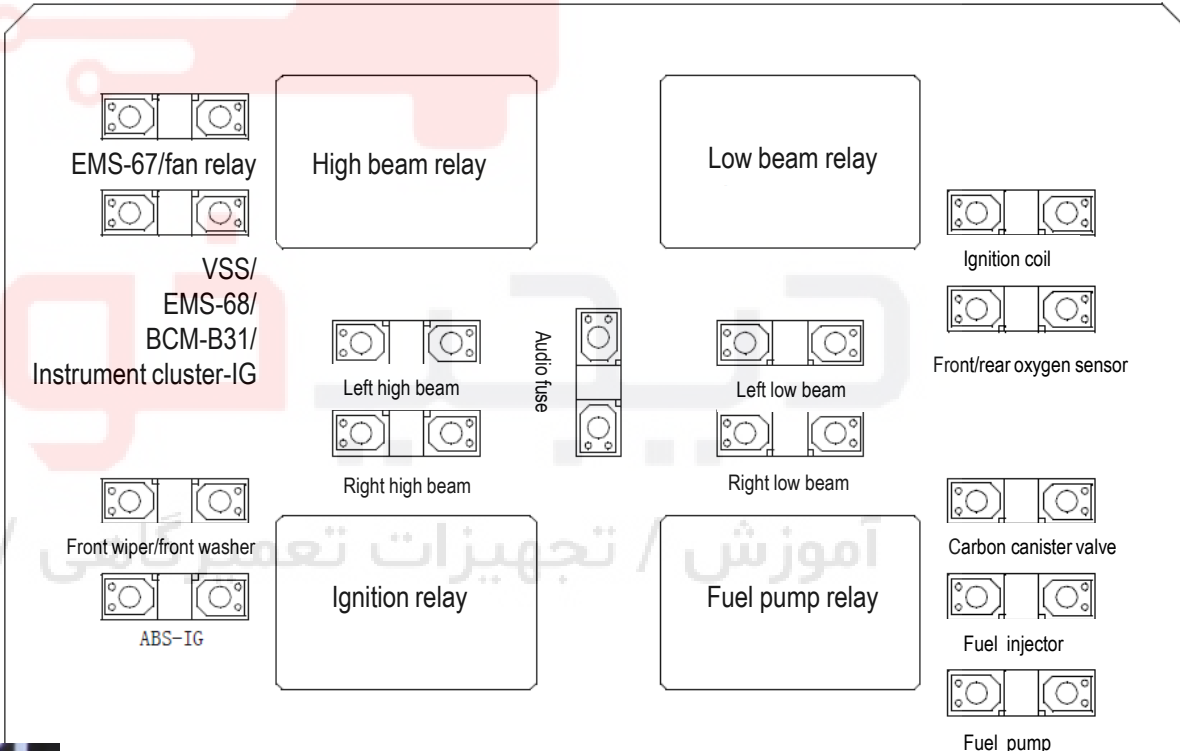


جعبه فیوز موتور

جعبه فیوز باتری

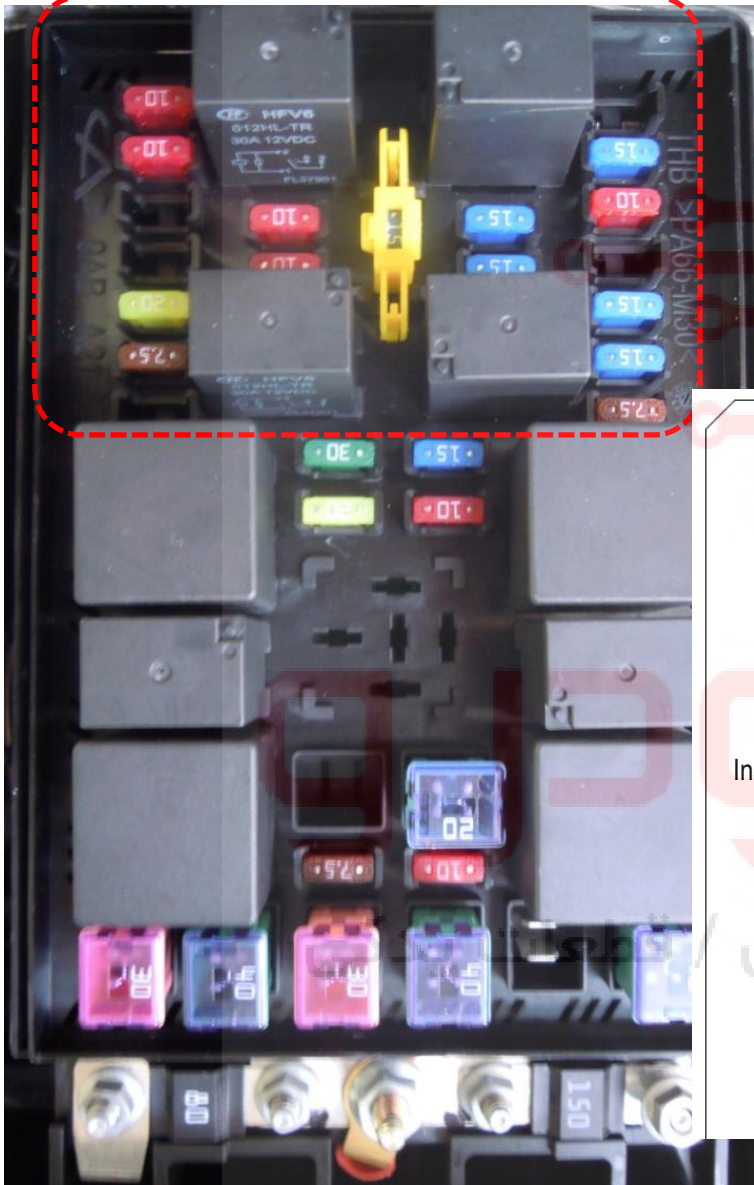

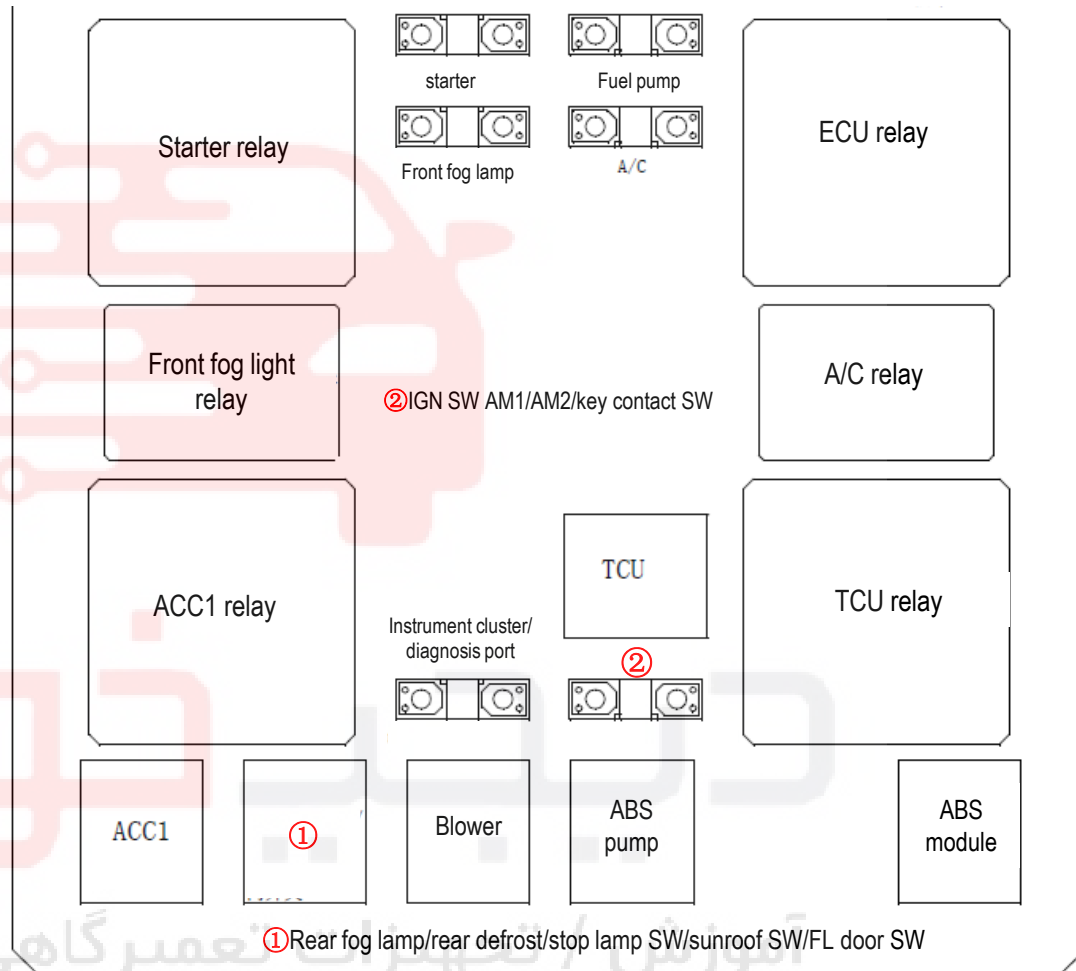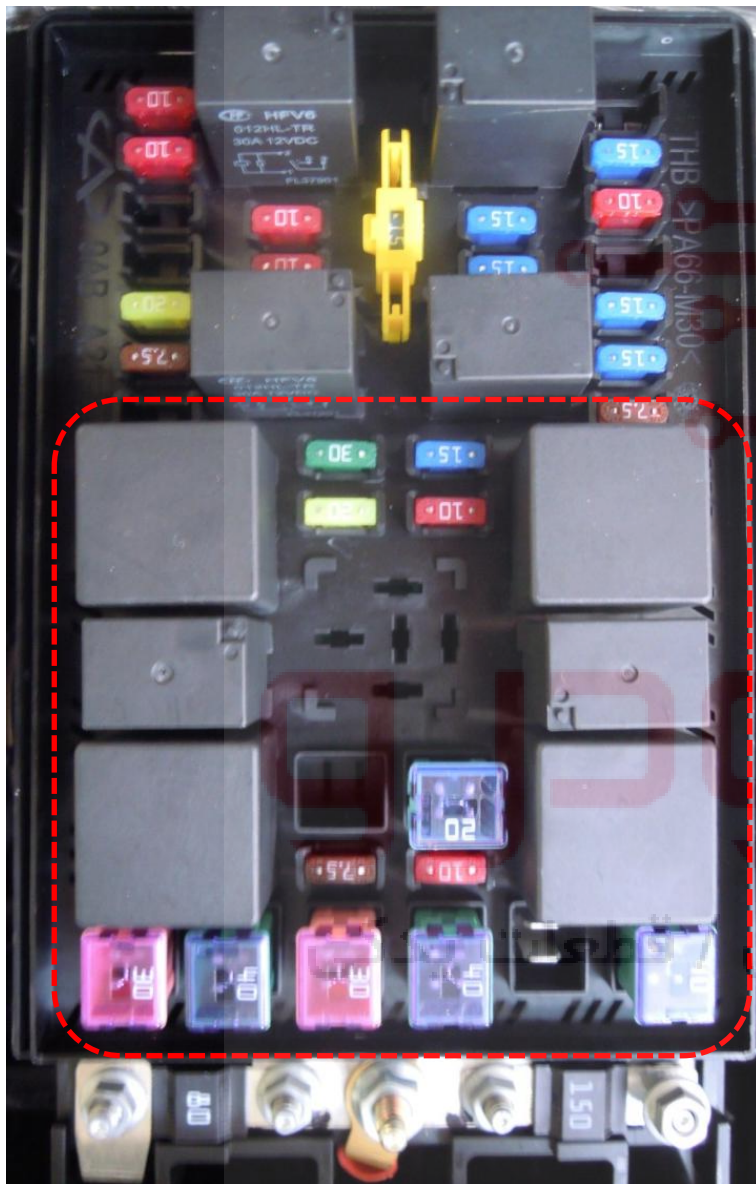



جعبه فیوز اتاق

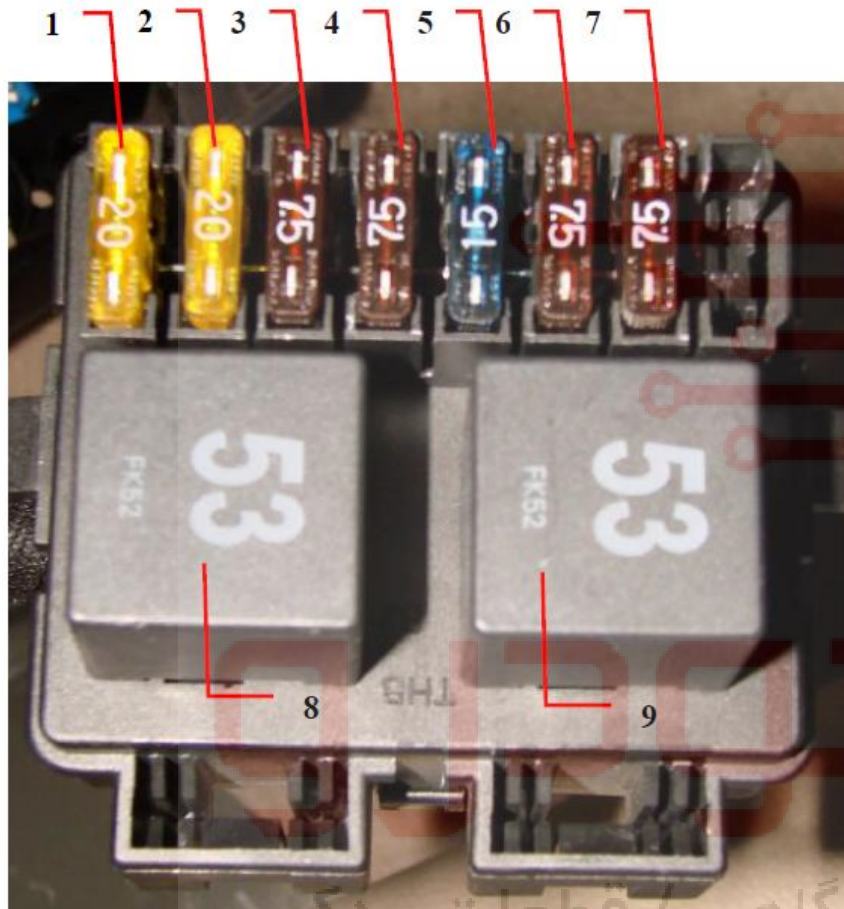

Passenger compartment fuse box(SQR477F)

No.	fuse/relay No.	capacity(A)	function
1	RF-01	20	rear defrost relay 30#, 85#
2	RF-02	20	sunroof motor 1#, sunroof SW 4#
3	RF-03	7.5	rear fog lamp relay 30#, 85#, stop lamp switch 3#, FL door SW 9#
4	RF-04	7.5	right/left rearview mirror 5#
5	RF-05	15	audio main connector 10# , cigaret lighter 2#, rearview mirror regulating SW 5#
6	RF-06	7.5	airbag module 1#
7	RF-07	7.5	A/C connector 3#, audio auxiliary connector 13#
8	RLY1	\	blower relay
9	RLY2	\	rear defrost relay

جعبه فیوز باتری

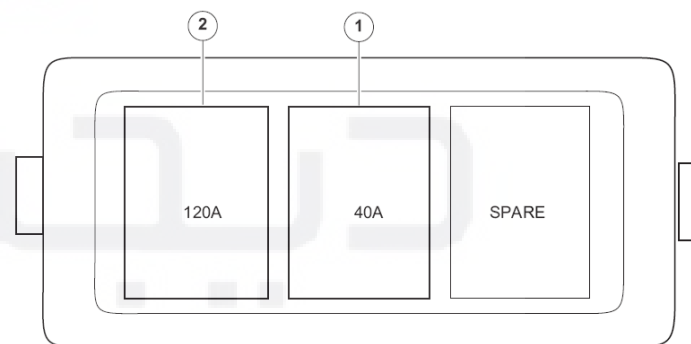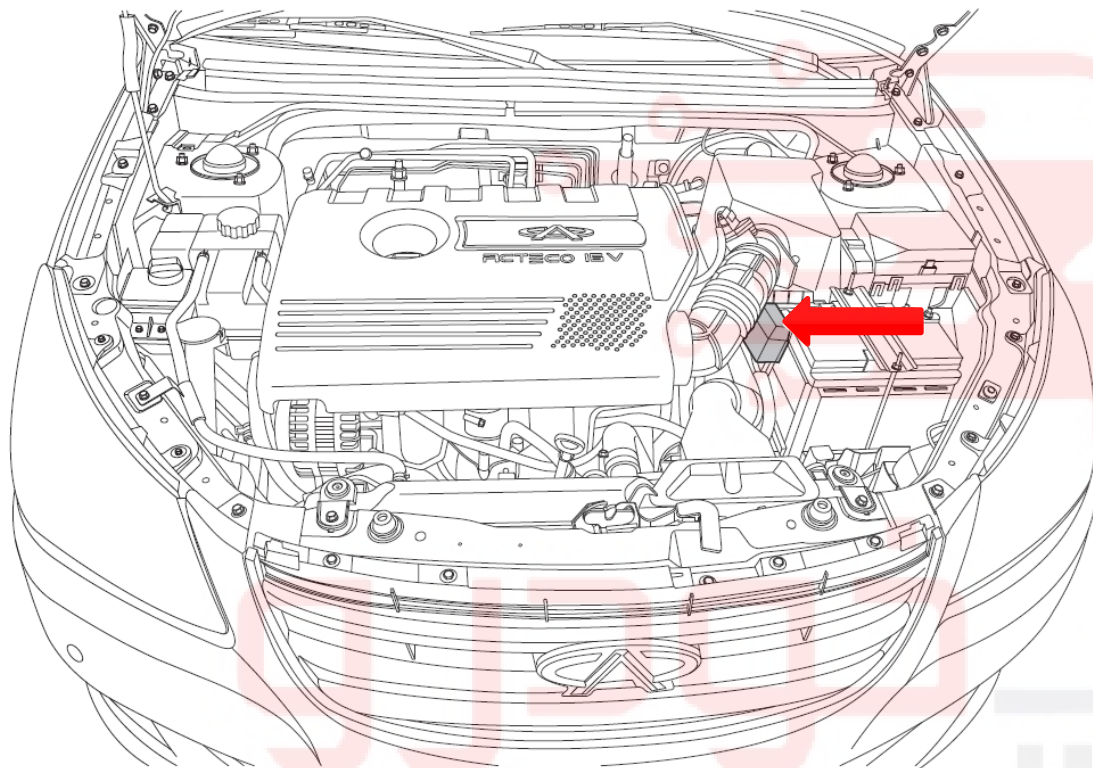

Item	Capacity	Item	Capacity
1. FAN BAT	40 A	2. GENERATOR	120 A

اتصالات بدنه

