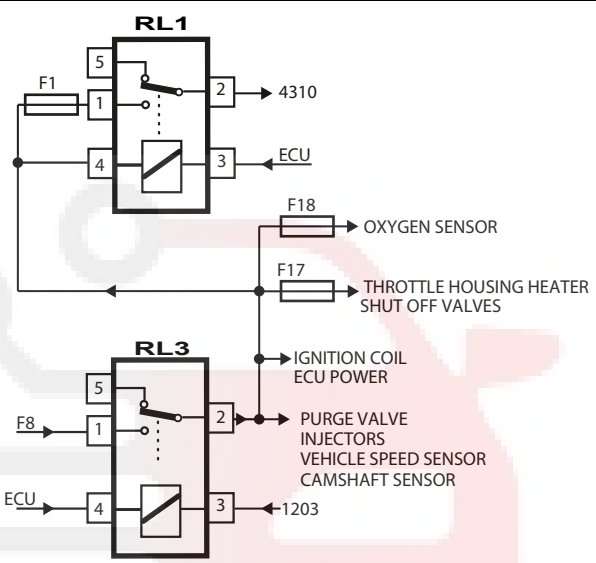
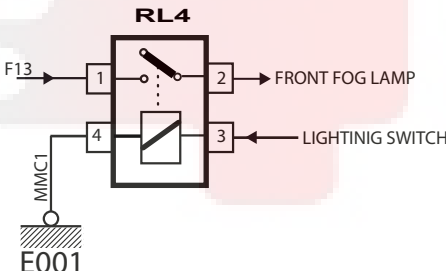
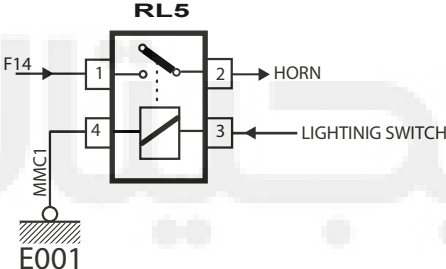
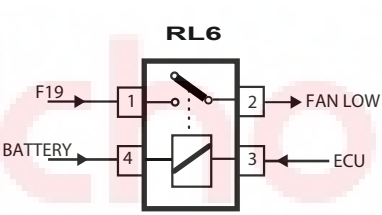
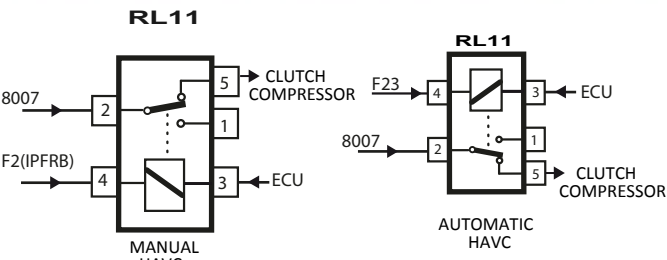


| Engine Relay Box |                           |                      |                                                                                      |
|------------------|---------------------------|----------------------|--------------------------------------------------------------------------------------|
| Relay Number     | Details                   | Loads                | Schematic                                                                            |
| <b>RL1</b>       | 20A<br>1 Contact<br>BLACK | Double<br>Relay      |    |
| <b>RL3</b>       | 20A<br>1 Contact<br>GRAY  |                      |                                                                                      |
| <b>RL4</b>       | 20A<br>1 Contact<br>BLACK | FRONT<br>FOG<br>LAMP |   |
| <b>RL5</b>       | 20A<br>1 Contact<br>BLACK | HORN                 |  |
| <b>RL6</b>       | 20A<br>1 Contact<br>BLACK | FAN<br>LOW<br>SPEED  |  |
| <b>RL11</b>      | 10A<br>2 Contact<br>GRAY  | CLUTCH<br>COMPRESSOR |  |

| Engine Relay Box |                           |                                |           |
|------------------|---------------------------|--------------------------------|-----------|
| Relay Number     | Details                   | Loads                          | Schematic |
| <b>RL12</b>      | 20A<br>1 Contact<br>BLACK | FAN<br>HIGH<br>SPEED           |           |
| <b>RL13</b>      | 20A<br>2 Contact<br>BLACK | PARALLEL<br>SUPPLIERS<br>RELAY |           |