





QUIK-S (OPTIONAL) KID LOCK & REAR POWER WIN









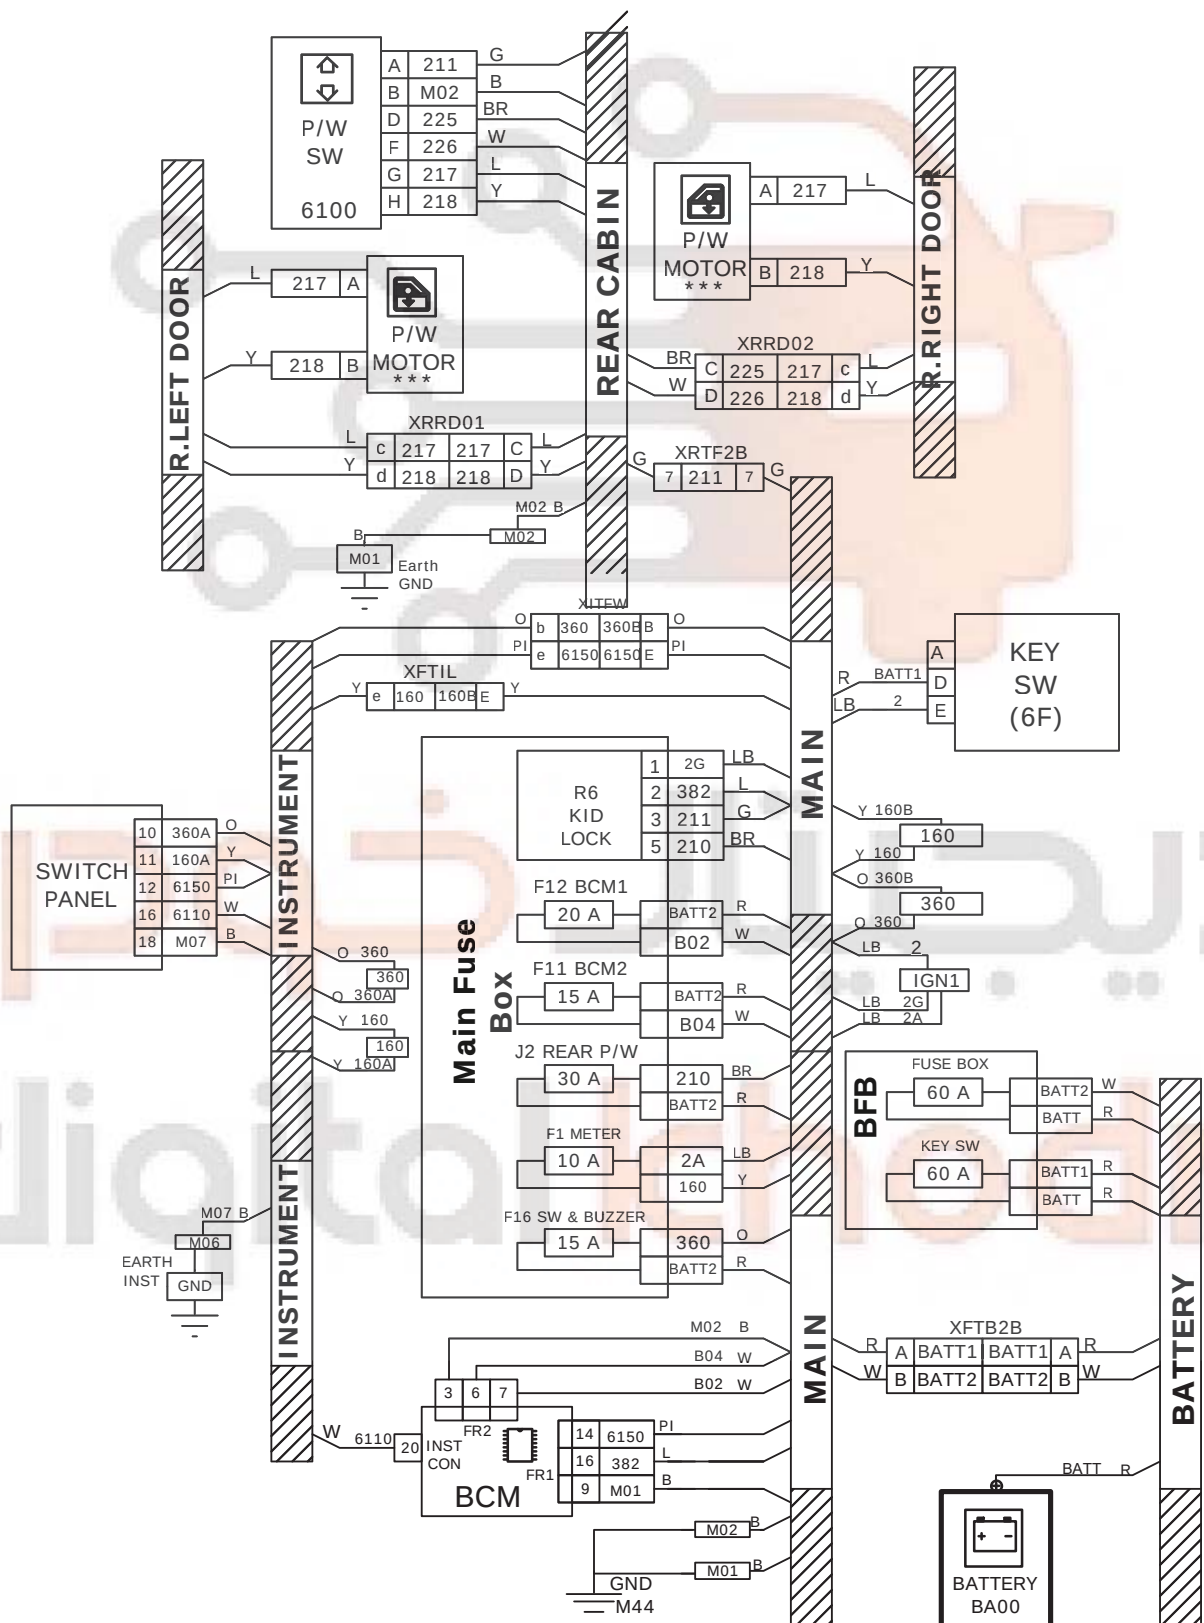



The diagram illustrates the electrical system for the MFB (Main Function Block). It shows the following components and their connections:

- SWITCH PANEL:** Contains terminals 10 (360A), 11 (160A), 16 (6110), 12 (6150), and 18 (M07). It is connected to the MFB and the REAR POWER WIN SW.
- REAR POWER WIN SW (6100):** Contains terminals H, G, F, D, B, and A. It is connected to the MFB and the P/W MOTOR.
- MFB (Main Function Block):** Contains several sub-components:
 - R6 KID LOCK:** Connected to terminals 382, 211, 2, 1, 3, and 5.
 - J2 REAR P/W:** Connected to terminals BR, 210, 30 A, and BATT2 R.
 - F16 SW & BUZZER:** Connected to terminals O, 360, 15 A, and BATT2 R.
 - F1 METER:** Connected to terminals Y, 160, 10 A, and 2A LB.
 - F12 BCM1:** Connected to terminals 20 A, BATT2 R, and B02 W.
 - F11 BCM2:** Connected to terminals 15 A, BATT2 R, and B04 W.
 - BCM (Body Control Module):** Contains terminals 6, 7, 3, 9, 16, 14, M01, 382, and 6150. It is connected to the MFB and the BATT.
 - FUSE BOX (BFB):** Contains terminals 60 A, KEY SW, 20 A, BATT2 W, BATT R, BATT1 R, and BATT R.
- BATTERY (BAT):** Labeled BA00, it is connected to the BATT terminals in the FUSE BOX and the BATT1/BATT2 terminals in the MFB.
- GROUNDING:** The system is grounded to EARTH INST and EARTH GND.

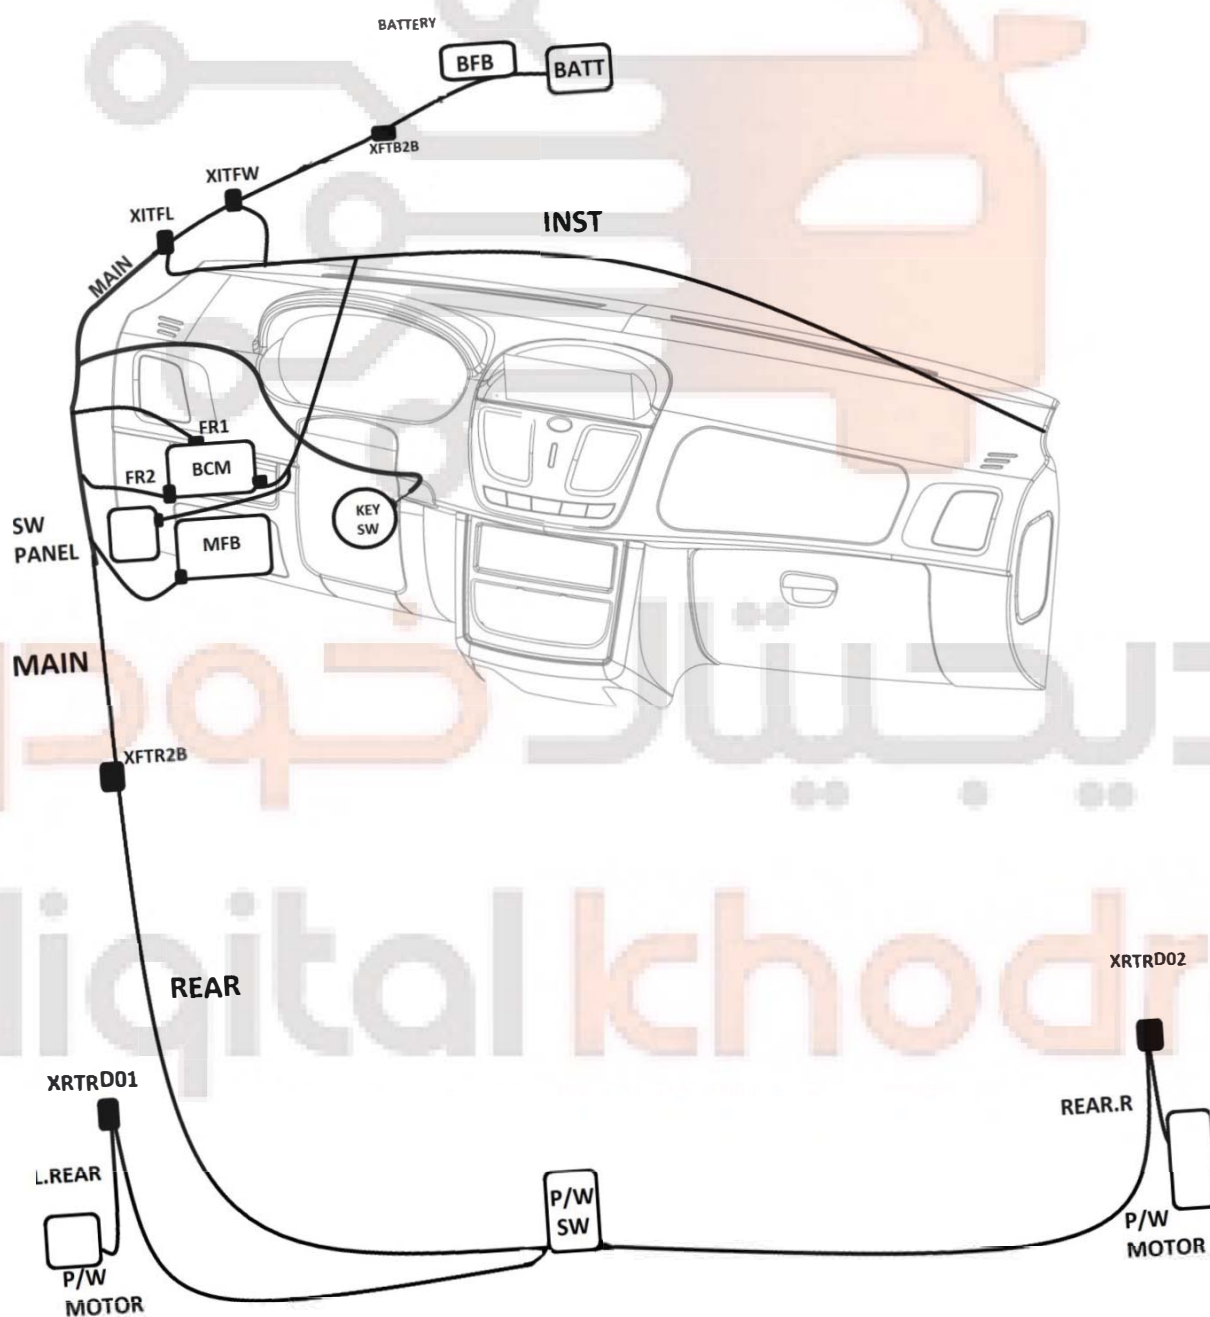

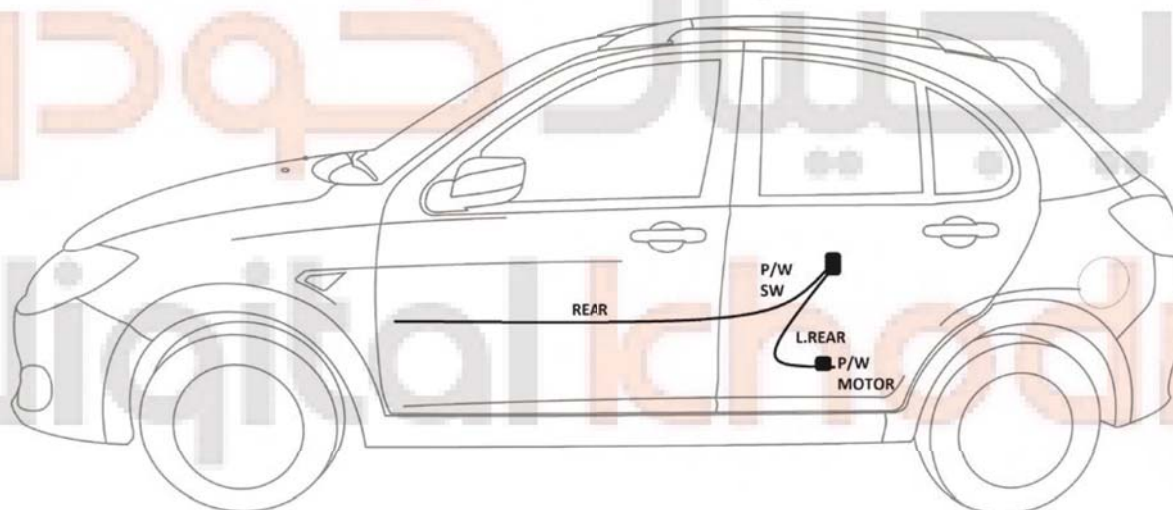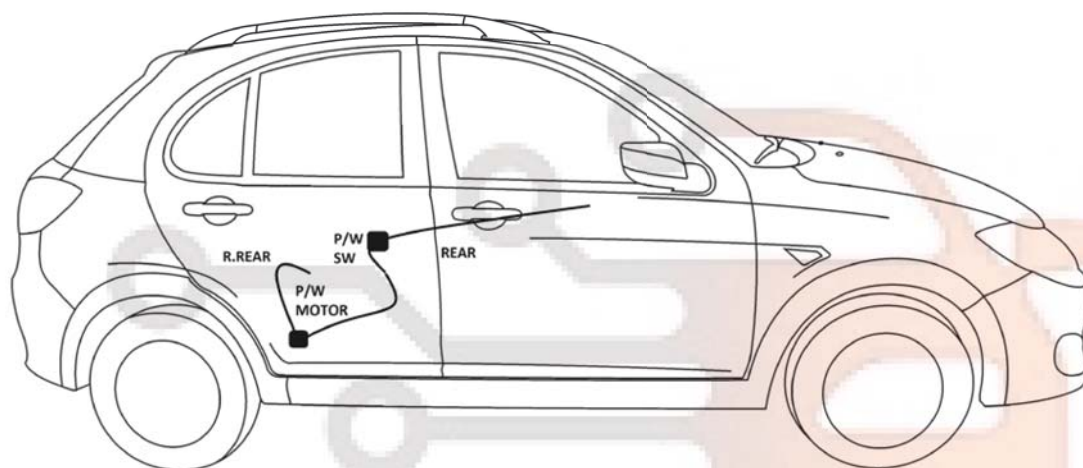

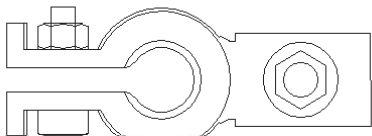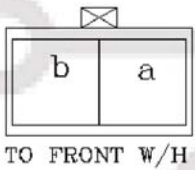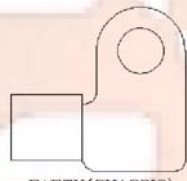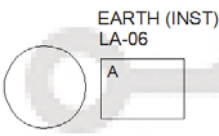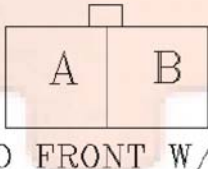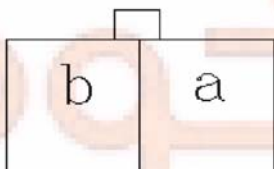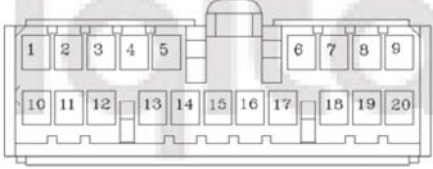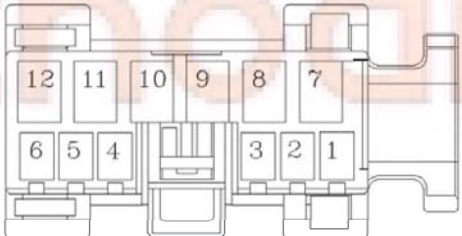
 کانکتور قطب مثبت باطری	 کانکتور قطب منفی باطری
 کانکتور ارتباطی دسته سیم باطری به دسته سیم اصلی 2 XBTF2	 کانکتور اتصال بدنه (شاسی)
 کانکتور اتصال بدنه (شاسی)	 کانکتور ارتباطی دسته سیم باطری به دسته سیم اصلی XBTF2B
 2 کانکتور ارتباط دسته سیم اصلی به دسته سیم باطری XFTB2B	 کانکتور ارتباط دسته سیم اصلی به دسته سیم باطری XFTB2
 FR1 کانکتور بی سی ام BCM FR1	 FR2 کانکتور بی سی ام BCM FR2

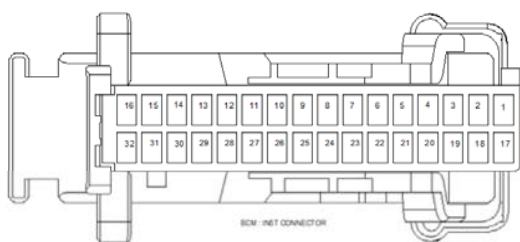


کانکتور بی سی ام
BCM INST




کانکتور ارتباط دسته سیم داشبورد به دسته سیم درب سرنشین
XITPD12

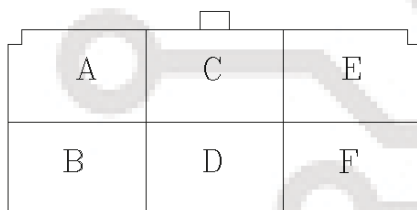


KEY SW.
کانکتور مغزی سوییچ

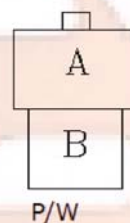

P/W
کانکتور موتور شیشه بالابر

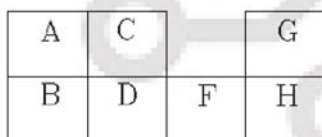

P/W SW
کانکتور کلید شیشه بالابرها (درب راننده)

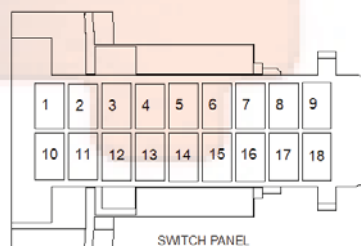


SWITCH PANEL
کانکتور مجموعه سوییچ پنل




TO INST GR
کانکتور ارتباط دسته سیم اصلی به دسته سیم داشبورد
XFTIGR




TO REAR W/H
کانکتور ارتباط دسته سیم اصلی به دسته سیم عقب
XFTR2B

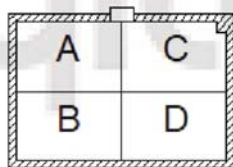

XRTRD
کانکتور ارتباط دسته سیم عقب به دسته سیم درب های عقب
XRTRD

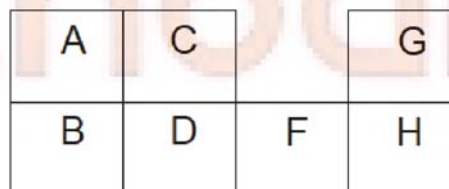

P/W SW.
کانکتور کلید شیشه بالابر عقب

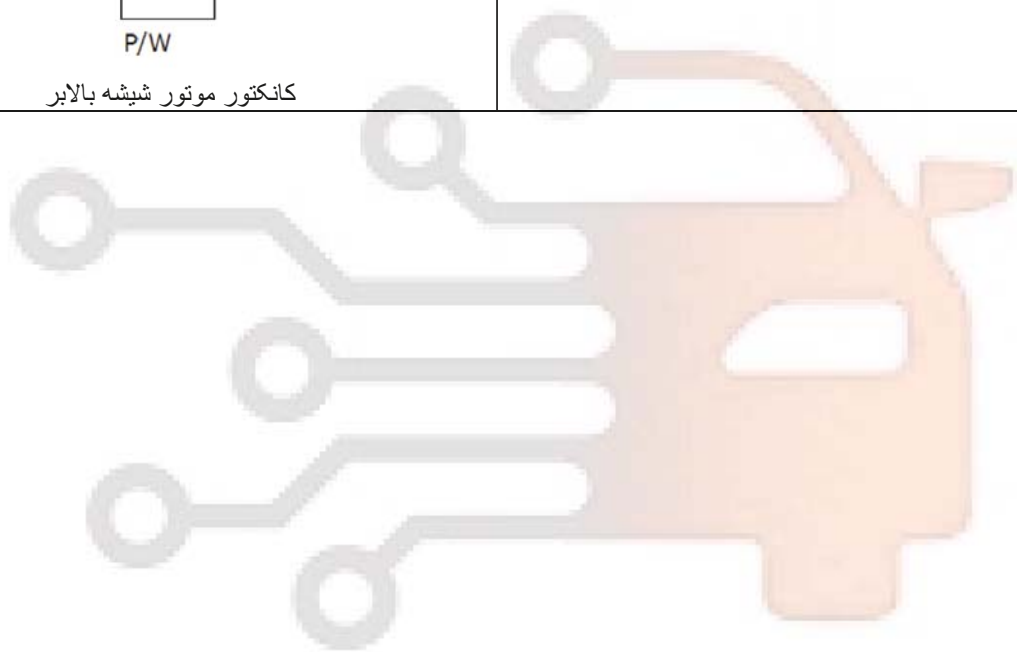

دیجیتال خودرو
digital khodro